


CYLINDER HEAD & CYLINDER BLOCK

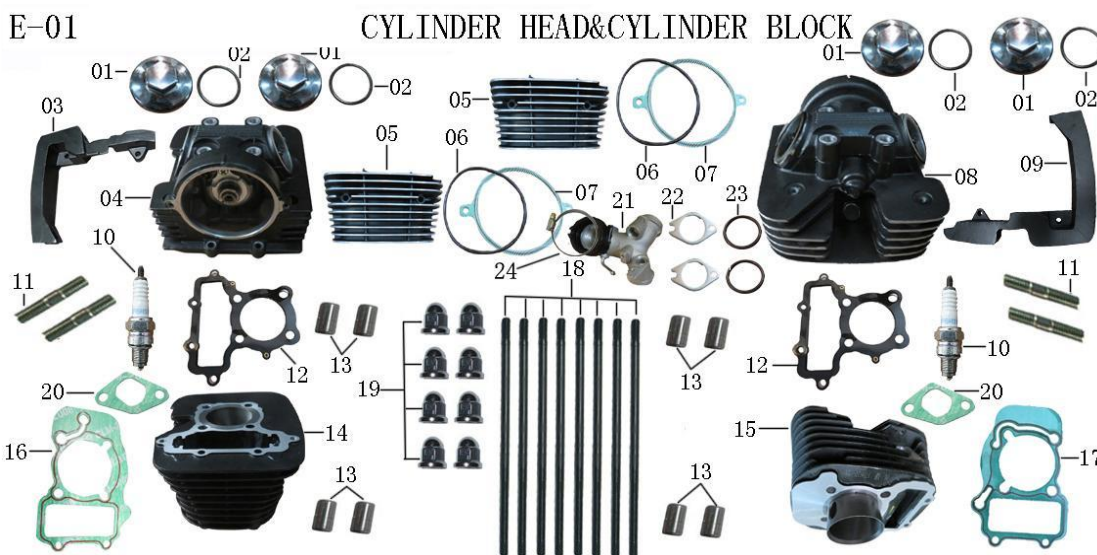


Id	Part Code	Part Name	Qt
E01-01	VMA12243A0M01	Valve Cover	1
E01-02	VMA12246A0A00	Valve Cover O-Ring 44.5x3.1	1
E01-03	VMP12510A0B08	Ornament,Cylinder Head Comp. I	1
E01-04	VMP12210A4B08	Cylinder Head Comp. I	1
E01-05	VMP12242A0B08	Cylinder Head Cover,LH	1
E01-06	VMA12247A2A00	Cylinder Head Cover O-Ring,LH 79x2.9	1
E01-07	VMA12245A1A00	Cylinder Head Cover Gasket, LH	1
E01-08	VMP12230A2B08	Cylinder Head Comp. II	1
E01-09	VMP12520A0B08	Ornament,Cylinder Head Comp. II	1
E01-10	VMA34210A0A00	Spark Plug	1
E01-11	Q1290645F12	Stud M6x42	1
E01-12	VMA12220A1A00	Cylinder Head Gasket	1
E01-13	GIA11118A0A00	Cylinder Head Dowel Pin 10x14	1
E01-14	VMP12110A0B08	Cylinder Block Comp. I	1
E01-15	VMP12150A0B08	Cylinder Block Comp. II	1
E01-16	VMA12121A2A00	Cylinder Block Gasket	1
E01-17	VMA12122A0A00	Cylinder Block Gasket II	1
E01-18	Q983A081815216TF2	Cylinder Bolt M8x216	1
E01-19	BJX12313A0M01	Cap Nut	1
E01-20	VMA14519A1A00	Tensioner Gasket	1
E01-21	VMP17310A8Z50	Inlet Pipe Set	1
E01-22	VMP17312A0N01	Inlet Pipe Flange	1
E01-23	VMP17318A0A00	O-Ring,Inlet Pipe	1
E01-24	Q67650T31	Inlet Pipe Clip	1
E01-25	VMP12381-0001	CYLINDER HEAD COVER 2	1
E01-26	VMP12411-0001	CYLINDER HEAD COVER 3	1
E01-27	VMP12412A-0001	CYLINDER HEAD COVER 4	1
E01-28	VMP12321A3M01	CYLINDER HEAD COVER	1

CYLINDER HEAD BRACKET

E-02

CYLINDER HEAD BRACKET

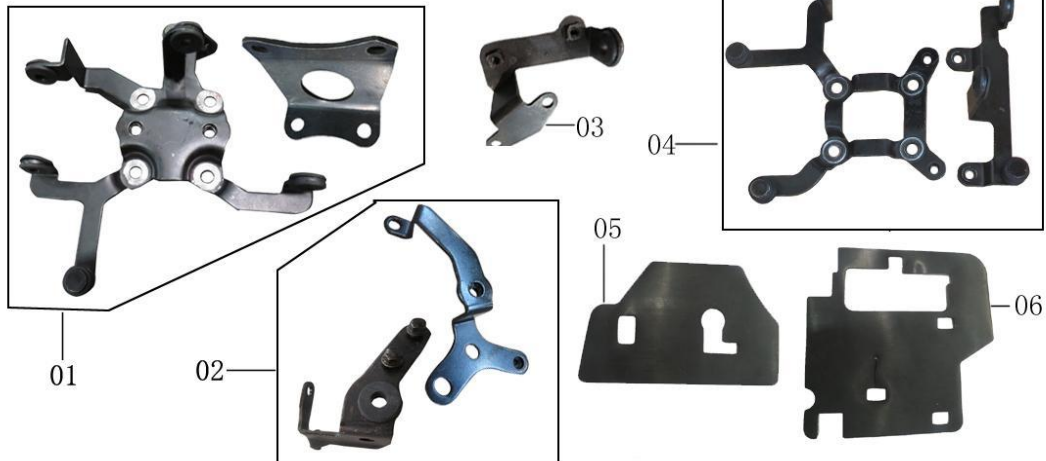


Id	Part Code	Part Name	Qt
E02-01	VMP12420A0N05	Cylinder Head Cover Support Comp.	1
E02-02	VMP12920A0N05	Cylinder Head Bracket LH	1
E02-03	VMP12910A0N05	Cylinder Head Bracket RH	1
E02-04	VMP12440A0N05	Cylinder Head Cover Support Comp. II	1
E02-05	VMP12480A0A00	Cylinder Head Cover Thermal Insulation	1
E02-06	VMP12490A0A00	Cylinder Head Cover Thermal Insulation II	1

VALVE TRAIN

E-03

VALVE TRAIN

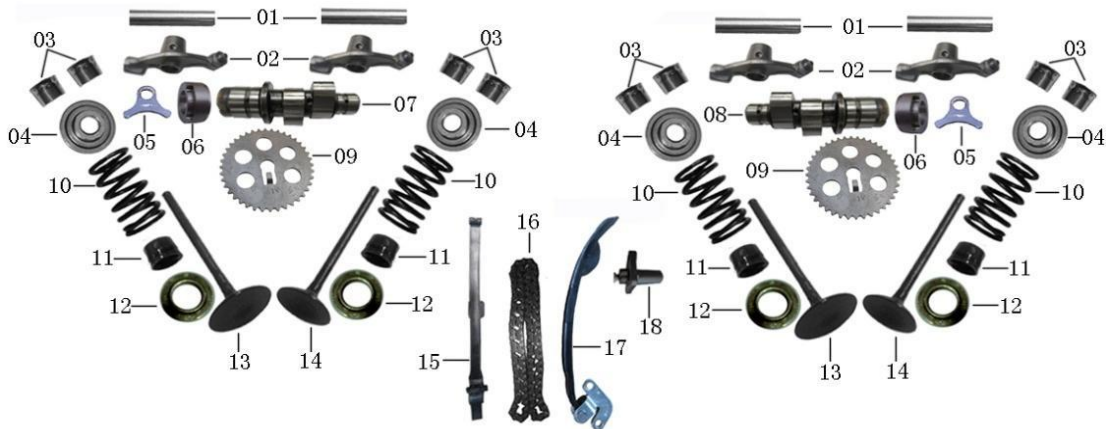

Id	Part Code	Part Name	Qt
E03-01	VMA14413A0A00	Rocker Arm Shaft	1
E03-02	VMA14411A0A00	Valve Rocker Arm	1
E03-03	VMA14752A0A00	Valve Split Cone	1
E03-04	VMA14751A0A00	Valve Spring Upper Seat	1
E03-05	VMA14126A0A00	Camshaft Bush Clamping Plate	1
E03-06	VMA14113A0A00	Camshaft Bush	1
E03-07	VMA14111A0A00	Camshaft	1
E03-08	VMA14121A0A00	Camshaft II	1
E03-09	VMA14321A1A00	Timing Driven Sprocket	1
E03-10	VMA14755A0A00	Valve Outer Spring	1
E03-11	PGA14730A0A00	Valve Stem Oil Seal	1
E03-12	VMA14753A0A00	Valve Outer Spring Seat	1
E03-13	VMA14710A0A00	Intake Valve	1
E03-14	VMA14720A0A00	Exhaust Valve	1
E03-15	VMP14610A0A00	Guide Wheel	1
E03-16	VMA14350A1A00	Timing Chain	1
E03-17	VMP14640A0A00	Tensioning Plate	1
E03-18	VMA14500-0001	Tensioner Assy	1

CRANKSHAFT & PISTON SAAY


E-04

CRANKSHAFT & PISTON ASSY



Id	Part Code	Part Name	Qt
E04-01	VMA13300A0A00	Piston Ring Set	5
E04-02	VMA13211A0A00	Piston	1
E04-03	VMA13222A0A00	Piston Pin Circlip	1
E04-04	VMA13221A0A00	Piston Pin	1
E04-05	VMA13118A0A00	Crankshaft Woodruff Key	1
E04-06	VMA13100A1A00	Crankshaft & Connecting Rod	1
E04-07	VMA13123A0A00	Pin	1
E04-08	VMA14311A0A00	Timing Drive Sprocket	1
E04-09	VMA22621A0A00	Primary Drive Gear	1
E04-10	VMA14315A1A00	Timing Drive Sprocket Hub	1
E04-11	VMA22634A0A00	Starting Shaft Snap Ring II	1
E04-12	VMA22632A0A00	Primary Drive Gear Thrust Washer	1
E04-13	VMA22631A0A00	Primary Drive Gear Locknut	1

OIL PUMP

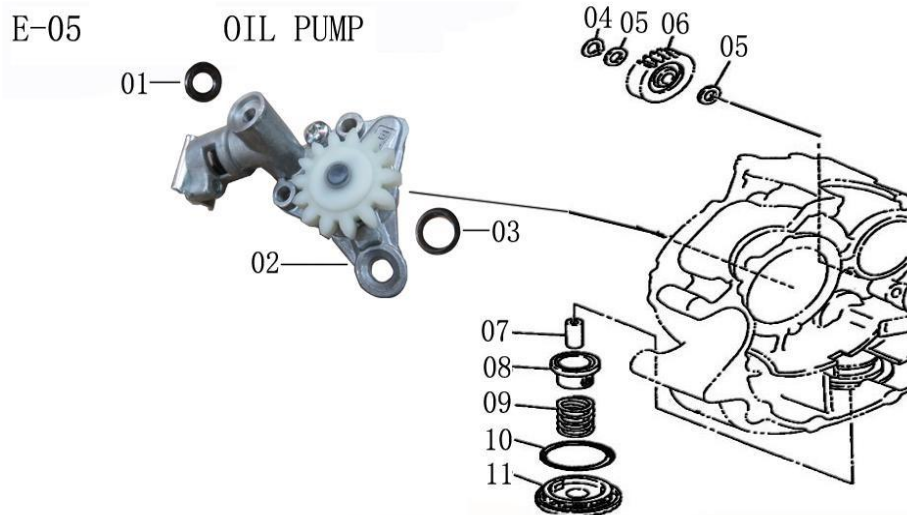

Id	Part Code	Part Name	Qt
E05-01	VIA15133A0A00	Seal 6x3	1
E05-02	VMA15100A0A00	Oil Pump Assy	1
E05-03	BIA15131A0A00	O-ring,oil Pump	1
E05-04	Q43110F92	Circlet 10-Ct O BU	1
E05-05	VMA15212A0A00	Washer 10	1
E05-06	VMA15211A0A00	Oil Pump Driving Gear	1
E05-07	VMA15555A0A00	Pass-By Pipe	1
E05-08	VMA15450A0A00	Oil Filter Screen	1
E05-09	VMA15461A0A00	Oil Filter Screen Spring	1
E05-10	VMA15462A1A00	Oil Filter Screen Cover O-Ring	1
E05-11	VMA15463A0M01	Oil Filter Screen Cover	1

LEFT COVER & MAGNETO

E-06

LEFT COVER & MAGNETO



Id	Part Code	Part Name	Qt
E06-01	VMP31210A5A00	Magneto Stator Comp.	1
E06-02	VMP31102A1A00	Magneto Rotor Comp.	1
E06-03	VMA11412A0M01	View Hole Plug	1
E06-04	BIA11414A1A00	Watch Hole Plug O-Ring	1
E06-05	VMA11410A0M01	Crankcase Cover, LH	1
E06-06	VMA11419-0001	Crankcase Cover Gasket,LH	1
E06-07	VMA12118A0A00	Crankcase Dowel Pin	1
E06-08	VMA11413A0M01	Plug	1
E06-09	VMA11415A2A00	O-Ring 22.7x3.1	1
E06-10	VMA28150A0A00	Starting Clutch Gear Comp.	1
E06-11	VMA31312A0A00	Thrust Washer	1
E06-12	GID31311A1N03	Magneto Locknut	1
E06-13	VMA31911A0A00	Magneto Wire Clamp	1

RIGHT CRANKCASE COVER

E-07

RIGHT CRANKCASE COVER




Id	Part Code	Part Name	Qt
E07-01	VMP22813A0N05	Stay,Clutch Cable	1
E07-02	VMP11311A4M01	Crankcase Cover, RH	1
E07-03	GIA15620A0A00	Sight Glass	1
E07-04	VMA11319-0001	Crankcase Cover Gasket,RH	1
E07-05	VMA15480A0A00	Oil Filter	1
E07-06	GIA11422A2A00	O-Ring 63x3	1
E07-07	VMP15492-0002	Oil Filter Cover	1
E07-08	VMA13190A0A00	Crankshaft Oil Seal,LH	1
E07-09	Q430B26F92	Circlip	1
E07-10	VMA12118A0A00	Crankcase Dowel Pin	1
E07-11	VMA15611A1M01	Dipstick	1
E07-12	BIA15612A2A00	O-Ring 3x18x3.8	1

CRANKCASE

E-08

CRANKCASE

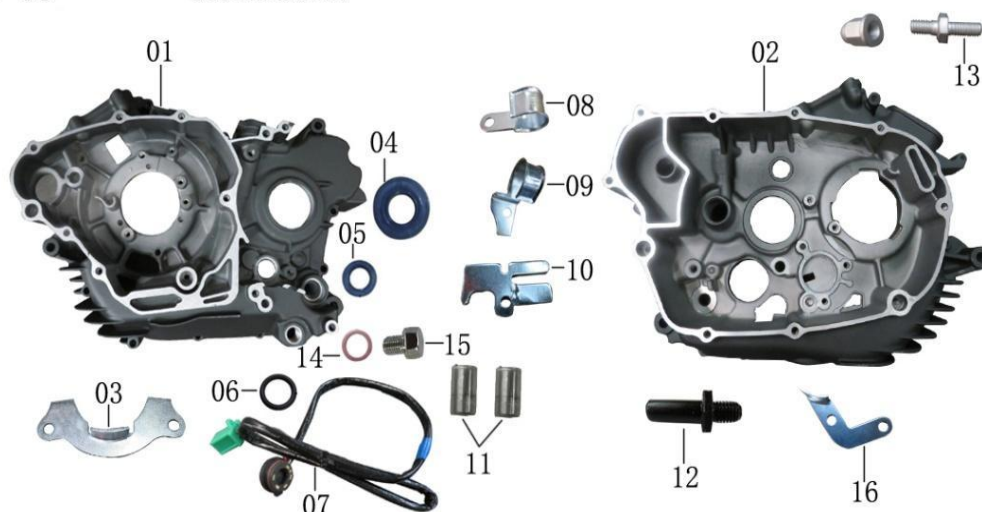


Id	Part Code	Part Name	Qt
E08-01	VMA11210A5B08	Crankcase Comp., LH	1
E08-02	VMA11110A5B08	Crankcase Comp, RH	1
E08-03	VMA14361A1A00	Timing Chain Limiting Plate	1
E08-04	VMA23790A0A00	Countershaft Oil Seal	1
E08-05	VMA22840A0A00	Clutch Lever Oil Seal	1
E08-06	VMP35723A0A00	O-Ring, Gear Indicator	1
E08-07	VMA35710A7A00	Gear Indicator	1
E08-08	VMA34931A0N01	Ignition Coil Wire Clamp	1
E08-09	VMA31933A0N01	Magneto Wire Clamp III	1
E08-10	VMA31932A0N01	Magneto Wire Clamp II	1
E08-11	VMA12118A0A00	Crankcase Dowel Pin	1
E08-12	VMA24131A0Z02	Return Spring Set Screw	1
E08-13	VMA11125A0E18	Right Crankcase Plug	1
E08-14	VMA11213A1A00	Drain Plug Washer	1
E08-15	VMA11212A0E18	Drain Plug	1
E08-16	VMA14367A0N01	Timing Chain Limiting Plate II	1

CLUTCH


E-09

CLUTCH

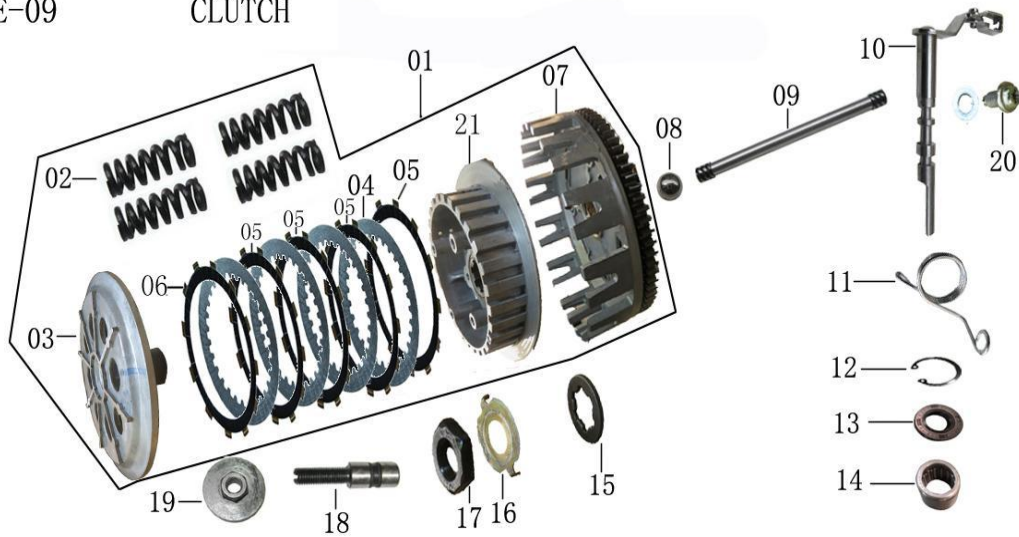

Id	Part Code	Part Name	Qt
E09-01	VMA22100A2A00	Clutch Main Body	1
E09-02	VMA22371A0A00	Clutch Spring	1
E09-03	VMA22351A0A00	Clutch Pressure Plate	1
E09-04	VMA22341A0A00	Driven Plates	1
E09-05	VMA22330A3A00	Drive Plates	1
E09-06	VMA22380A3A00	Drive Plates II	1
E09-07	VMA22110A0A00	Drive Disc Set	1
E09-08	Q9608731	Steel Ball 8.7	1
E09-09	VMA22860A0A00	Clutch Pusher Comp.	1
E09-10	VMA22810A0M01	Clutch Lever Comp.	1
E09-11	VMA22821A0A00	Clutch Lever Spring	1
E09-12	Q430B28F92	Circlip	1
E09-13	VMA22840A0A00	Clutch Lever Oil Seal	1
E09-14	Q9611412Z	Needle Bearing	1
E09-15	VMA22372A0A00	Clutch Spline Washer	1
E09-16	VMA22152A0A00	Washer	1
E09-17	VMA22631A0A00	Primary Drive Gear Locknut	1
E09-18	VMA22851A0A00	Clutch Adjusting Screw	1
E09-19	VMA22871A0A00	Clutch Mandrel	1
E09-20	VMA22825A0A00	Clutch Lever Detent Pin	1
E09-21	VMA22320A0A00	Clutch Driven Disc	1

TRANSMISSION

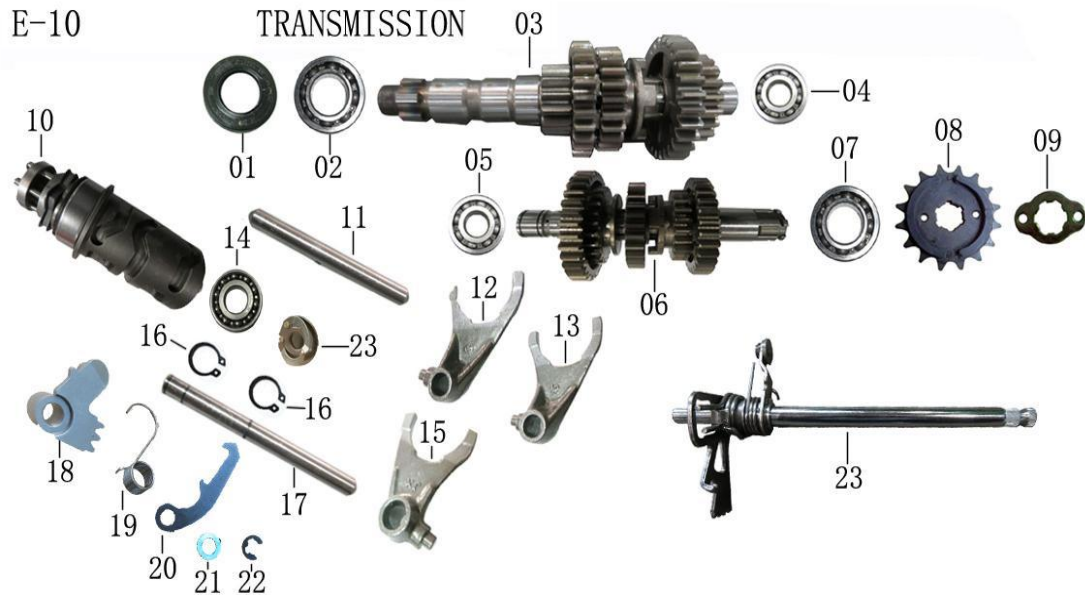

Id	Part Code	Part Name	Qt
E10-01	VMA23690A0A00	Oil Seal 17x28x3.5	1
E10-02	Q9656205F	Bearing 6205P5/FJK	1
E10-03	VMA23600A0A00	Mainshaft Assy	1
E10-04	Q9656003F	Bearing 6003/FJK	1
E10-05	Q9656004F	Bearing 6004/FJK	1
E10-06	VMP23700A0A00	Countershaft Assy	1
E10-07	Q9656305F	Bearing 6305/FJK	1
E10-08	VMA22711A0B01	Output Sprocket	1
E10-09	VMA22712A0N01	Output Sprocket Locating Plate	1
E10-10	VMA24200A1A00	Gearshift Drum Assy	1
E10-11	VMA24421A0A00	Fork Shaft	1
E10-12	VMA24413A0A00	Fork III	1
E10-13	VMA24411A0A00	Fork	1
E10-14	Q965D16001	Bearing 16001-RS	1
E10-15	VMA24412A0A00	Fork II	1
E10-16	Q43110F92	Circlet 10-Ct O BU	1
E10-17	VMA24422A0A00	Fork Shaft II	1
E10-18	VMA24510A0A00	Gearshift Driven Arm	1
E10-19	VMA24122A0A00	Shifter Spring	1
E10-20	VMA24115A0A00	Subsidiary Shifter	1
E10-21	VMA24127A0N01	Washer,Subsidiary Shifter	1
E10-22	VMA24514A0A00	Gearshift Cam Snap Ring	1
E10-23	VMA24100A1M01	Gearshift Shaft Assy	1

STARTING MOTOR

E-11


STARTING MOTOR




Id	Part Code	Part Name	Qt
E11-01	VMA34700A2B08	Starting Motor Assy	1
E11-02	VMA28311A0A00	Dual-Gear	1
E11-03	VMA28321A0A00	twin-Gear Shaft	1

ELECTRIC ELEMENT

E-16 ELECTRIC ELEMENT

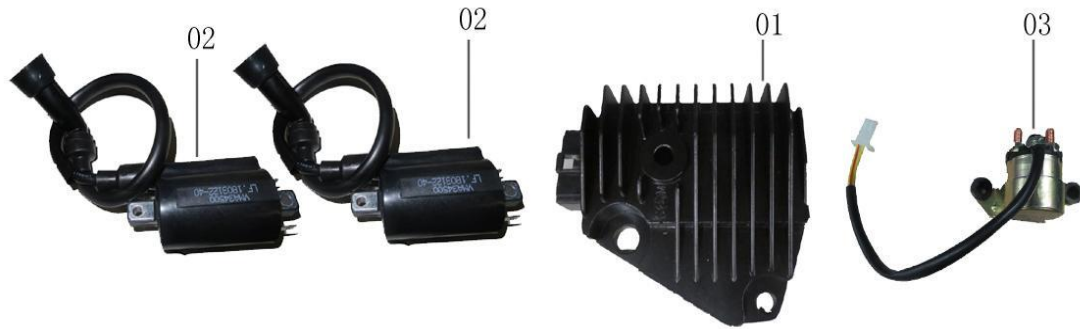

Id	Part Code	Part Name	Qt
E16-01	VMA31600A2A00	Voltage Regulator	1
E16-02	GJM34500A0A00	Ignition Coil	1
E16-03	GIA34600A1A00	Starting Relay	1

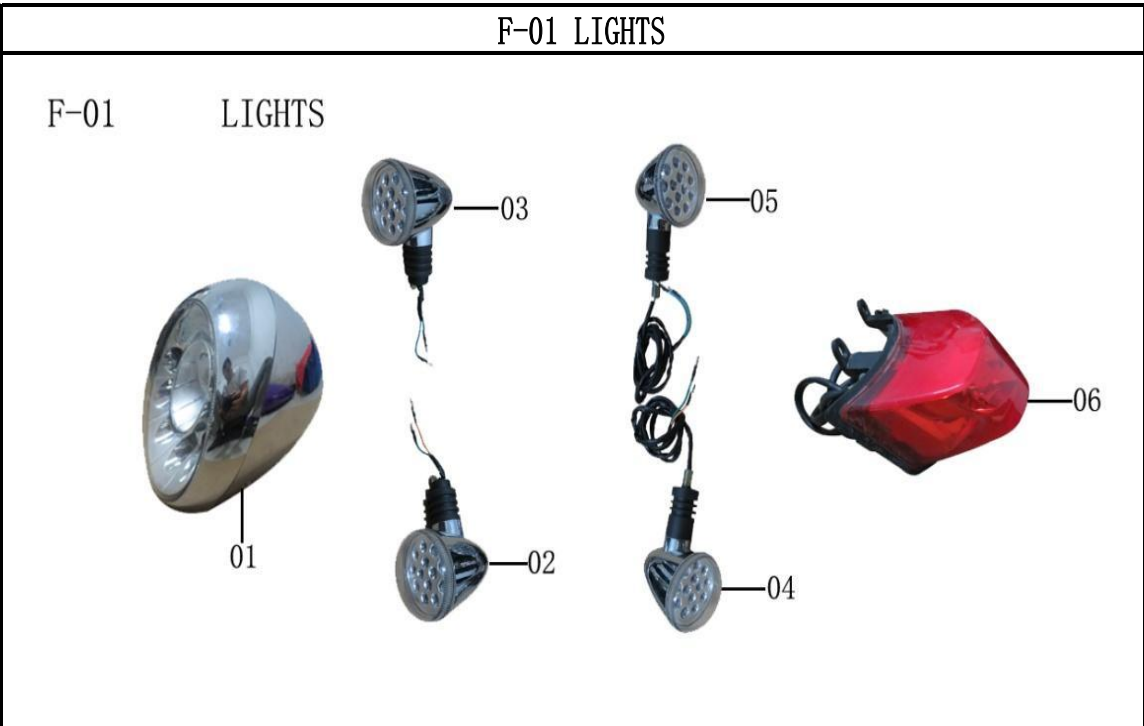


Id	PartNo	Description	Unit
F01-01	ZMD33100A1A00	Headlight Wire	PC
F01-02	ZMD33550A1A00	Front Winker, LH	PC
F01-03	ZMD33510A1A00	Front Winker, RH	PC
F01-04	ZMD33650A1A00	Rear Winker, LH	PC
F01-05	ZMD33610A1A00	Rear Winker, RH	PC
F01-06	ZMD33700A0A00	Taillight Assy	PC

F-02 METER			
F-02		METER	
 01  02  03			
Id	PartNo	Description	Unit
F02-01	ZMD37000A0A00	Meter Assy	PC
F02-02	ZMD37911A0M01	Bracket, meter	PC
F02-03	ZMD43111A0M01	Housing, headlight	PC

F-03 HANDLEBAR SWITCH

F-03 HANDLEBAR SWITCH

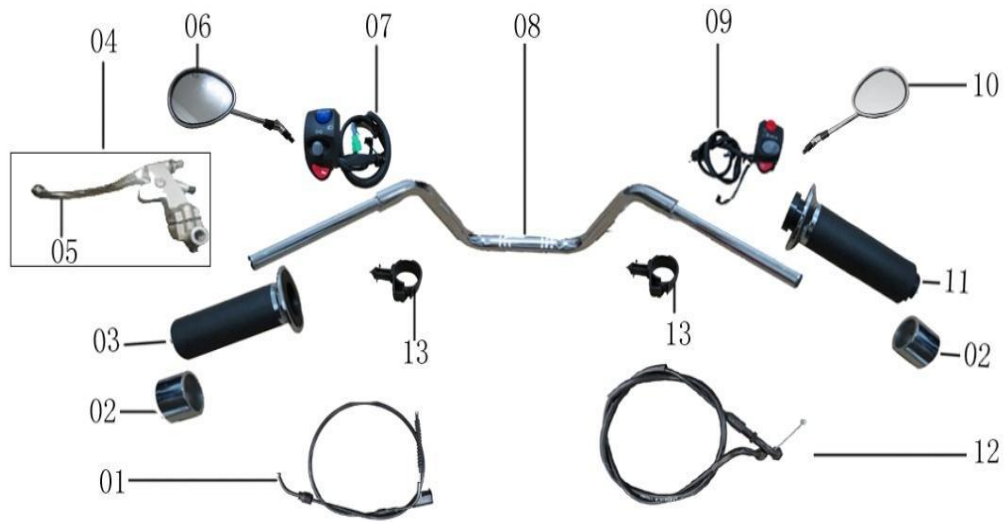

Id	PartNo	Description	Unit
F03-01	ZMD46200A0A00	Clutch Cable	PC
F03-02	ZMD47370A1M01	Steering Bar Weight Set	PC
F03-03	ZMD47411A0A00	Grip Comp., LH	PC
F03-04	ZMD47600A1W01	Clutch Lever Holder Set	PC
F03-05	ZMD47611A0Z51	Clutch Lever	PC
F03-06	ZMD57200A1M01	Left Rearview Mirror	PC
F03-07	ZMD35200A1A00	Handlebar Switch, LH	PC
F03-08	ZMD47110A0M01	Steering Bar Pipe Comp.	PC
F03-09	ZMD35100A1A00	Handlebar Switch, RH	PC
F03-10	ZMD57100A1M01	Right Rearview Mirror	PC
F03-11	ZMD47300A0A00	Throttle Grip Comp.	PC
F03-12	ZMD46310A0A00	Throttle Cable	PC

F-04 STEERING STEM			
F-04 STEERING STEM			
Id	PartNo	Description	Unit
F04-01	ULU51950A0A00	Steel Ball	PC
F04-02	ZMD51960A0A00	Bearing Set, lower, steering	PC
F04-03	ULU51950A0A01	Steering Stem Bearing Set	PC
F04-04	ULU61960A0A02	Lug, speed sensor	PC
F04-05	ZMD33921A0M01	Stay, headlight	PC
F04-06	ZMD33932A0M01	Plate, headlight stay	PC
F04-07	ZMD33937A0A00	Clamp II	PC
F04-08	ZMD33937A0A00	Clamp	PC
F04-09	ZMD51210A0W01	Steering Stem Assy	SET
F04-10	ZMD51310A0W01	Top Steering Stem Connection Board	PC
F04-11	ZMD47151A0W01	Holder Cap	PC
F04-12	ZMD47120A0W01	Steering Bar Holder	PC
F04-13	ZMA47186A0M01	Steering Bar Pipe Holder Ornamnent	PC

F-05 FRONT FENDER & SHOCK ABSORBER

F-05

FRONT FENDER & SHOCK ABSORBER



Id	PartNo	Description	Unit
F05-01	ZMD53111A0W17	Front Fender	PC
F05-02	ZMD52611A0M01	Guide Sleeve, upper, front shock absorber	PC
F05-03	ZMD52500A0W01	Front Shock Absorber, LH	PC
F05-04	ZMD52400A0W01	Front Shock Absorber, RH	PC
F05-05	ZJY52612A0A00	Rubber, upper guide tube top	PC
F05-06	ZJY52613A0A00	Rubber, lower, upper guide	PC
F05-07	ZMD52650A0M01	Guide Sleeve Set, lower, front shock absorber LH	PC
F05-08	ZMD52620A0M01	Guide Sleeve Set, lower, front shock absorber RH	PC
F05-09	ZMD52021A0D01	Dust Cover	PC
F05-10	ZMD52437A0A00	Front Shock Absorber Oil Seal	PC
F05-11	ZMD56770A0B14	Stay set II, front brake hose	PC
F05-12	ZMD62100A0M01	Rear Shock Absorber Assy	PC

F-06 GUARD & SIDE COVER

F-6

GUARD & SIDE COVER




Id	PartNo	Description	Unit
F06-01	ZMD43461A0A00	Guard, LH	PC
F06-02	ZMD43361A0A00	Guard, RH	PC
F06-03	QLP33810A0A00	Reflector, side	PC
F06-04	ZMD43310A1W17	Cover, side, RH	PC
F06-05	ZMD43410A1W17	Cover, side, LH	PC
F06-06	ZMD43572	Support, ornament, engine LH	PC
F06-07	ZMD43932A0B14	Seat, side cover lock	PC
F06-08	ZMD43571A0M01	Ornament, engine, LH	PC
F06-09	ZMD65120A0A00	Cover set, rear brake	PC
F06-10	ZMD43333A0A00	Guard, lower	PC
F06-11	ZMD56451A0A00	Oil Sight Glass, brake reservoir	PC
F06-12	ZMD43681A0A00	Trunk, mid	PC
F06-13	ZMD43612A0A00	Cover, tool box	PC
F06-14	ZMD43611A0A00	Box, tool	PC
F06-15	ZMD43580A0M01	Ornamental Cover, RH	PC

F-07 FRONT HYDRAULIC BARKE ASSY

F-07

FRONT HYDRAULIC BRAKE ASSY

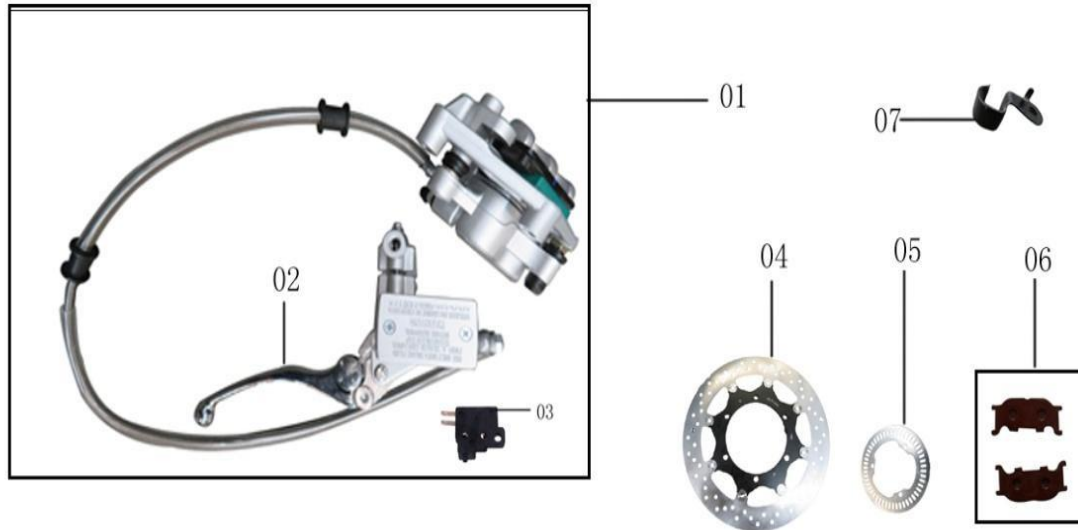

Id	PartNo	Description	Unit
F07-01	ZMD56010A1A00	Front Hydraulic Brake Assy	PC
F07-02	ZMD47511A0Z51	Front Brake Lever	PC
F07-03	XXXXXXXXXXXXXX	Front Brake Switch	PC
F07-04	ZMD56310A0B01	Front Brake Disc	PC
F07-05	ZMD54216A0N01	Ring Gear, front	PC
F07-06	ZMD56520A1A00	Front Brake Pad	PC
F07-07	ZMD56762A0B14	Circlip, Hose	PC

F-08 FUEL TANK			
F-08 FUEL TANK 			
Id	PartNo	Description	Unit
F08-01	ZMB16951A2A00	Fuel Tank Front Cushion	PC
F08-02	ZMD16610A1W17	Fuel Tank Weldment	PC
F08-03	ZMD37810A0A00	Sensor, fuel	PC
F08-04	TY039520A1A00	Pump, oil	PC
F08-05	XXXXXXXXXXXXX	Stay, rear fuel tank	PC
F08-06	XXXXXXXXXXXXX	Pressing Plate, rear fuel tank	PC
F08-07	ZMD16996A0A00	Grommet, upper, rear fuel tank	PC
F08-08	ZMD39614A0A00	Fuel Rail	PC
F08-09	ZMD39614A0A00	Fuel Rail	PC
F08-10	ZMD16750A0A00	Pipe Tee Comp., hose	PC
F08-11	ZMD16995A0A00	Fuel Tank Rear Cushion	PC
F08-12	ZMD59115A2M01	LOGO	PC

F-09 FRONT WHEEL ASSY

F-09 FRONT WHEEL ASSY



Id	PartNo	Description	Unit
F09-01	ZMD54700A1A00	Tyre, front	PC
F09-02	ZMD54100A0B01	Hub comp., front wheel	PC
F09-03	ZMD54911A0W01	Axle, front	PC
F09-04	ZMD54912A0N05	Bush, front wheel, RH	PC
F09-05	ZMD37870A0A00	Sensor, speed	PC

F-10 REAR WHEEL

F-10 REAR WHEEL



Id	PartNo	Description	Unit
F10-01	ZMD66311A0A00	Disc, rear brake	PC
F10-02	ZMD64253A0A00	Buffer, rear wheel	PC
F10-03	ZMD64700A0A00	Tyre, rear	PC
F10-04	ZMD64100A0B01	Hub, rear wheel	PC
F10-05	ZMD54216A0N01	Ring Gear, front	PC
F10-06	ZMD64913A0N05	Rear Wheel Bush, LH	PC
F10-07	ZMD64911A0N05	Axle, rear	PC
F10-08	ZMD64912A0N05	Rear Wheel Bush, RH	PC
F10-09	Q330B14F15	Nut	PC
F10-10	ZMA68511A0W01	Hub Assy, sprocket	PC
F10-11	ZMA68521A0N01	Sprocket	PC
F10-12		Bearing 6302-2RS	
F10-13		Seal 28x42x7	


F-11 SEAT			
F-11 SEAT 01  02  03  04  05  06  07  08 			
Id	PartNo	Description	Unit
F11-01	QLP33820A0A00	Rear Reflector	PC
F11-02	XXXXXXXXXXXXXX	Stay, rear reflector	PC
F11-03	ZMD44340A0B14	Plate set, pillion front connecting	PC
F11-04	ZMD44300A0A00	Passenger Seat Assy	PC
F11-05	XXXXXXXXXXXXXX	Bush,	SET
F11-06	ZMD44922A0A00	Rubber, seat rear connecting plate	PC
F11-07	ZMD44921A0B14	Plate, pillion rear connecting	PC
F11-08	ZMD44100A0A00	Seat Assy	PC

F-12 REAR FENDER			
F-12 REAR FENDER			
Id	PartNo	Description	Unit
F12-01	ZMD43591AOM01	Ornament, rear, LH	PC
F12-02	ZMD63111AOW17	Fender, rear	PC
F12-03	ZMD43581AOM01	Ornament, rear, RH	PC
F12-04	ZMD63151AOW17	Tail, rear fender	PC
F12-05	ZMD63794A0A00	Cushion, rear license plate	PC
F12-06	ZJX63711A0B14	Rear License Brackekt Comp.	PC
F12-07	ZMD63910A0B14	Bracket set, rear fender rear body	PC

F-13 REAR BRAKE

F-13

REAR BRAKE

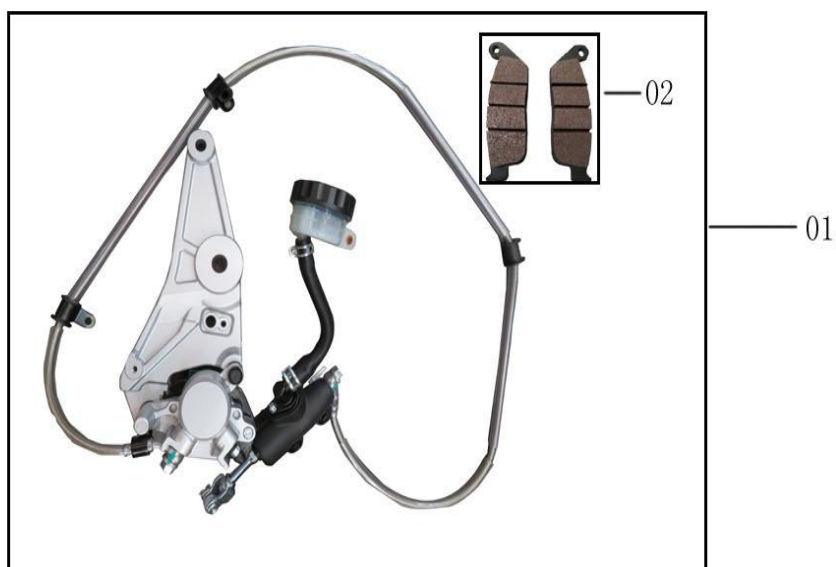

Id	PartNo	Description	Unit
F13-01	ZMD66010A0A00	Rear Hydraulic Disc Brake	PC
F13-02	ZMD66520A1A00	Rear Brake Shoe Set	PC


F-14 FOOTREST			
F-14	FOOTREST		
Id	PartNo	Description	Unit
F14-01	ZMD42300A0W01	Footrest Assy, rider, RH	PC
F14-02	XXXXXXXXXXXXXX	Rubber	PC
F14-03	XXXXXXXXXXXXXX	Bush	PC
F14-04	ZMD42400A0W01	Footrest Assy, rider, LH	PC
F14-05	ZMD42930A0B14	Bracket Comp., rider footrest RH	PC
F14-06	ZMD42940A1B14	Bracket Comp., rider footrest LH	PC
F14-07	ZMD65410A0W01	Pedal, rear brake	PC
F14-08	XXXXXXXXXXXXXX	Bracket, rear pedal	PC
F14-09	XXXXXXXXXXXXXX	Rear Brake Pedal Arm Set	PC
F14-10	XXXXXXXXXXXXXX	Bracket, rider footrest LH	PC
F14-11	ZMD24700A0B16	Lever, gearshift	PC
F14-12	ZMD42500A0W01	Footrest Assy, pillion, RH	PC
F14-13	ZMD42600A0W01	Footrest Assy, pillion, LH	PC
F14-14	XXXXXXXXXXXXXX	Bracket, rider footrest RH	PC

F-15 REAE FORK			
F-15 REAE FORK			
Id	PartNo	Description	Unit
F15-01	ZMD61951A0N05	Shaft, rear fork	PC
F15-02	ZMD61240A0N05	Dust cover, rear fork shaft	PC
F15-03	ZMD61101A0B14	Fork comp., rear	PC
F15-04	ZMD61491A0A00	Guide, chain	PC
F15-05	Q980530116C	Chain530×116	PC
F15-06	UMX61400A0N04	Adjuster set, chain	PC
F15-07	QMA61422A0B01	Stopper set, chain adjuster	PC
F15-08	ZMD61310A0M01	Chaincase	PC
F15-09	ZMD61911A0A00	inner sleeve	PC
F15-10	ZMD93840A0A00	needle bearing	PC

F-16 AIR CLEANER ASSY

F-16

AIR CLEANER ASSY

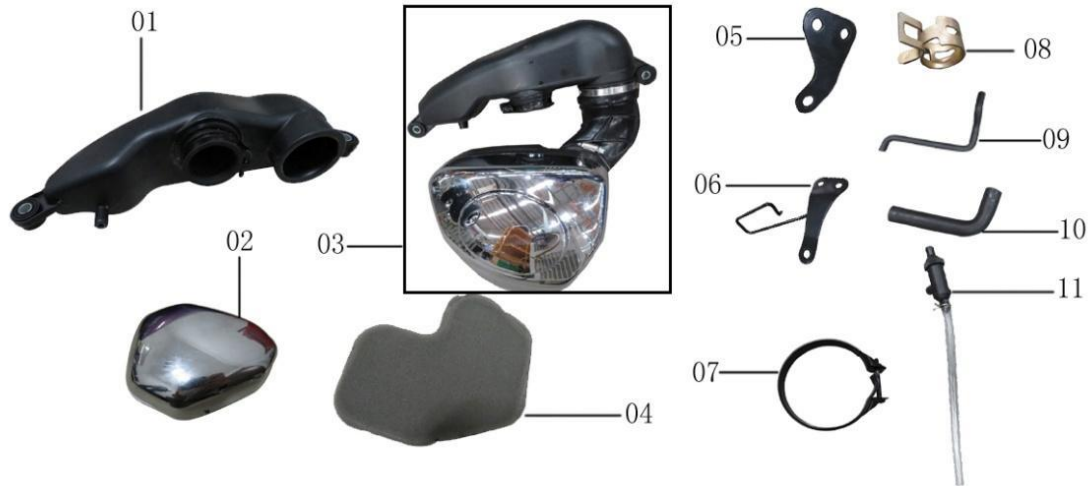


Id	PartNo	Description	Unit
F16-01	XXXXXXXXXXXXXX	Chamber comp., air cleaner	PC
F16-02	ZMD17181AOM01	Air cleaner cover	PC
F16-03	ZMD17100A0A00	Air cleaner	PC
F16-04	ZMD17120A0A00	Element, air cleaner	PC
F16-05	ZMD17911A0B14	Plate, air cleaner connecting	PC
F16-06	XXXXXXXXXXXXXX	Bracket, air cleaner element	PC
F16-07	XXXXXXXXXXXXXX	Air Cleaner Clamp	PC
F16-08	XXXXXXXXXXXXXX	Clamp	PC
F16-09	ZMD20181A0A00	Crankcase	PC
F16-10	ZMD20152A0A00	Crankcase Waste Pipe	PC
F16-11	XXXXXXXXXXXXXX	Separator, oil/gas	PC

F-17 FRAME BODY			
F-17 FRAME BODY			
Id	PartNo	Description	Unit
F17-01	ZMD48000A0A00	Lock Assy	PC
F17-02	ZMD41100A0B15	Body weldment, frame	PC
F17-03	ZMD42711A0B14	Plate, engine front connecting	PC
F17-04	ZMD42750A0B14	Plate comp., engine rear top connecting	PC
F17-05	ZMD42754A0B14	Plate II, rear top connecting	PC
F17-06	ZMD42200A1A00	Stand, side	PC
F17-07	ZMD42926A0B14	Side Stand Spring Latch	PC
F17-08	ZMD42922A0N05	Spring, side stand	PC
F17-09	XXXXXXXXXXXXXX	Rubber, Center Stand, side	PC
F17-10	TY096100A1A00	Tool kit	PC

F-18 EXHAUST MUFFLER ASSY

--

--

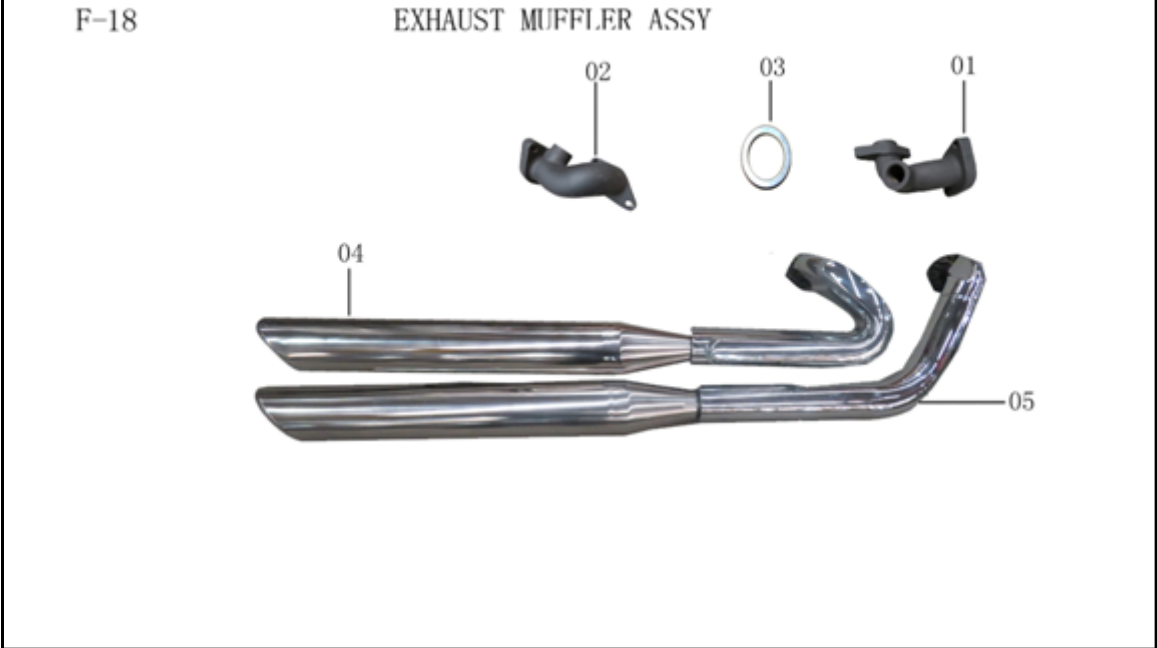[illegible]

F-19 ELECTRICAL ELEMENTS

F-19 ELECTRICAL ELEMENTS



Id	PartNo	Description	Unit
F19-01	ZMA31500A0A00	Battery	PC
F19-02	ZMD32100A1A00	Cable, main	PC
F19-03	NIX38100A1B01	Horn	PC
F19-04	DTX38210A0A00	Relay, flashing	PC
F19-05	JJJ38280A0A00	EFI Relay	PC
F19-06	ZMD35330A0A00	Rear Brake Switch	PC
F19-07	ZMD35913A0N05	Spring,Rear Brake Switch	PC
F19-08	XXXXXXXXXXXXXX	Fus Comp.	PC

F-20 FUEL EVAPORATING SYSTEM			
F-20		FUEL EVAPORATING SYSTEM	
			
Id	PartNo	Description	Unit
F20-01	ZMD20300A0A00	Fuel Evaporating System	SET

F-21 ELECTRONIC FUEL INJECTION SYSTEM			
F-21		ELECTRONIC FUEL INJECTION SYSTEM	
			
Id	PartNo	Description	Unit
F21-01	VMP39330A1A00	Sensor, intake air pressure	PC
F21-02	VMP39100A1A00	Efi controller (ECU)	PC
F21-03	VMP39360A0A00	Water temperature sensor	PC
F21-04	VMP39650A1A00	Injector	SET
F21-05	VMP39310A0A00	Oxygen sensor	PC
F21-07	VMP39601A0A00	Throttle body	PC