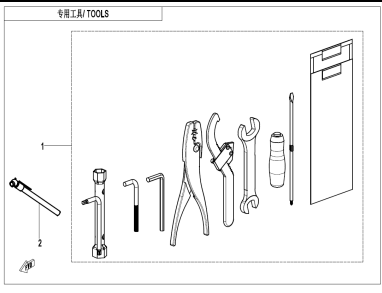
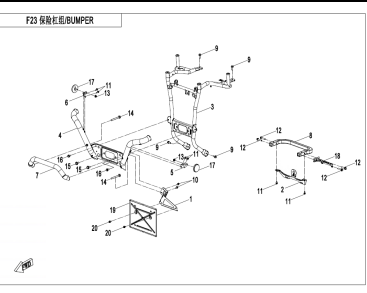
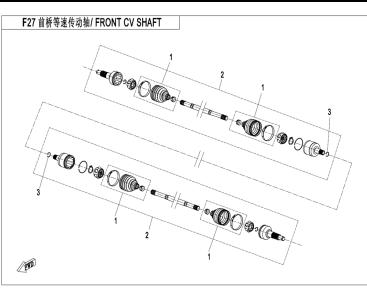
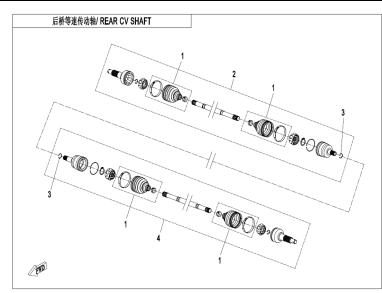
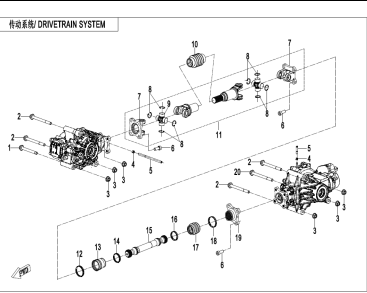
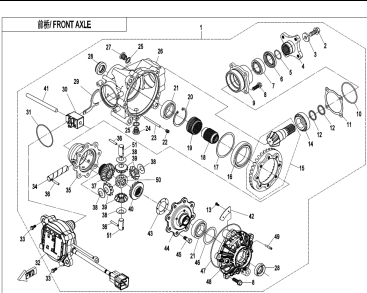
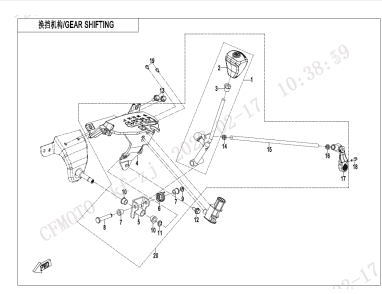
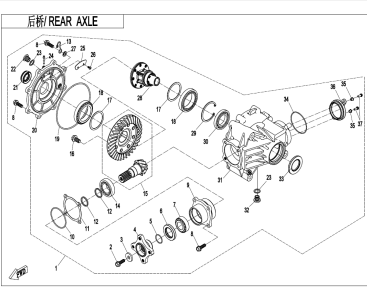
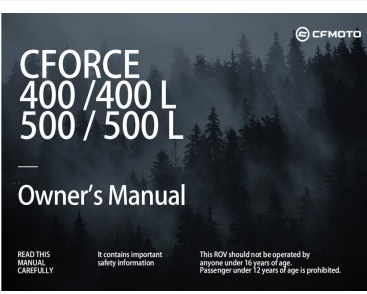
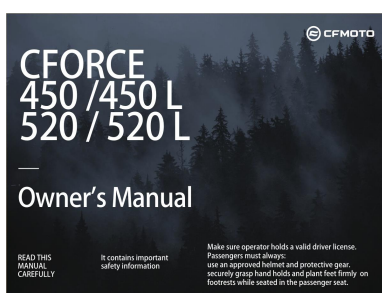
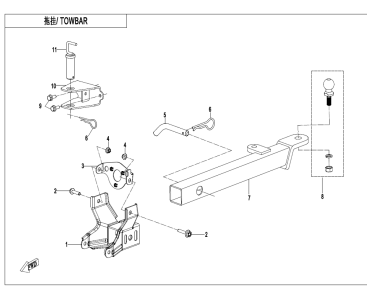
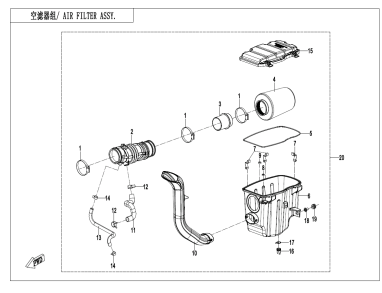
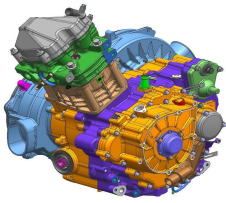
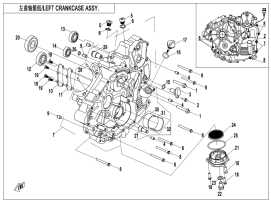
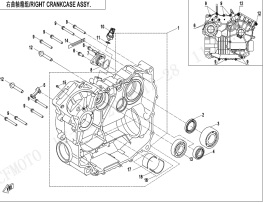
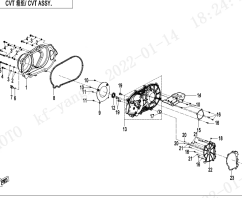
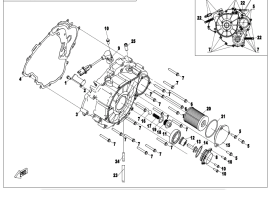
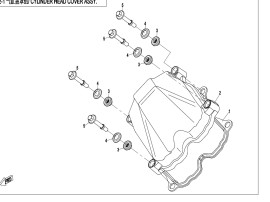
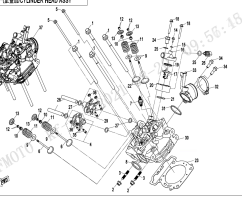
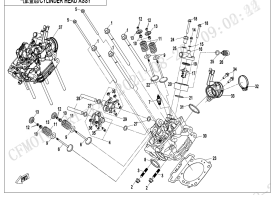
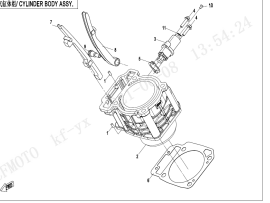
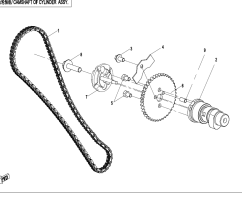
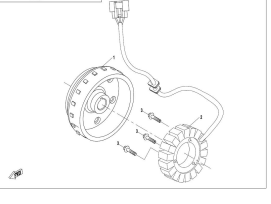
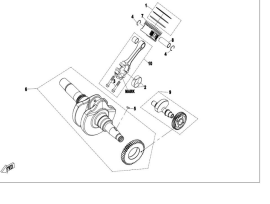
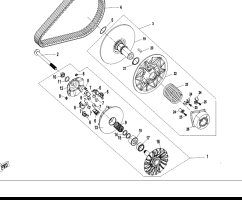
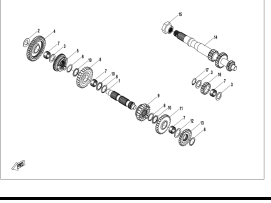
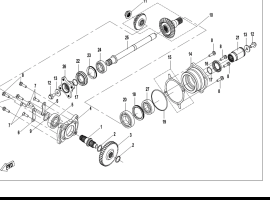
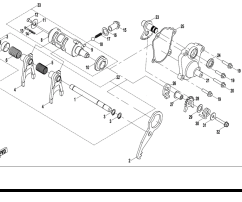
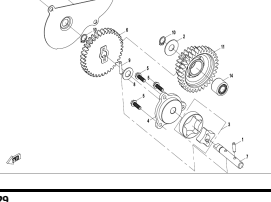
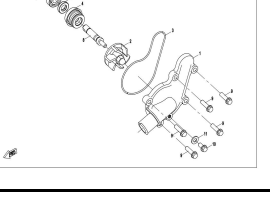
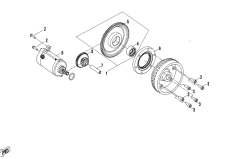
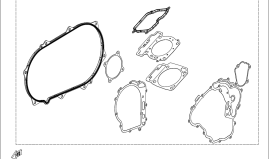
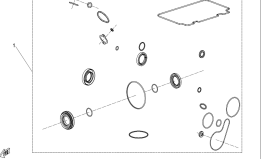


CONTENTS—FRAME GROUP		
F00-1 ENGINE MOUNTING PARTS 	F00-2 CVT AIR PIPE 	F01 LOCK KIT(WITHOUT GEARSHIFT LOCK)
F02-A MUFFLER(INTERNATIONAL) 	F02-B MUFFLER(EPA) 	F03 FRAME
F04-1 FRONT PLASTICS 	F04-2 FRONT PLASTICS 	F04-3 MIDDLE PLASTICS
F04-4 MIDDLE PLASTICS 	F04-5 REAR PLASTICS 	F04-6 BOTTOM PLASTICS
F05 FRONT SUSPENSION 	F06 REAR SUSPENSION 	F07-A FRONT WHEEL(ALUMINUM)
F07-B FRONT WHEEL(STEEL) 	F08-V1 BRAKE SYSTEM 	F08-V2 BRAKE SYSTEM
F10-1 HANDLEBAR 	F10-2-A STEERING SYSTEM 	F10-2-B STEERING SYSTEM(EPS)


CONTENTS—FRAME GROUP		
F10-3 HAND GUARD 	F11-A REAR WHEEL(ALUMINUM) 	F11-B REAR WHEEL((STEEL))
F12 FUEL TANK 	F13 SEAT 	F14 RACK
F15-1 ELECTRIC SYSTEM 	F15-2 TOWING WINCH 	F15-3 FUEL INJECTION SYSTEM
F16 LIGHTS 	F17 DASHBOARD 	F18 COOLING SYSTEM
F19-1-A DECAL KITS 	F19-1-B DECAL KITS 	F19-1-C DECAL KITS
F19-1-D DECAL KITS 	F19-1-E DECAL KITS 	F19-1-F DECAL KITS
F19-2-A WARNING DECAL 	F19-2-B WARNING DECAL 	F19-2-C WARNING DECAL(RUSSIA)

CONTENTS—FRAME GROUP

F20 TOOLS 	F23 BUMPER 	F27 FRONT CV SHAFT 
F28 REAR CV SHAFT 	F30 DRIVETRAIN SYSTEM 	F31 FRONT AXLE 
F32 GEAR SHIFTING 	F33 REAR AXLE(WITHOUT DIFFERENTIAL) 	F38-A OWNER\`S MANUAL(CA&INTERNATIONAL) 
F38-B OWNER\`S MANUAL(INTERNATIONAL) 	F38-C OWNER\`S MANUAL (RUSSIAN) 	F40 TOWBAR 
F41-V1 AIR FILTER ASSY 		


CONTENTS-ENGINE GROUP		
E00 191Q ENGINE 	E01-1 LEFT CRANKCASE ASSY 	E01-2 RIGHT CRANKCASE ASSY 
E01-3 CVT CASE ASSY. 	E01-4 LEFT CRANKCASE COVER ASSY 	E02-1 CYLINDER HEAD COVER ASSY 
E02-2-A CYLINDER HEAD ASSY 	E02-2-B CYLINDER HEAD ASSY 	E02-3 CYLINDER BODY ASSY. 
E02-4 CAMSHAFT OF CYLINDER ASSY 	E03 MAGNETO STATOR ASSY 	E04 CRANKSHAFT & CONNECTING ROD & PISTON ASSY. 
E05 CLUTCH & CVT ASSY. (18g WEIGHT ROLLER) 	E06-1 TRANSMISSION SYSTEM(1) 	E06-2 TRANSMISSION SYSTEM(2) 
E06-3 TRANSMISSION SYSTEM(3) 	E07 OIL PUMP ASSY 	E08 WATER PUMP ASSY 
E09 STATERING SYSTEM 	E29 ENGINE GASKET KIT 	E30 ENGINE OIL SEAL & O-RING 

发动机装配组合/ ENGINE MOUNTING PARTS

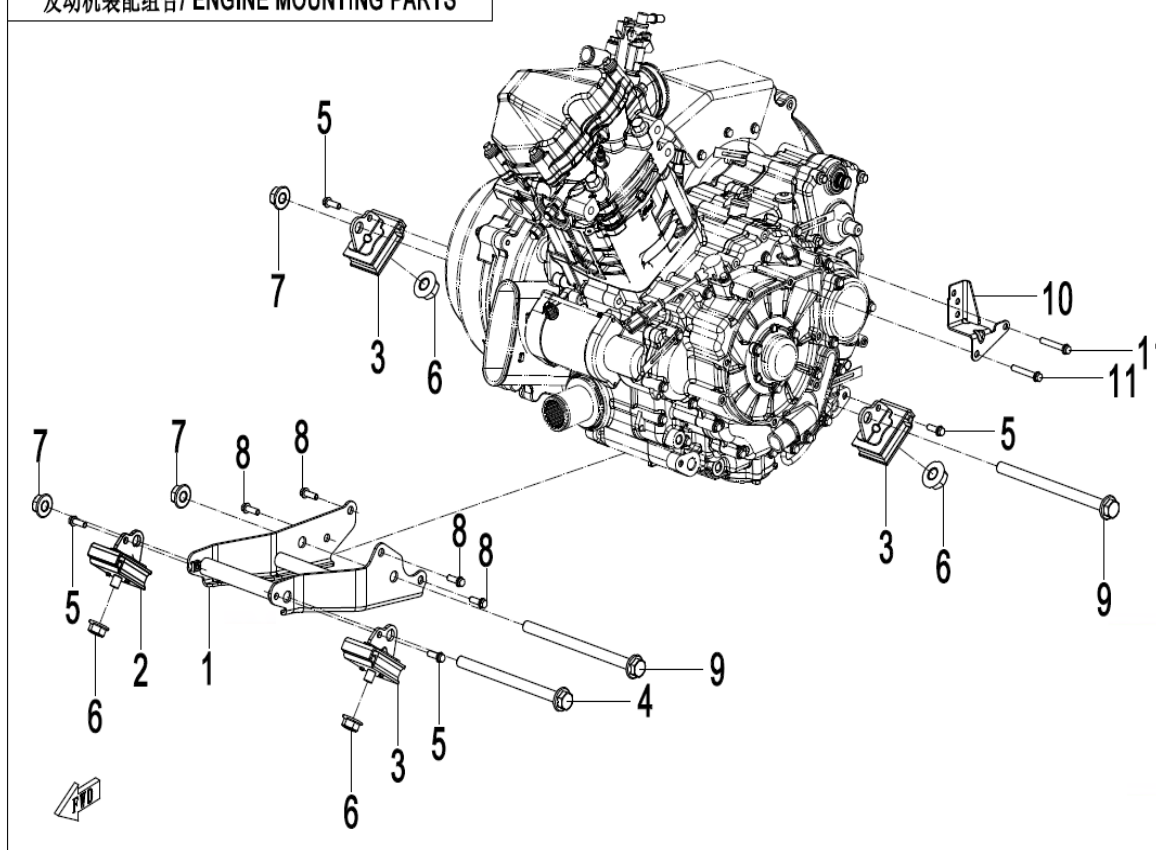

F00-1 NGINE MOUNTING PARTS


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CR6-001100-20000	FRONT BRACKET, ENGINE	1	ELECTROPHORESIS BLACK
2	9DQV-000200-3000	DAMPING BLOCK, ENGINE	1	45HA
3	9DQV-000300-3000	DAMPING BLOCK, ENGINE	3	55HA
4	30006-122170810	BOLT M12x1.25x170	1	M12x1.25x170
5	30102-060012810	SCREW	4	
6	30204-102810	NUT M10x1.25	4	M10x1.25
7	30204-122810	NUT M12x1.25	3	M12x1.25
8	30006-103020810	BOLT M10x20	4	M10x20
9	30006-122180810	BOLT M12x1.25x180	2	M12x1.25x180
10	9GQA-030010-20000	BRACKET, STEPPER MOTOR	1	
11	0010-013009-0010	BOLT M6x40	2	M6x40

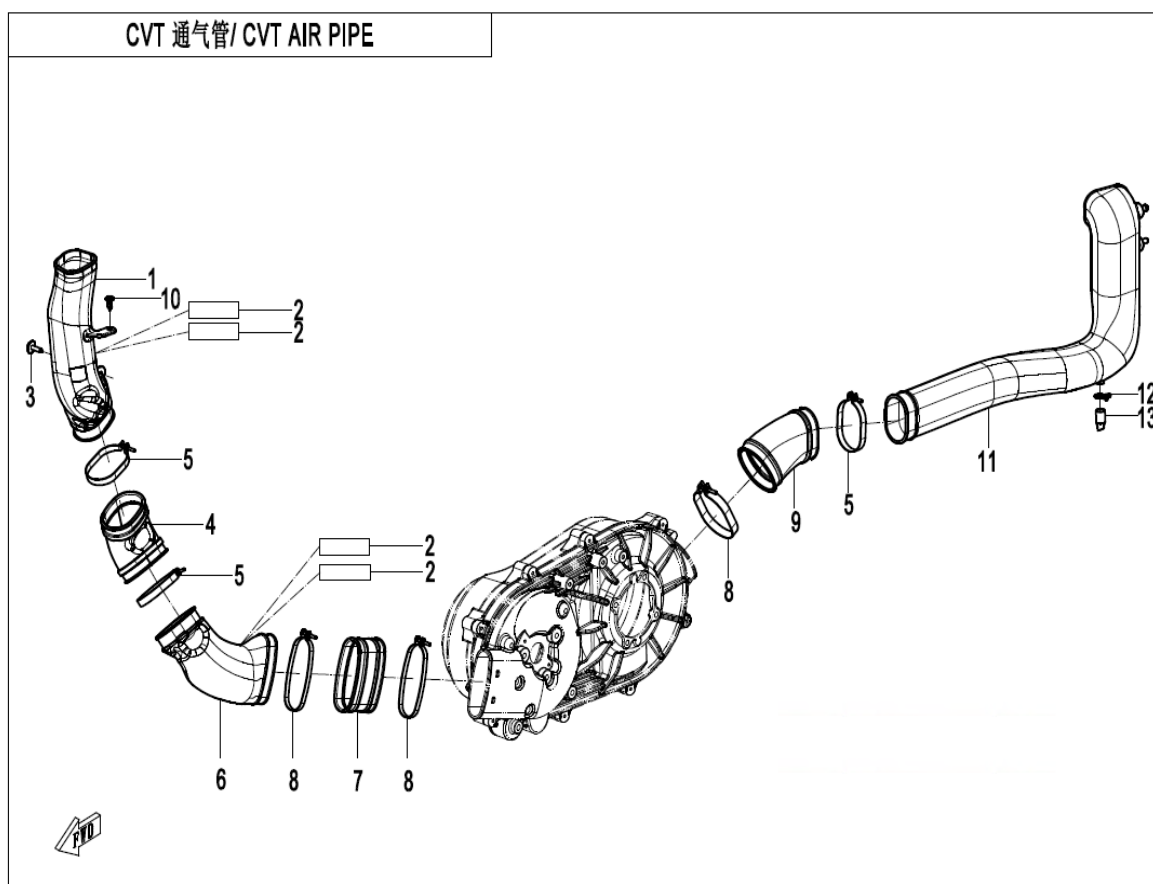

F00-2 CVT AIR PIPE

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-000301-3000	FRONT PART, CVT AIR INLET PIPE	1	
2	TFQ004	SCROLL PAPER, HEAT INSULATION	4	50*0.062
3	5BWV-040007-5000	INNER HEX BOLT M6x20	1	M6x20
4	9DQV-000306-3000	JOINT 2, CVT AIR INLET PIPE	1	
5	9030-000109	SCREW CLAMP, A-TYPE	3	70~90
6	9DQV-000305-3000	REAR PART, CVT AIR INLET PIPE	1	
7	9DQV-000303-3000	JOINT, CVT AIR INLET PIPE	1	
8	9010-000105	A-TYPE SCREW CLAMP 78-101	3	78-101
9	9DQV-000304-3000	JOINT, CVT AIR OUTLET PIPE	1	
10	9060-040310	PLASTIC CLIPS	1	
11	9CQV-000302-3000	CVT AIR OUTLET PIPE	1	LONG MODEL
12	30601-117010	CLAMP A17	1	A17
13	0180-110005	OIL STORAGE HOSE	1	


锁具/ LOCK KIT

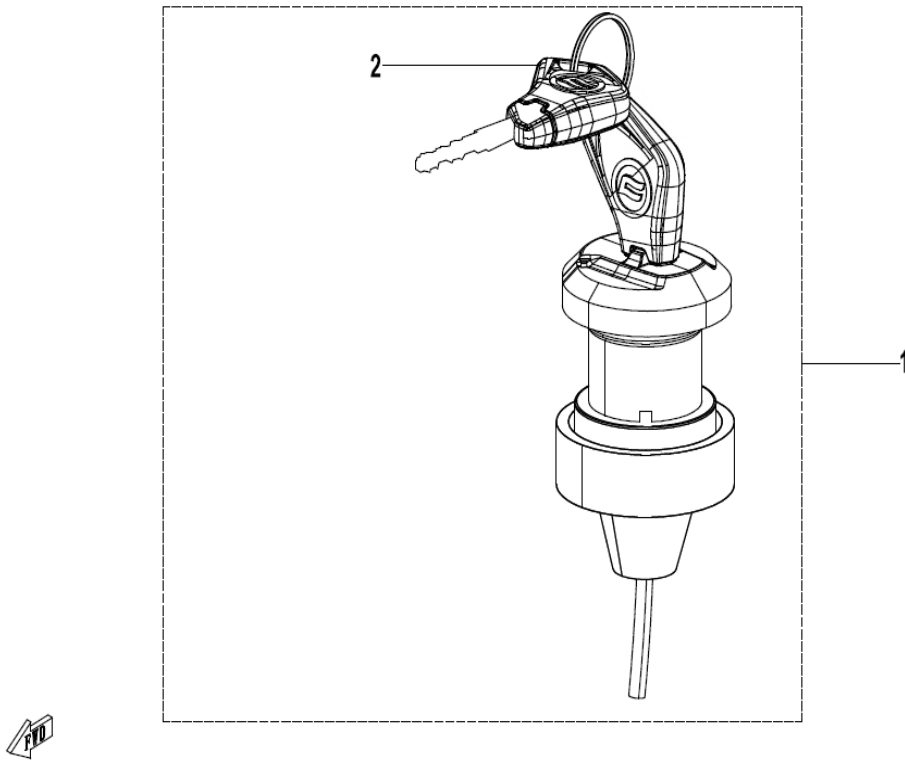

F01 LOCK KIT(WITHOUT GEARSHIFT LOCK)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DSV-011000-6K00	LOCK KIT	1	
02	9DSV-011070-6000-0MP00	KEY KIT	1	


F02 排气消声器/MUFFLER

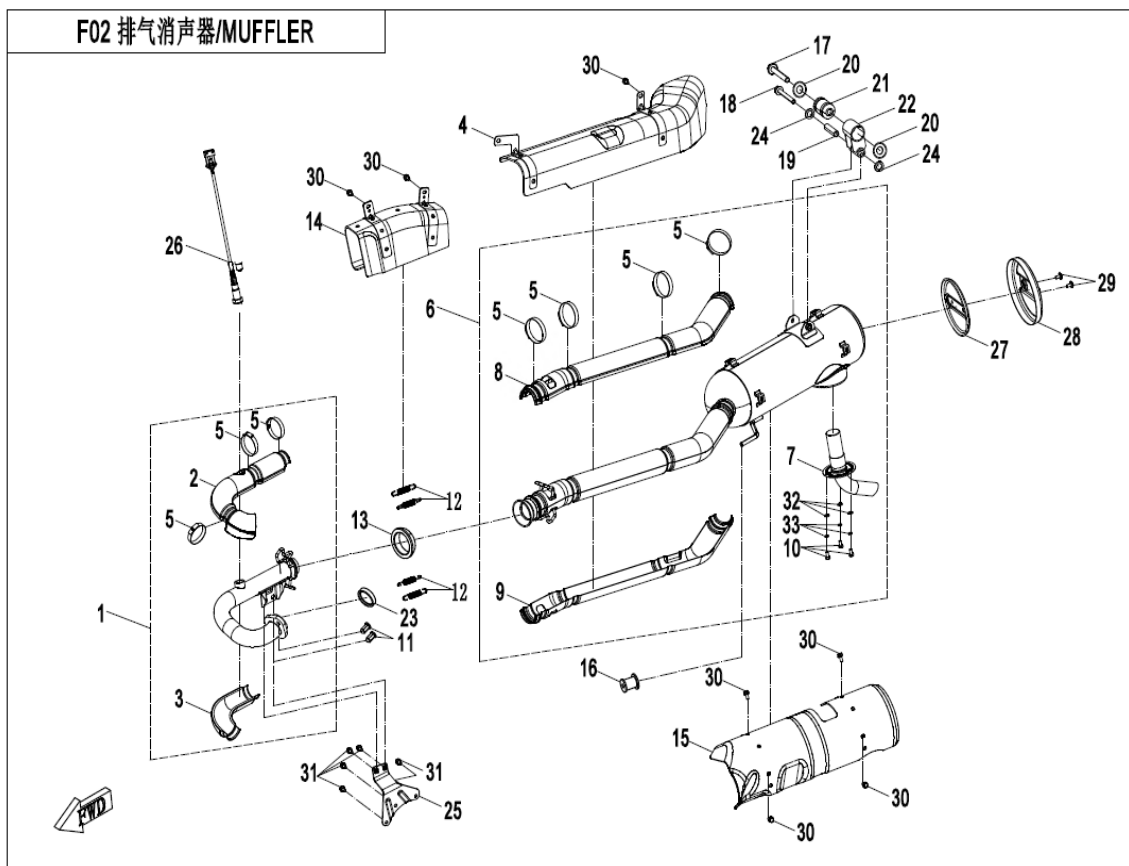

F02-A MUFFLER (INTERNATIONAL)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DQV-021100-3000	EXHAUST PIPE ASSY	1	
02	9DS #-021101-6000	UPPER HEAT INSULATOR, FRONT EXHAUST PIPE	1	
03	9DS #-021102-6000	LOWER HEAT INSULATOR, FRONT EXHAUST PIPE	1	
04	9CQV-020020-3000	HEAT INSULATOR, EXHAUST PIPE	1	
05	7030-021305	SCREW CLAMP, A-TYPE	7	
06	9CQV-021200-4200	MUFFLER ASSY	1	
07	9CS #-021320-6600	SPARK ARRESTOR	1	
08	9CQV-021201-3000	UPPER HEAT INSULATOR, REAR EXHAUST PIPE	1	
09	9CQV-021202-3000	LOWER HEAT INSULATOR, REAR EXHAUST PIPE	1	
10	30206-060510	NUT M6	3	M6
11	8010-020001	NUT M8, MUFFLER JOINT	2	M8
12	9CR6-020002-00001	DRAG SPRING, MUFFLER	4	
13	9AWA-021003-00001	SMALL GRAPHITE RING	1	
13	9AWA-021003-00002	SMALL GRAPHITE RING	1	
14	9GQ0-020010	SPRING HEAT INSULATION PLATE ASSY	1	
15	9DQV-020010-3200	HEAT INSULATOR, MUFFLER	1	
16	9GQ0-020002	RUBBER BUSHING, MUFFLER	1	
17	30006-102070810	BOLT M10x1.25x70	1	M10x1.25x70
18	30006-080065810	BOLT M8x65	1	M8x65
19	7020-020001	LINER, MUFFLER	1	
20	9010-050003	CAP, CUSHION SLEEVE	2	
21	5BY0-020030	DAMPER SLEEVE ASSY	1	
22	9CR6-020020	MOUNT ASSY, MUFFLER	1	
23	0800-022300	BUSHING, EXHAUST PIPE	1	
24	9CR6-020003	WIRE WASHER	2	
25	9DQV-020001-3000	BRACKET, EXHAUST PIPE	1	
26	0HU0-176000	OXYGEN SENSOR	1	
27	9DQV-020002-3000	HEAT INSULATOR, MUFFLER	1	
28	9DQV-020003-3000	HEAT INSULATOR, MUFFLER	1	
29	6KM #-040702-8000	INNER HEX SCREW M6x12	2	
30	30006-060012810	BOLT M6x12	7	M6x12
31	30006-060016810	BOLT M6x16	5	M6x16
32	30306-060800	WASHER 6	3	6
33	30303-060900	WASHER	3	6


F02 排气消声器/MUFFLER

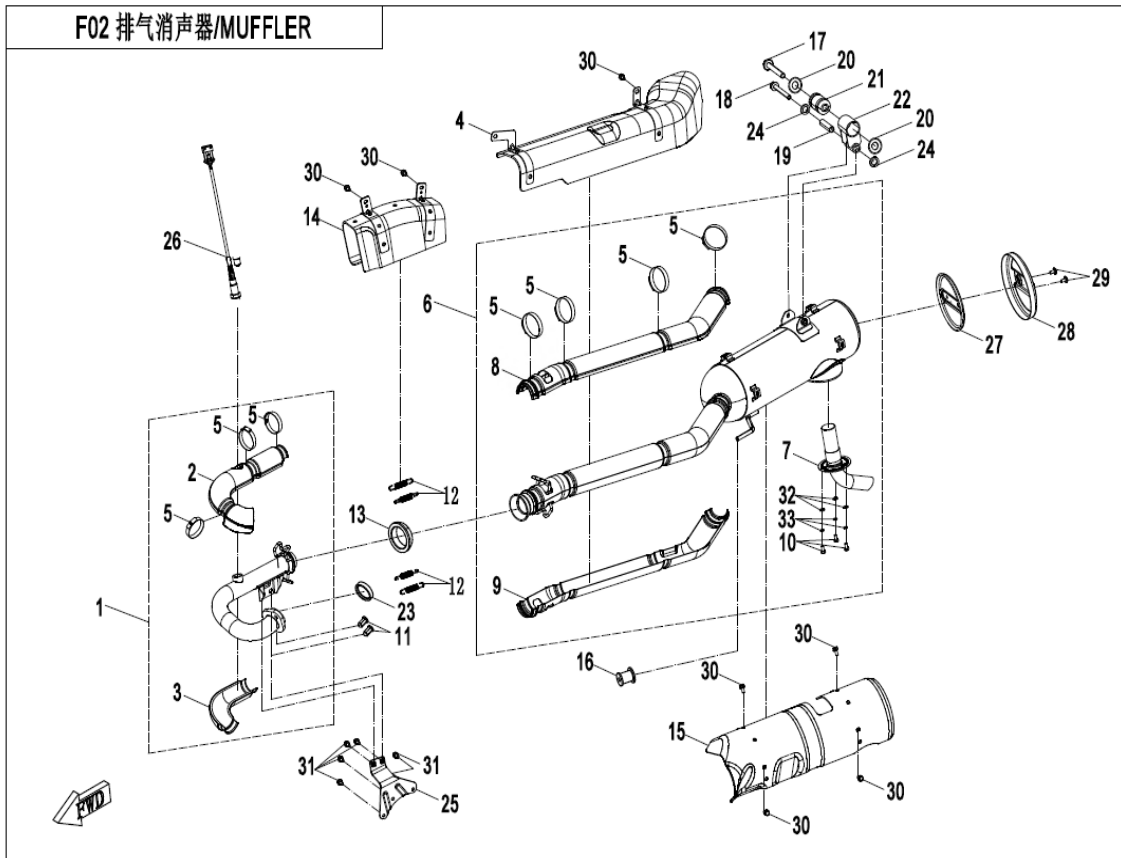

F02-B MUFFLER (EPA)


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DQV-021100-3000	EXHAUST PIPE ASSY	1	
02	9DS #-021101-6000	UPPER HEAT INSULATOR, FRONT EXHAUST PIPE	1	
03	9DS #-021102-6000	LOWER HEAT INSULATOR, FRONT EXHAUST PIPE	1	
04	9CQV-020020-3000	HEAT INSULATOR, EXHAUST PIPE	1	
05	7030-021305	SCREW CLAMP, A-TYPE	7	
06	9CQV-021200-3000	MUFFLER ASSY	1	
07	9CS #-021320-6600	SPARK ARRESTOR	1	
08	9CQV-021201-3000	UPPER HEAT INSULATOR, REAR EXHAUST PIPE	1	
09	9CQV-021202-3000	LOWER HEAT INSULATOR, REAR EXHAUST PIPE	1	
10	30206-060510	NUT M6	3	M6
11	8010-020001	NUT M8, MUFFLER JOINT	2	M8
12	9CR6-020002-00001	DRAG SPRING, MUFFLER	4	
13	9AWA-021003-00001	SMALL GRAPHITE RING	1	
13	9AWA-021003-00002	SMALL GRAPHITE RING	1	
14	9GQ0-020010	SPRING HEAT INSULATION PLATE ASSY	1	
15	9DQV-020010-3200	HEAT INSULATOR, MUFFLER	1	
16	9GQ0-020002	RUBBER BUSHING, MUFFLER	1	
17	30006-102070810	BOLT M10x1.25x70	1	M10x1.25x70
18	30006-080065810	BOLT M8x65	1	M8x65
19	7020-020001	LINER, MUFFLER	1	
20	9010-050003	CAP, CUSHION SLEEVE	2	
21	5BY0-020030	DAMPER SLEEVE ASSY	1	
22	9CR6-020020	MOUNT ASSY, MUFFLER	1	
23	0800-022300	BUSHING, EXHAUST PIPE	1	
24	9CR6-020003	WIRE WASHER	2	
25	9DQV-020001-3000	BRACKET, EXHAUST PIPE	1	
26	0HU0-176000	OXYGEN SENSOR	1	
27	9DQV-020002-3000	HEAT INSULATOR, MUFFLER	1	
28	9DQV-020003-3000	HEAT INSULATOR, MUFFLER	1	
29	6KM #-040702-8000	INNER HEX SCREW M6x12	2	
30	30006-060012810	BOLT M6x12	7	M6x12
31	30006-060016810	BOLT M6x16	5	M6x16
32	30306-060800	WASHER 6	3	6
33	30303-060900	WASHER	3	6

车架/FRAME

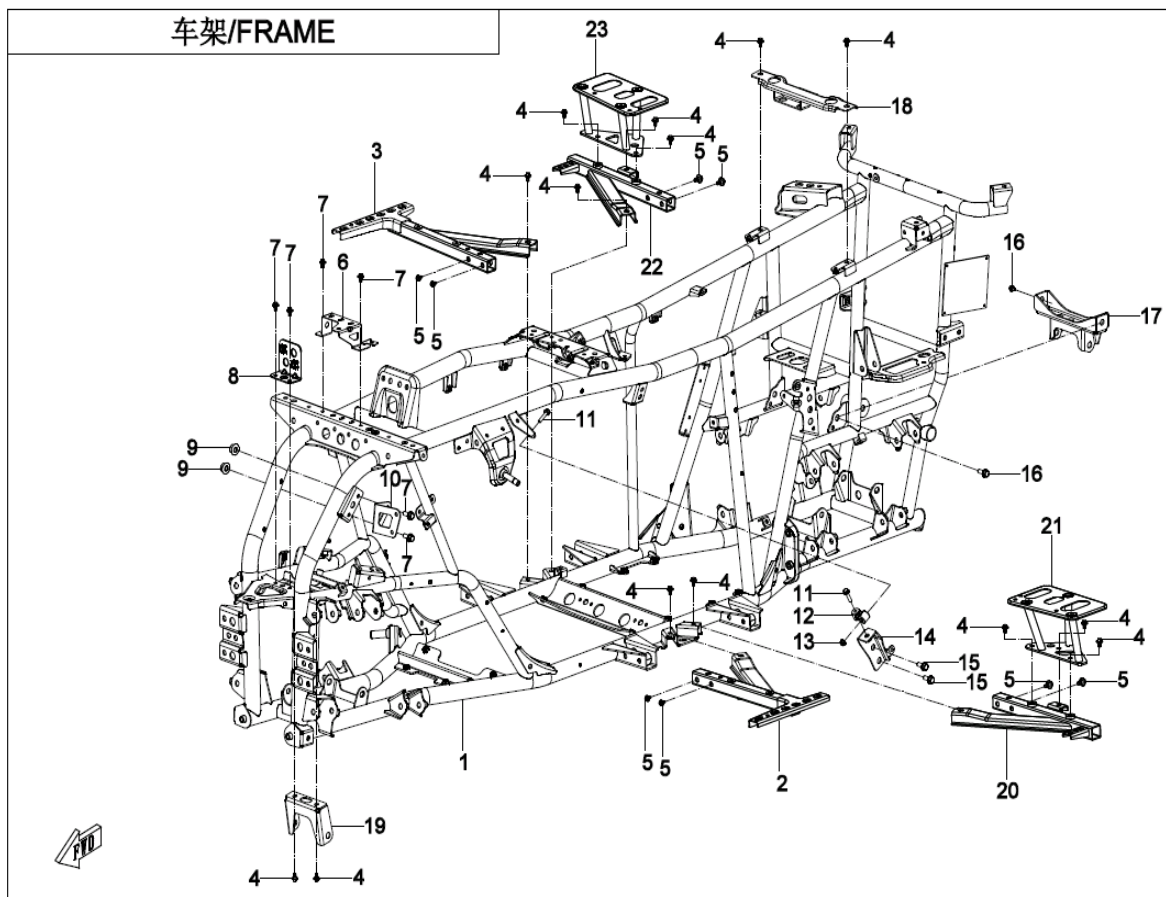


F03 FRAME

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9CQV-031000-3000-01	FRAME ASSY	1	
1	9CQV-031000-3001-01	FRAME ASSY	1	
02	9DQV-030300-3000	LH FRONT FOOT PEDAL ASSY	1	
03	9DQV-030400-3000	RH FRONT FOOT PEDAL ASSY	1	
04	30006-080016810	BOLT M8x16	14	M8x16
05	30006-080045810	BOLT M8x45	8	M8x45
06	9DQV-030003-3000	BRACKET, CVT AIR INLET PIPE	1	
07	30006-060012810	BOLT M10x1.25x20	6	M10x1.25x20
08	9DQV-030030-3000	BRACKET, BRAKE VALVE	1	
09	30204-060810	NUT M6	2	M6
10	9DQV-030001-3000	BRACKET, CANISTER	1	
11	30006-080040810	CONNECTING BRACKET, AIR FILTER	1	ELECTROPHORESIS BLACK
12	7020-000160	CONNECTING PARTS, ENGINE UPPER BRACKET	1	
13	30204-080810	NUT M8	1	M8
14	9DQV-030040-3000	UPPER BRACKET, ENGINE	1	
15	30006-103020810	BRACKET ASSY, HEADLIGHT	2	ELECTROPHORESIS BLACK
16	30102-102020810	SCREW M10x1.25x20	2	M10x1.25x20
17	9DQV-030090-3000	UPPER BRACKET, REAR GEAR CASE	1	
18	9DQV-030120-3000	BRACKET, SEAT	1	
19	9DQV-030010-3000	UPPER BRACKET, FRONT GEAR CASE	1	
20	9CQV-030100-3000	LH REAR LOWER FOOTREST ASSY	1	
21	9CQV-030300-3000	LH REAR UPPER FOOTREST ASSY	1	ELECTROPHORESIS BLACK
22	9CQV-030200-3000	RH REAR LOWER FOOTREST ASSY	1	
23	9CQV-030400-3000	RH REAR UPPER FOOTREST ASSY	1	ELECTROPHORESIS BLACK

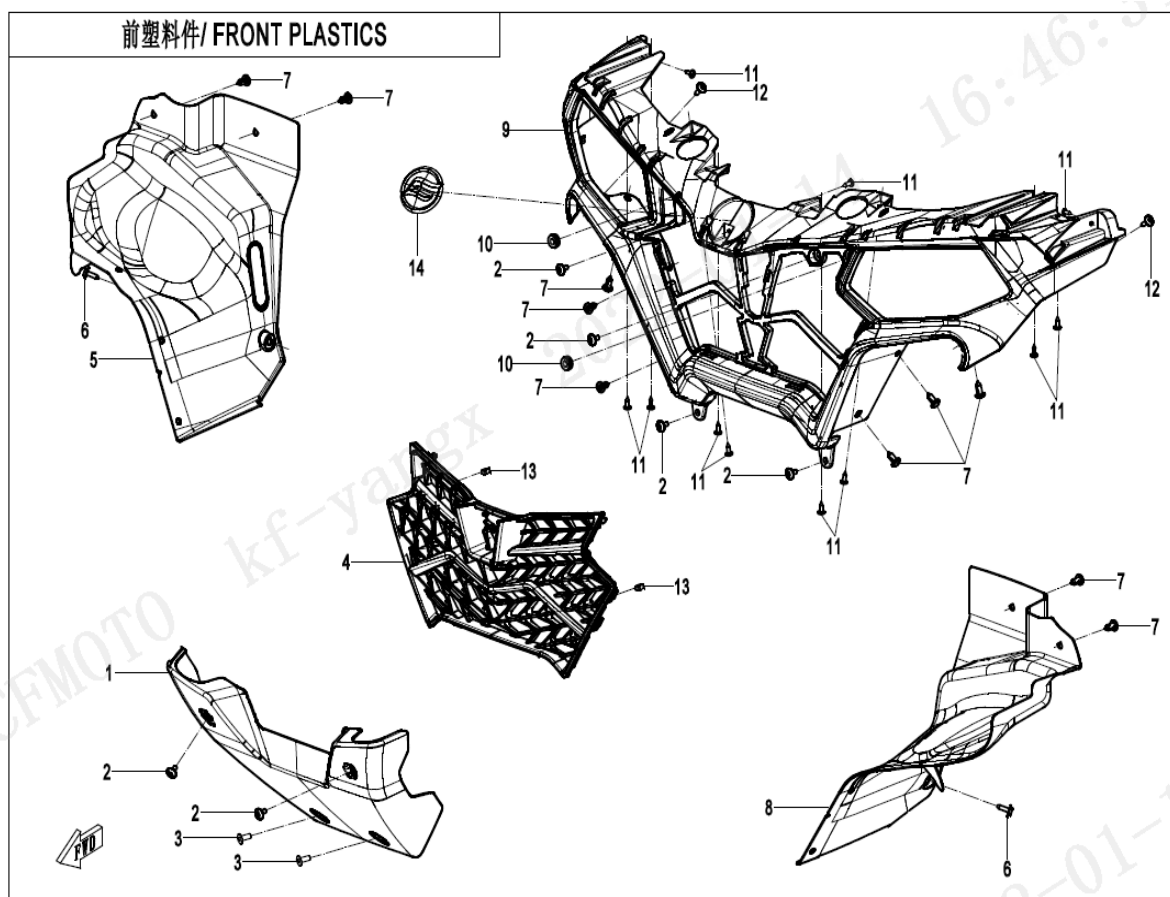

F04-1 FRONT PLASTICS


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-041044-3000	FRONT LOWER FENDER	1	
2	5BWV-040001-5000	INNER HEX BOLT M6x14	6	M6x14
3	30121-080020870	SCREW M8x20	2	
4	9DQV-041017-3000	HEADLIGHT PANEL GRID	1	
5	9DQV-041014-3000	GUARD, RH HEADLIGHT	1	
6	5BWV-040007-5000	INNER HEX BOLT M6x20	2	M6x20
7	9060-040310	PLASTIC CLIPS	10	
8	9DQV-041013-3000	GUARD, LH HEADLIGHT	1	
9	9DQV-041011-3000	HEADLIGHT PANEL	1	
10	0180-015003	RUBBER SLEEVE	2	
11	30110-480160010	SELF-TAPPING SCREW ST4.8x16	11	ST4.8x16
12	5BWV-040008-5000	INNER HEX BOLT M6x20	2	M6x20
13	8080-000001	CLASP	2	
14	5ASV-190001-6000	CFMOTO LOGO	1	

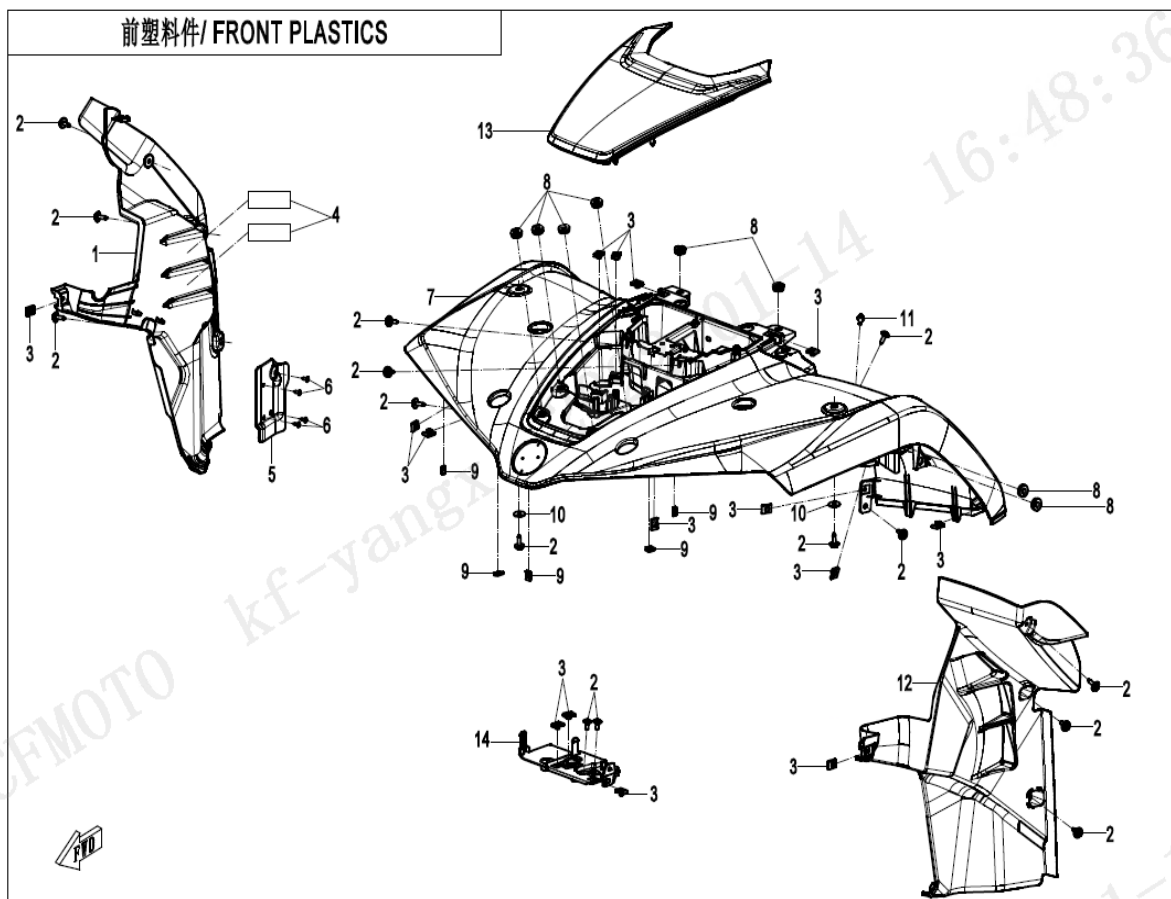

F04-2 FRONT PLASTICS

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-044032-3000	RH FRONT INNER FENDER	1	
2	5BWV-040007-5000	INNER HEX BOLT M6x20	15	M6x20
3	8030-040800-00001	NUT CLIP M6	15	M6
4	TFQ004	SCROLL PAPER, HEAT INSULATION	2	50*0.062
5	9DQV-041022-3000	HEAT INSULATOR, FRONT FENDER	1	
6	30118-420095010	SELF-TAPPING SCREW ST4.2x9.5	4	ST4.2x9.5
7	9DQV-041021-3000-0P800	FRONT FENDER	1	HUNTER GREEN
7	9DQV-041021-3000-0P900	FRONT FENDER	1	SKY BLUE
7	9DQV-041021-3000-0YD00	FRONT FENDER	1	LAVA ORANGE
8	0180-015003	RUBBER SLEEVE	8	
9	8080-000002	CLIP NUT ST4.8	5	ST4.8
10	30301-060412	WASHER	2	6
11	30006-060012870	BOLT M6x12	1	M6x12
12	9DQV-044031-3000	LH FRONT INNER FENDER	1	
13	9DQV-041023-3000	FRONT TOP COVER	1	
14	9DQV-044013-3000	BRACKET, FLASHER	1	
14	9DQV-044013-3001	BRACKET, FLASHER	1	


中塑料件/ MIDDLE PLASTICS

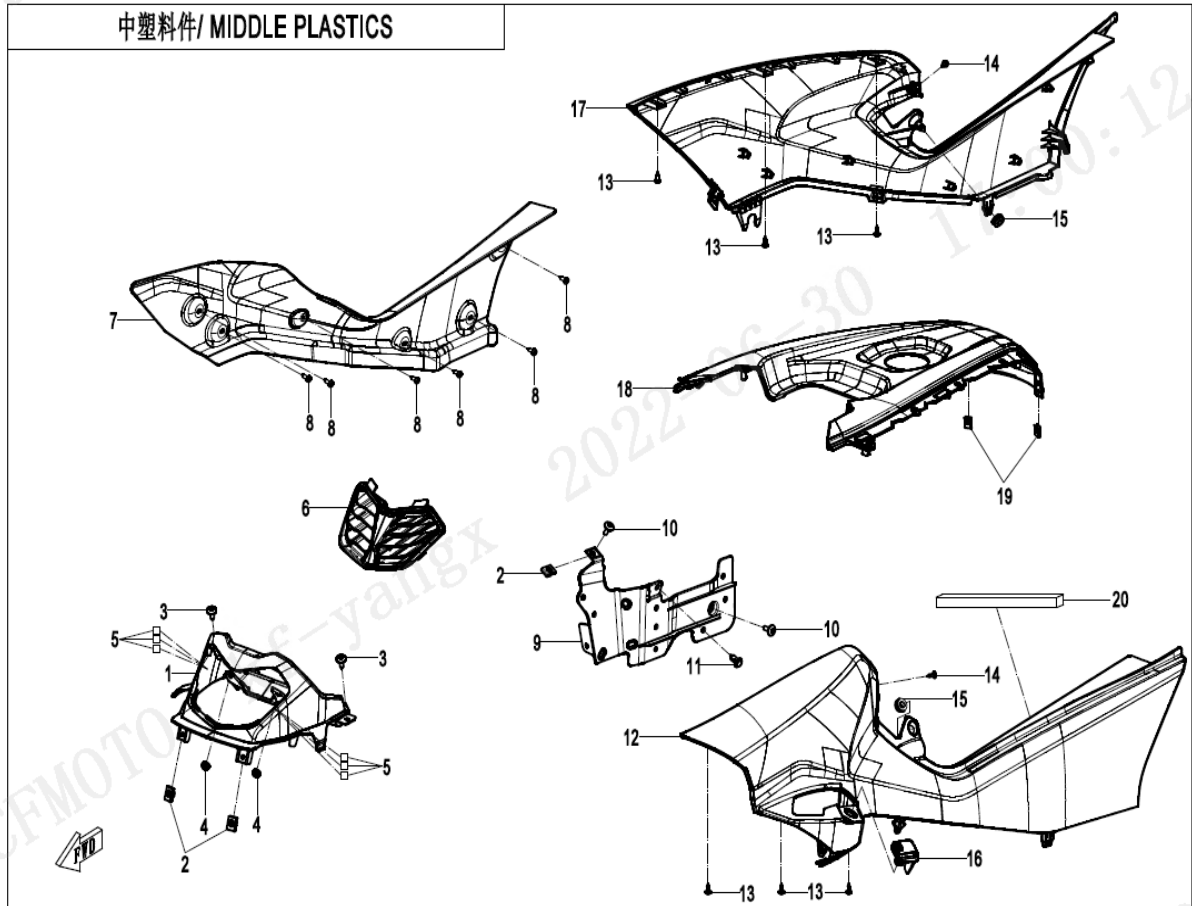

F04-3 MIDDLE PLASTICS

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-041031-3000	DASHBOARD GUARD	1	
2	8030-040800-00001	NUT CLIP M6	3	M6
3	5BWV-040008-5000	INNER HEX BOLT M6x20	2	M6x20
4	30202-060110	NUT M6	2	M6
5	6NQ#-040022-2000	SPONGE MAT	6	
6	9DQV-041032-3000	AIR INLET PORT, DASHBOARD GUARD	1	
6	9DQV-041032-3000	AIR INLET PORT, DASHBOARD GUARD	1	
7	9CQV-042028-3000	HEAT INSULATOR, RH SIDE COVER	1	LONG MODEL
8	30110-421130010	SELF-TAPPING SCREW ST4.2x13	6	ST4.2x13
9	9DQV-044012-3000	BRACKET, ELECTRICAL PARTS	1	
10	30006-060012870	BOLT M6x12	2	M6x12
11	9060-040310	PLASTIC CLIPS	1	
12	9CQV-042021-3000-0P800	LH SIDE COVER, LONG MODEL	1	HUNTER GREEN
12	9CQV-042021-3000-0P900	LH SIDE COVER, LONG MODEL	1	SKY BLUE
12	9CQV-042021-3000-0YD00	LH SIDE COVER, LONG MODEL	1	LAVA ORANGE
13	30110-420130010	SELF-TAPPING SCREW ST4.2x13	6	ST4.2x13
14	30118-480160010	SELF-TAPPING SCREW ST4.8x16	2	ST4.8x16
15	8080-040064	DAMPER, FRONT FENDER	2	
16	9DQV-042027-3000	LOCK CAP	1	
17	9CQV-042022-3000-0P800	RH SIDE COVER, LONG MODEL	1	HUNTER GREEN
17	9CQV-042022-3000-0P900	RH SIDE COVER, LONG MODEL	1	SKY BLUE
17	9CQV-042022-3000-0YD00	RH SIDE COVER, LONG MODEL	1	LAVA ORANGE
18	9DQV-042011-3000	UPPER PANEL, FUEL TANK	1	
19	8080-000002	CLIP NUT ST4.8	2	ST4.8
20	9060-038129	SPONGE STRIP 1, HEAT INSULATOR	1	


中塑料件/ MIDDLE PLASTICS

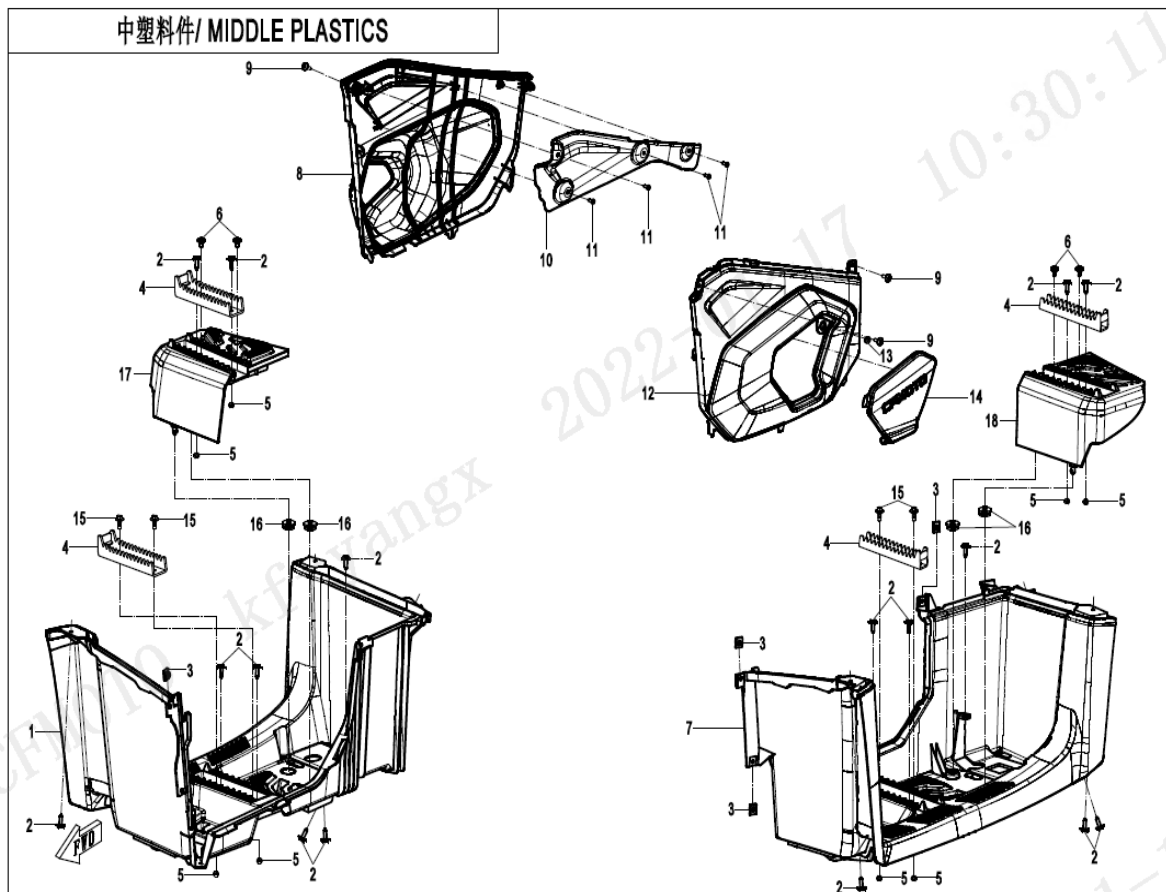

F04-4 MIDDLE PLASTICS


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CQV-042032-3000	RH FOOT PEDAL	1	LONG MODEL
1	9CQV-042032-3001	RH PEDAL, LONG MODEL	1	
2	5BWV-040007-5000	INNER HEX BOLT M6x20	16	M6x20
3	8030-040800-00001	NUT CLIP M6	4	M6
4	9CR6-042040-20000	ANTISKID TEETH ASSY.	4	
5	30200-060810	NUT	8	M6
6	5BWV-040001-5000	INNER HEX BOLT M6x14	4	M6x14
7	9CQV-042031-3000	LH FOOT PEDAL	1	LONG MODEL
7	9CQV-042031-3001	LH PEDAL, LONG MODEL	1	
8	9DQV-042042-3000	CVT SIDE COVER	1	
9	5BWV-040008-5000	INNER HEX BOLT M6x20	3	M6x20
10	9DQV-042044-3000	INSULATOR, CVT SIDE COVER	1	
11	30110-421130010	SELF-TAPPING SCREW ST4.2x13	4	ST4.2x13
12	9DQV-042041-3000	LH COVER, ENGINE	1	
13	5BY0-040010	RUBBER SLEEVE	1	
14	9DQV-044052-3000	CAP, OIL FILLER	1	
15	30006-060016810	BOLT M6x16	4	M6x16
16	0180-015003	RUBBER SLEEVE	4	
17	9CQV-042034-3000	BLOCK, RH FOOT PEDAL	1	LONG MODEL
18	9CQV-042033-3000	BLOCK, LH FOOT PEDAL	1	LONG MODEL

后塑料件/ REAR PLASTICS

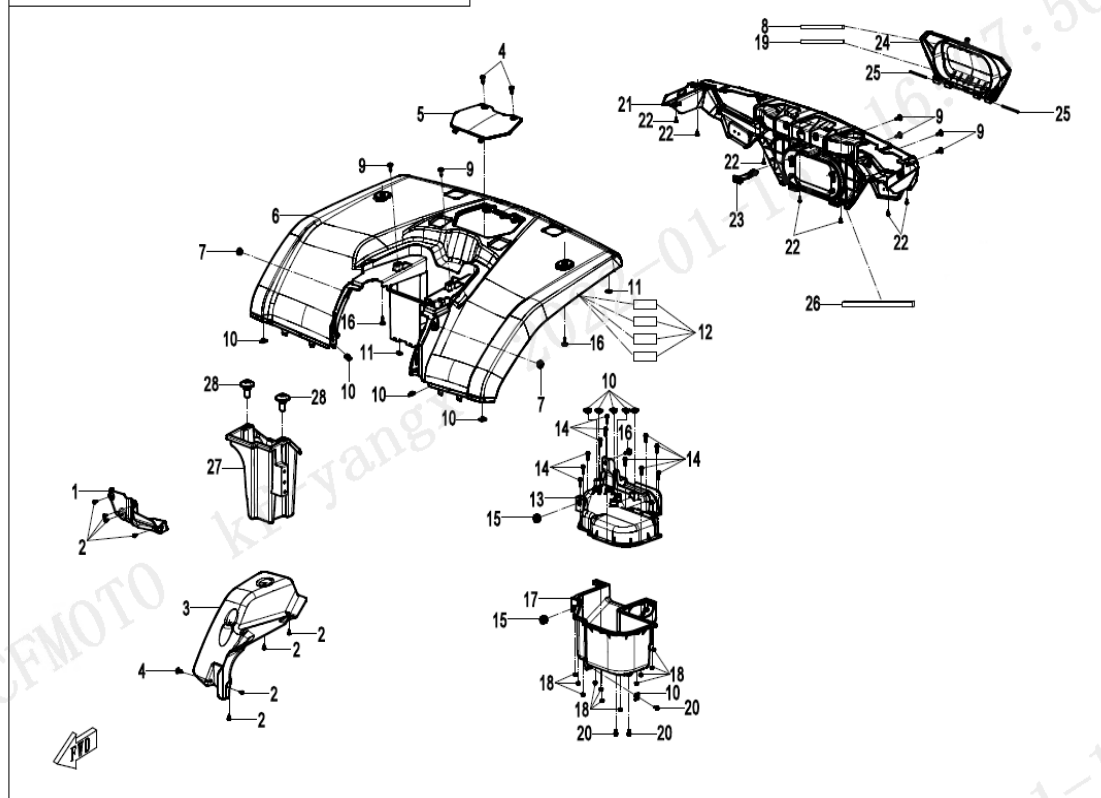

F04-5 REAR PLASTICS


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-043024-3000	HEAT INSULATOR, TAIL LIGHT PANEL	1	
2	30110-421130010	SELF-TAPPING SCREW ST4.2x13	8	ST4.2x13
3	9DQV-043014-3000	HEAT INSULATOR, REAR FENDER	1	
3	9DQV-043014-3001		1	
4	9060-040310	PLASTIC CLIPS	3	
5	9DQV-043012-3000-0P900	REAR PANEL	1	SKY BLUE
5	9DQV-043012-3000-0YD00	REAR PANEL	1	LAVA ORANGE
5	9DQV-043012-3000-0P800	REAR PANEL	1	HUNTER GREEN
6	9DQV-043011-3000-0P800	REAR FENDER	1	HUNTER GREEN
6	9DQV-043011-3000-0P900	REAR FENDER	1	SKY BLUE
6	9DQV-043011-3000-0YD00	REAR FENDER	1	LAVA ORANGE
7	0180-015003	RUBBER SLEEVE	2	
8	9DQV-043027-3000	SEAL STRAP 1, TAIL BOX	1	
9	5BWV-040008-5000	INNER HEX BOLT M6x20	6	M6x20
10	8030-040800-00001	NUT CLIP M6	10	M6
11	8080-000002	CLIP NUT ST4.8	2	ST4.8
12	TFQ004	SCROLL PAPER, HEAT INSULATION	4	50*0.062
13	9DQV-044014-3000	UPPER COVER, TAIL BOX	1	
14	30109-050020410	SCREW	11	M5x20
15	5020-031001	RUBBER SLEEVE, FRONT LICENSE BRACKET	2	
16	5BWV-040007-5000	INNER HEX BOLT M6x20	3	M6x20
17	9DQV-044015-3000	LOWER COVER, TAIL BOX	1	
18	30204-050810	NUT M5	11	M5
19	9DQV-043028-3000	SEAL STRAP 2, TAIL BOX	1	
20	30006-060012870	BOLT M6x12	3	M6x12
21	9DQV-043021-3000	PANEL, TAIL LIGHT	1	
22	30110-480130010	SELF-TAPPING SCREW ST4.8x13	7	ST4.8x13
23	9DQV-042023-3000	TIRE STRAP	1	
24	9DQV-043013-3000	TAIL BOX COVER	1	
25	6L30-220023	MAIN SHAFT, SIDE BOX	2	
25	9DQV-040023-3000	TAIL BOX MAIN SHAFT	2	
26	9DQV-043026-3000	RUBBER STRAP, TAIL LIGHT PANEL	1	
27	9CQV-044025-3000	TOOL BOX	1	
28	5BWV-040001-5000	INNER HEX BOLT M6x14	2	M6x14

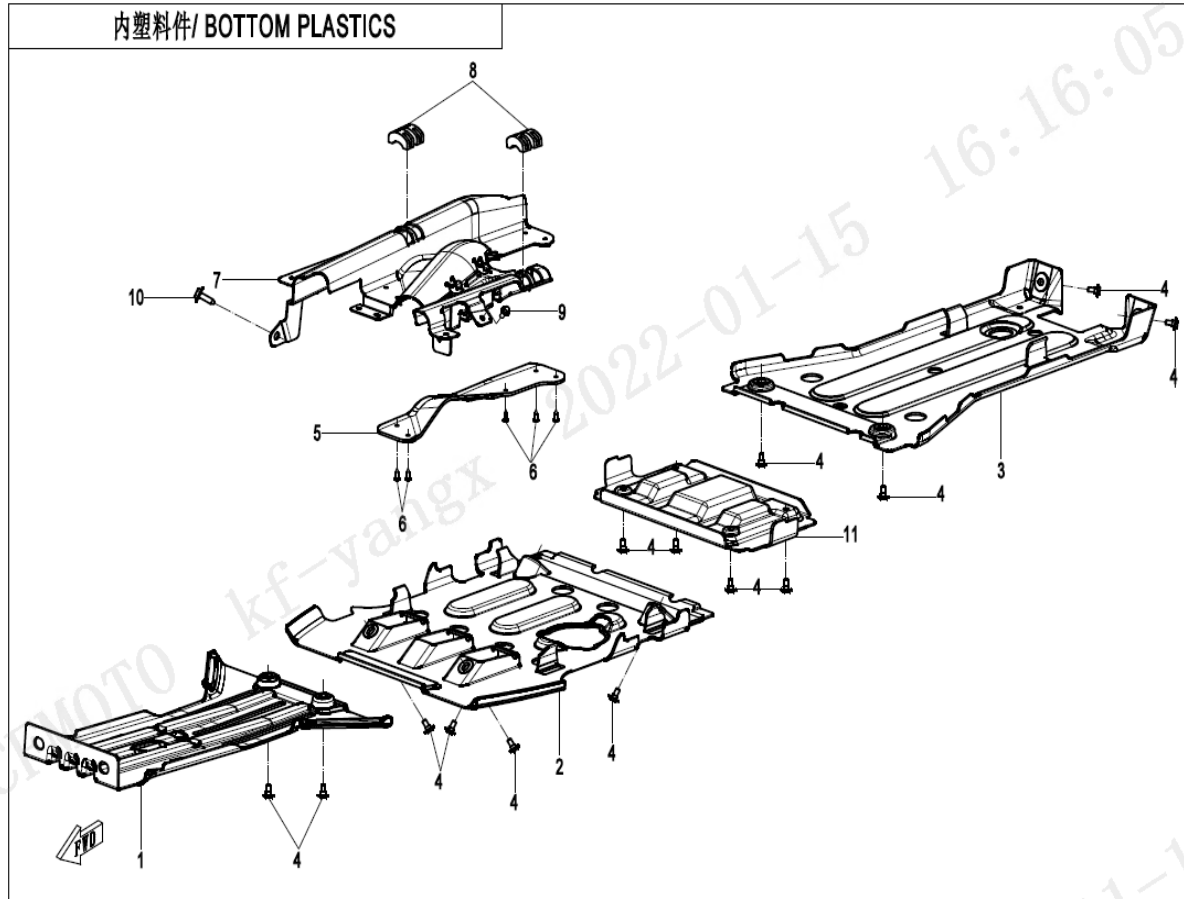

F04-6 BOTTOM PLASTICS

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-044021-3000	FRONT PANEL, ENGINE	1	
2	9GQV-044022-1000	MIDDLE PANEL ENGINE	1	
3	9GQV-044023-1000	REAR PANEL, ENGINE	1	
4	5BWV-040001-5000	INNER HEX BOLT M6x14	14	M6x14
5	9DQV-044016-3000	INSULATOR, FUEL TANK LOWER PANEL	1	
6	30110-421130010	SELF-TAPPING SCREW ST4.2x13	5	ST4.2x13
7	9DQV-044011-3000	LOWER PANEL, FUEL TANK	1	
8	9010-120005	CUSHION MAT, FUEL TANK	2	
9	30006-060016870	BOLT M6x16	1	M6x16
10	5BWV-040007-5000	INNER HEX BOLT M6x20	1	M6x20
11	9GQV-044024-2000	EXTENSION SKID PLATE	1	


前悬架/Front Suspension

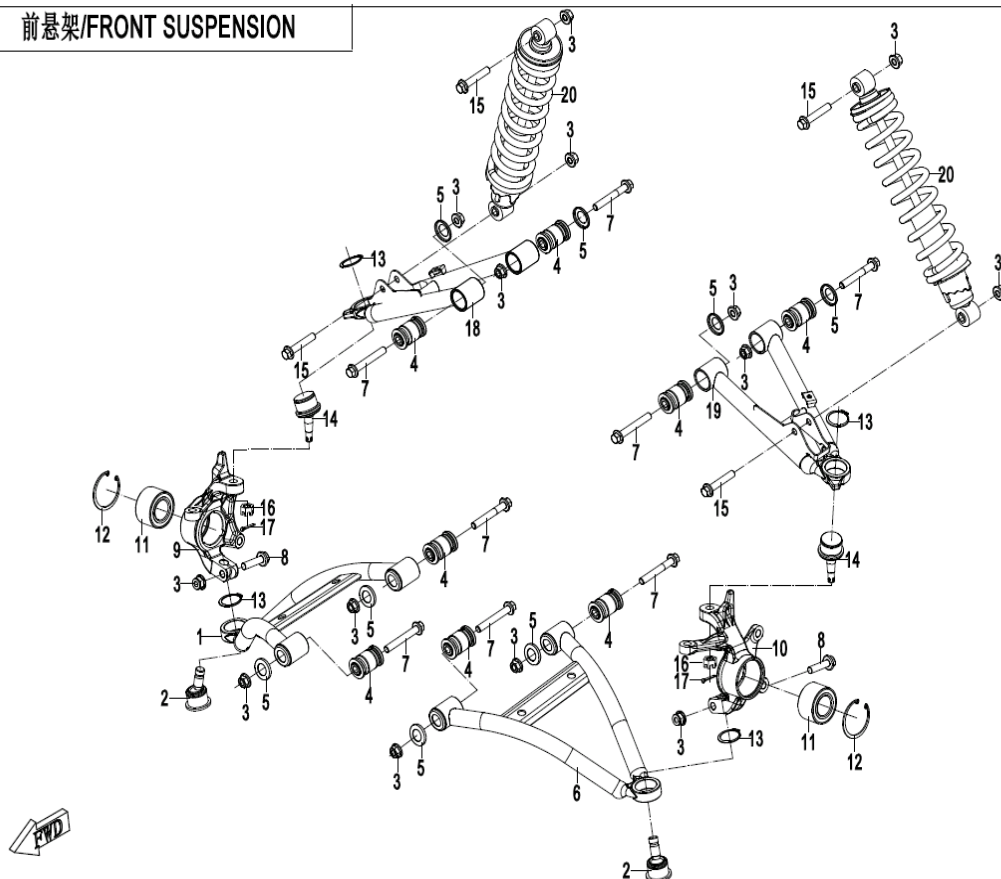

F05 FRONT SUSPENSION

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-050410-3000	FRONT RH LOWER SWING ARM ASSY	1	
1	9DQV-050410-3001	FRONT RH LOWER SWING ARM ASSY	1	
2	9010-050800-20000	LOWER BALL PIN ASSY.	2	
3	30204-102810	NUT M10x1.25	14	M10x1.25
4	9DQV-050900-3000	DAMPING SLEEVE ASSY	8	
5	9DSV-050900-6K00	CAP, CUSHION SLEEVE	8	
6	9DQV-050210-3000	FRONT LH LOWER SWING ARM ASSY	1	
6	9DQV-050210-3001	FRONT LH LOWER SWING ARM ASSY	1	
7	30006-102070810	BOLT M10x1.25x70	8	M10x1.25x70
8	30006-102040810	BOLT M10x1.25x40	2	M10x1.25x40
9	9DQV-050801-3000	RH STEERING KNUCKLE	1	
10	9DQV-050701-3000	LH STEERING KNUCKLE	1	
11	9GQ0-050710	BEARING, HUB	2	
12	30800-05505	CIRCLIP FOR HOLE 55	2	55
13	30801-03405	CIRCLIPS FOR SHAFT 34	4	34
14	9010-050700-1000	TOP BALL PIN	2	CCVI
15	30006-102055810	BOLT M10x1.25x55	4	M10x1.25x55
16	30207-102810	NUT M10x1.25	2	M10x1.25
17	30903-0201610	COTTER PIN	2	2.0x16
18	9DQV-050310-3000	FRONT RH UPPER SWING ARM ASSY	1	
19	9DQV-050110-3000	FRONT LH UPPER SWING ARM ASSY	1	
20	9DQV-050500-3000	FRONT SHOCK ABSORBER ASSY	2	


后悬架/REAR SUSPENSION

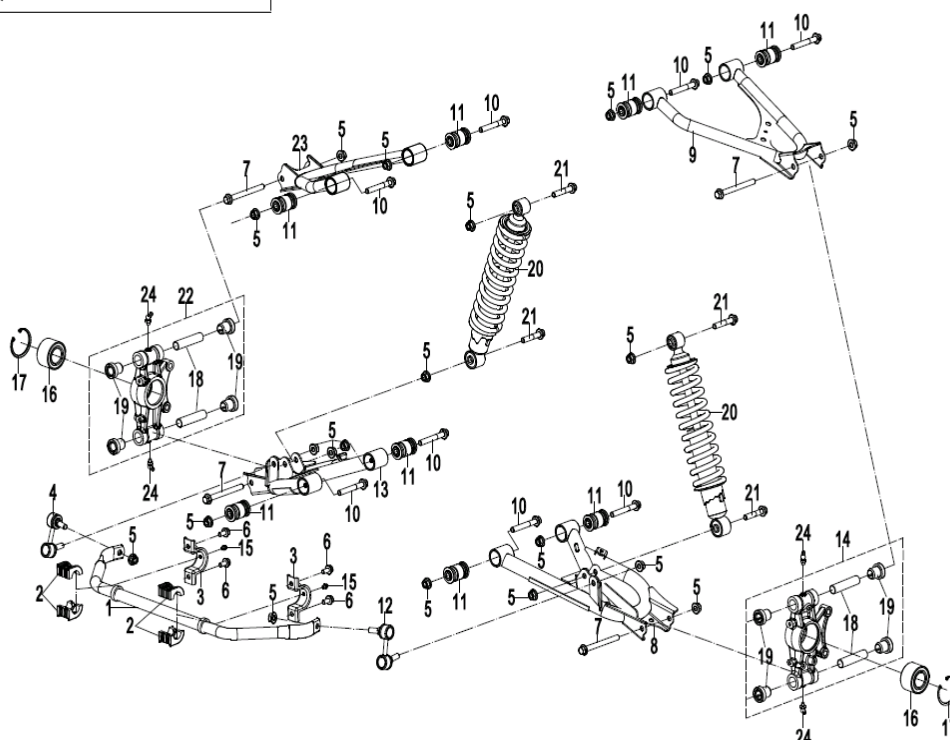

F06 REAR SUSPENSION

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-060610-3000	REAR SWAY BAR ASSY	1	
2	9GQ0-060003	SUPPORTER, SWAY BAR	4	
3	9GQ0-060601-00001	COVER, SWAY BAR	2	
4	9010-060800-20000	BALL PIN, RH	1	CCVI
5	30204-102810	NUT M10x1.25	20	M10x1.25
6	30006-080016810	BOLT M8x16	4	M8x16
7	30006-102100810	BOLT M10x1.25x100	4	M10x1.25x100
8	9DQV-060210-3000	REAR LH LOWER SWING ARM ASSY	1	
9	9DQV-060110-3000	REAR LH UPPER SWING ARM ASSY	1	
10	30006-102070810	BOLT M10x1.25x70	8	M10x1.25x70
11	9DQV-050900-3000	DAMPING SLEEVE ASSY	8	
12	9010-060700-20000	BALL PIN, LH	1	CCVI
13	9DQV-060410-3000	REAR RH LOWER SWING ARM ASSY	1	
14	7020-0607B0	LH REAR BEARING CARRIER ASSY	1	
15	3120100	GREASE ZERK	2	
16	9GQ0-050710	BEARING, HUB	2	
17	30800-05505	CIRCLIP FOR HOLE 55	2	55
18	7020-060702-00001	MIDDLE SPACER, REAR BEARING CARRIER	4	
19	5ASV-050002-6000	SHORT BUSHING	8	
19	5ASV-050002-6001	SHORT BUSHING	8	
20	9DQV-060500-3000	REAR SHOCK ABSORBER ASSY	2	
21	30006-102055810	BOLT M10x1.25x55	4	M10x1.25x55
22	7020-0608B0	RH REAR BEARING CARRIER ASSY	1	
23	9DQV-060310-3000	REAR RH UPPER SWING ARM ASSY	1	
24	3121401	GREASE ZERK	4	


前轮/ FRONT WHEEL

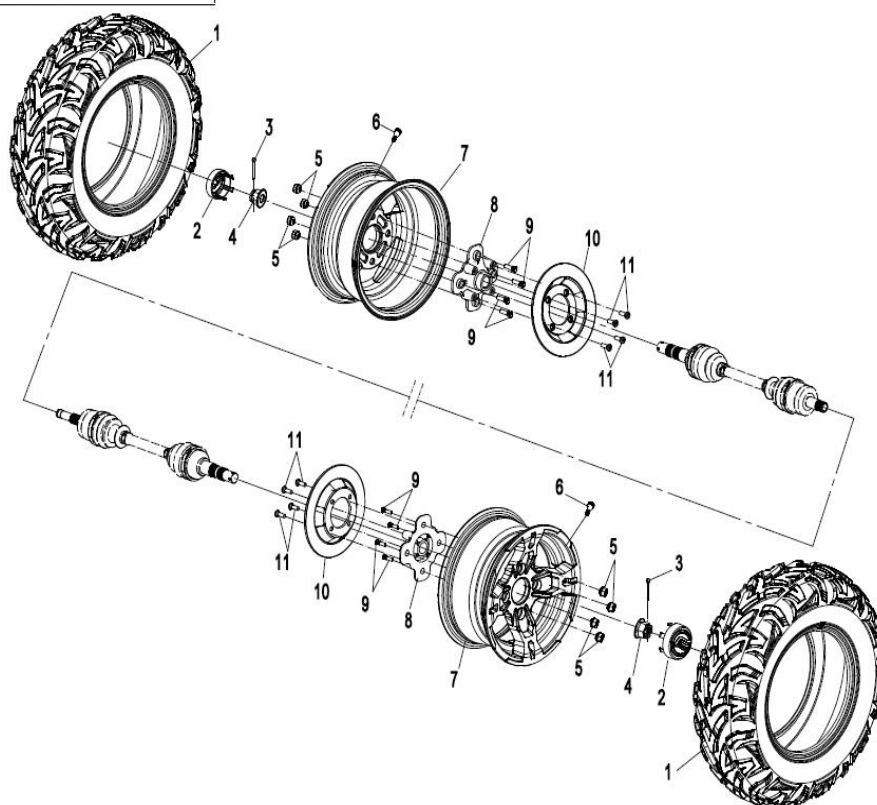

F07-A FRONT WHEEL (ALUMINUM)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	30703-1271	TIRE	2	24x8.00-12 6PR(45J)
01	30703-1273	TIRE	2	
01	30703-1275	TIRE	2	25
02	5ASV-070101-6001	DECO COVER, RIM	2	WITH CFMOTO LOGO
03	30903-0403610	COTTER PIN	2	40x36
04	5HY0-110001	HEX FLANGE NUT	2	
05	9010-070002-A000	MOUNTING NUT, RIM	8	CHROME PLATED
06	5190-070030-1000	VALVE, INFLATION	2	
07	5AS0-070100-6000-11	FRONT RIM	2	MATTE BLACK
08	9GQV-070001-1400	FRONT WHEEL BRACKET	2	
09	9010-070201	BOLT, FRONT WHEEL BRACKET	8	
10	7020-080003-00001	FRONT BRAKE DISC	2	
11	A000-080001	SCREW	8	


前轮/ FRONT WHEEL

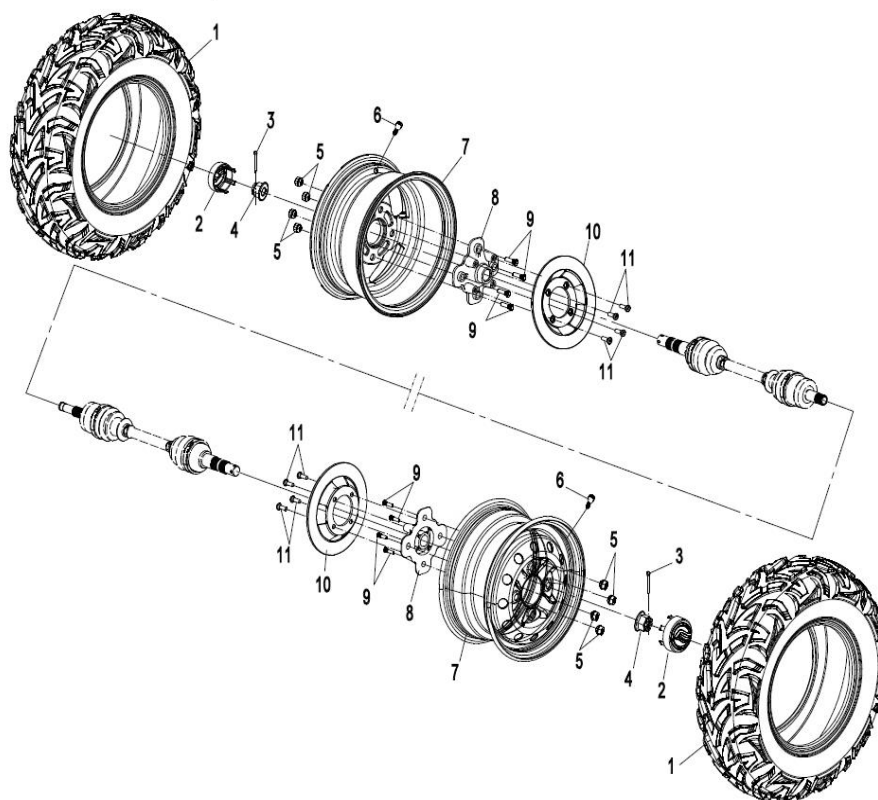

F07-B FRONT WHEEL (STEEL)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	30703-1271	TIRE	2	24x8.00-12 6PR(45J)
01	30703-1273	TIRE	2	
01	30703-1275	TIRE	2	25
02	9010-040028-1000	DECO COVER, STEEL RIM	2	FOR 12" STEEL WHEEL
03	30903-0403610	COTTER PIN	2	40x36
04	5HY0-110001	HEX FLANGE NUT	2	
05	9010-070002	MOUNTING NUT, RIM	8	ARMY GREEN
06	5190-070030-1000	VALVE, INFLATION	2	
07	9010-070100-B000	FRONT RIM	2	12", STEEL RIM, BLACK PAINT
08	9GQV-070001-1400	FRONT WHEEL BRACKET	2	
09	9010-070201	BOLT, FRONT WHEEL BRACKET	8	
10	7020-080003-00001	FRONT BRAKE DISC	2	
11	A000-080001	SCREW	8	


制动系统/BRAKE SYSTEM

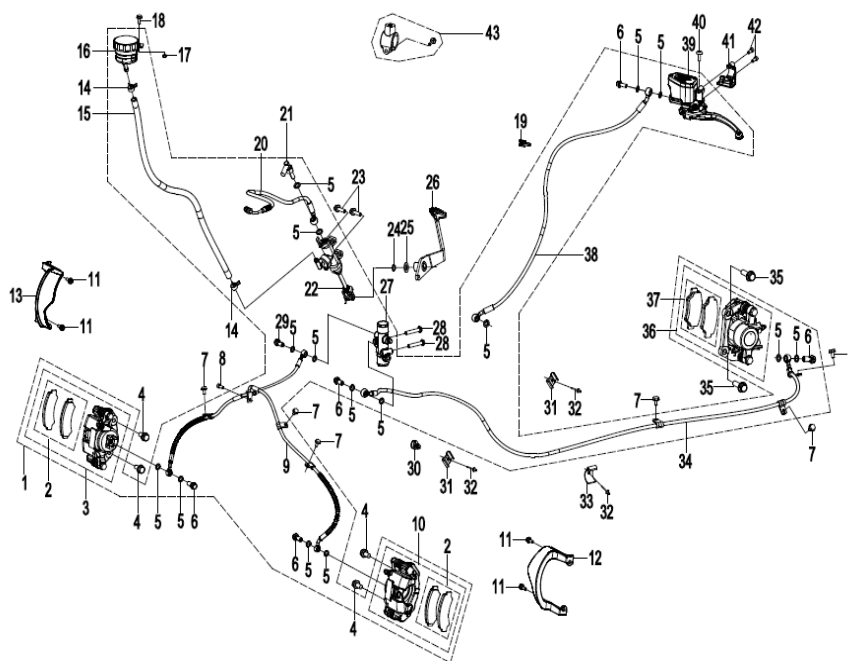

F08-V1 BRAKE SYSTEM

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CQV-081000-3000	HYDRAULIC BRAKE	1	
2	9DQV-0813A0	BRAKE PAD	2	
3	9CQV-081400-3000	FRONT BRAKE CALIPER, RH	1	
4	30006-102020810	BOLT M10x1.25x20	4	M10x1.25x20
5	901B-080102	WASHER	18	80
6	7020-081004	BANJO BOLT	5	
7	30006-060010810	BOLT M6x10	6	GB5789 M6x10 TRIVALENT CHROMIUM 8.8
8	30102-060016810	SCREW	1	
9	9DQV-080150-3000	FRONT BRAKE FLUID HOSE	1	
10	9CQV-081300-3000	FRONT BRAKE CALIPER, LH	1	
11	8010-000004	BOLT M6x14	4	M6x14
12	9DS #-080001-6001	GUARD, FRONT LH CV JOINT	1	
13	9DS #-080002-6001	GUARD, FRONT RH CV JOINT	1	
14	9010-080405	CLAMP	2	
15	9DQV-080101-3000	RESERVOIR HOSE	1	
16	9DQV-080110-3000	BRAKE FLUID RESERVOIR	1	
17	30204-060810	NUT M6	1	M6
18	30006-060016810	BOLT M6x16	1	M6x16
19	8010-150003	TIE BAND	1	5x250
20	9DQV-080170-3000	FLUID HOSE, BRAKE MASTER CYLINDER	1	
21	9DQV-080010-3000	HYDRAULIC SENSOR SWITCH	1	
22	9DQV-081800-3000	MASTER CYLINDER	1	
23	30006-080025810	BOLT	2	M8x25
24	30801-01405	CIRCLIPS FOR SHAFT14	1	14
25	30304-140410	WASHER	1	14
26	9DQV-080210-3000	BRAKE PEDAL	1	
26	9DQV-080210-3001	PEDAL, BRAKE	1	
27	7020-081070	HYDRAULIC DISTRIBUTION VALVE	1	
28	30006-080045810	BOLT M8x45	2	M8x45
29	7020-081005	BANJO BOLT, LONG	1	
30	7030-150005	TIE BAND	1	
31	9DQV-080003-3000	PLASTIC CLASP 3	2	
32	30902-0400820	BLIND RIVET	3	4x8
33	9DQV-080001-3000	PLASTIC CLASP 1	1	
34	9CQV-080160-3000	REAR BRAKE FLUID HOSE	1	
35	30006-102030810	BOLT M10x1.25x30	2	M10x1.25x30
36	9CQV-081600-3000	REAR BRAKE CALIPER, RH	1	
37	9DQV-0815A0	BRAKE PAD	1	
38	9DQV-080130-3000	FLUID HOSE, HAND BRAKE	1	
38	9DQV-080130-3000	FLUID HOSE, HAND BRAKE	1	
39	9DQV-081100-3000	MASTER CYLINDER, LH HAND BRAKE	1	
40	9010-080004	M8 RUBBER PLUG	1	
41	9AY0-080005	PRESS CAP, HAND BRAKE MASTER CYLINDER	1	
41	9DQV-080005-3000	PRESS CAP, HAND BRAKE MASTER CYLINDER	1	
42	30102-060016870	SCREW M6x16	2	
43	9CRV-080400-2400	MOUNTING SEAT, REAR VIEW MIRROR	1	
43	9DQV-080400-4200	REAR VIEW MIRROR BRACKET	1	


制动系统/BRAKE SYSTEM

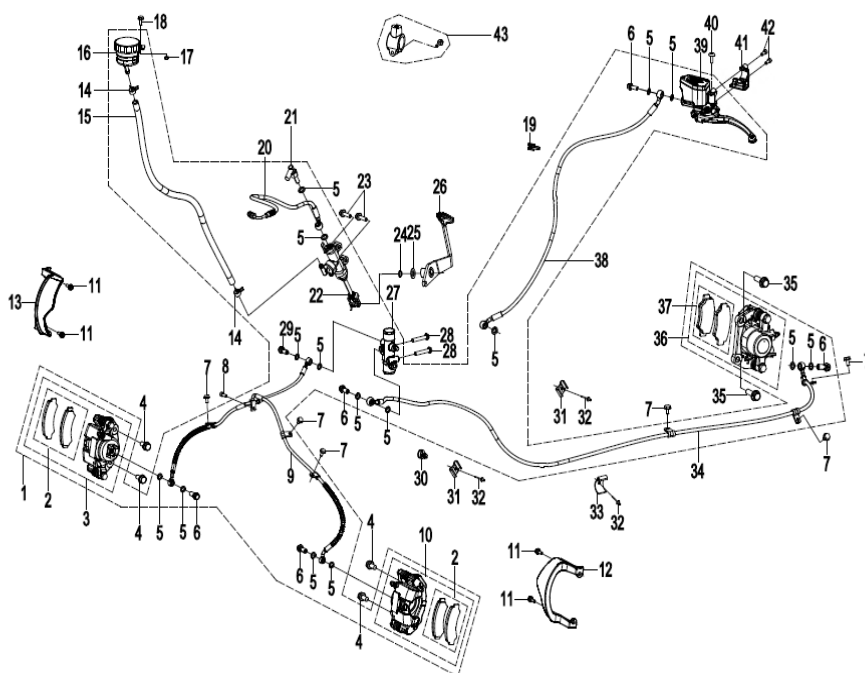

F08-V2 BRAKE SYSTEM

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CQV-081000-3001	HYDRAULIC BRAKE ASSY	1	
2	9DQV-0813A1	BRAKE PAD ASSY	2	
3	9CQV-081400-3001	FRONT RH BRAKE CALIPER	1	
4	30006-102020810	BOLT M10x1.25x20	4	M10x1.25x20
5	901B-080102	WASHER	18	80
6	7020-081004	BANJO BOLT	5	
7	30006-060010810	BOLT M6x10	6	GB5789 M6x10 TRIVALENT CHROMIUM 8.8
8	30102-060016810	SCREW	1	
9	9DQV-080150-3001	FRONT BRAKE FLUID HOSE	1	
10	9CQV-081300-3001	FRONT LH BRAKE CALIPER	1	
11	8010-000004	BOLT M6x14	4	M6x14
12	9DS #-080001-6001	GUARD, FRONT LH CV JOINT	1	
13	9DS #-080002-6001	GUARD, FRONT RH CV JOINT	1	
14	9010-080405	CLAMP	2	
15	9DQV-080101-3000	RESERVOIR HOSE	1	
16	9DQV-080110-3000	BRAKE FLUID RESERVOIR	1	
17	30204-060810	NUT M6	1	M6
18	30006-060016810	BOLT M6x16	1	M6x16
19	8010-150003	TIE BAND	1	5x250
20	9DQV-080170-3001	FLUID HOSE, BRAKE MASTER CYLINDER	1	
21	9DQV-080010-3000	HYDRAULIC SENSOR SWITCH	1	
22	9DQV-081800-3000	MASTER CYLINDER	1	
23	30006-080025810	BOLT	2	M8x25
24	30801-01405	CIRCLIPS FOR SHAFT14	1	14
25	30304-140410	WASHER	1	14
26	9DQV-080210-3001	PEDAL, BRAKE	1	
27	7020-081070	HYDRAULIC DISTRIBUTION VALVE	1	
28	30006-080045810	BOLT M8x45	2	M8x45
29	7020-081005	BANJO BOLT, LONG	1	
30	7030-150005	TIE BAND	1	
31	9DQV-080003-3000	PLASTIC CLASP 3	2	
32	30902-0400820	BLIND RIVET	3	4x8
33	9DQV-080001-3000	PLASTIC CLASP 1	1	
34	9CQV-080160-3000	REAR BRAKE FLUID HOSE	1	
35	30006-102030810	BOLT M10x1.25x30	2	M10x1.25x30
36	9CQV-081600-3001	REAR RH BRAKE CALIPER	1	
37	9DQV-0815A1	BRAKE PAD ASSY	1	
38	9DQV-080130-3001	FLUID HOSE, HAND BRAKE	1	
39	9DQV-081100-3001	LH HAND BRAKE MASTER CYLINDER	1	
40	9010-080004	M8 RUBBER PLUG	1	
41	9AY0-080005	PRESS CAP, HAND BRAKE MASTER CYLINDER	1	
41	9DQV-080005-3000	PRESS CAP, HAND BRAKE MASTER CYLINDER	1	
42	30102-060016870	SCREW M6x16	2	
43	9CRV-080400-2400	MOUNTING SEAT, REAR VIEW MIRROR	1	
43	9DQV-080400-4200	REAR VIEW MIRROR BRACKET	1	


F10-1方向把/ HANDLEBAR

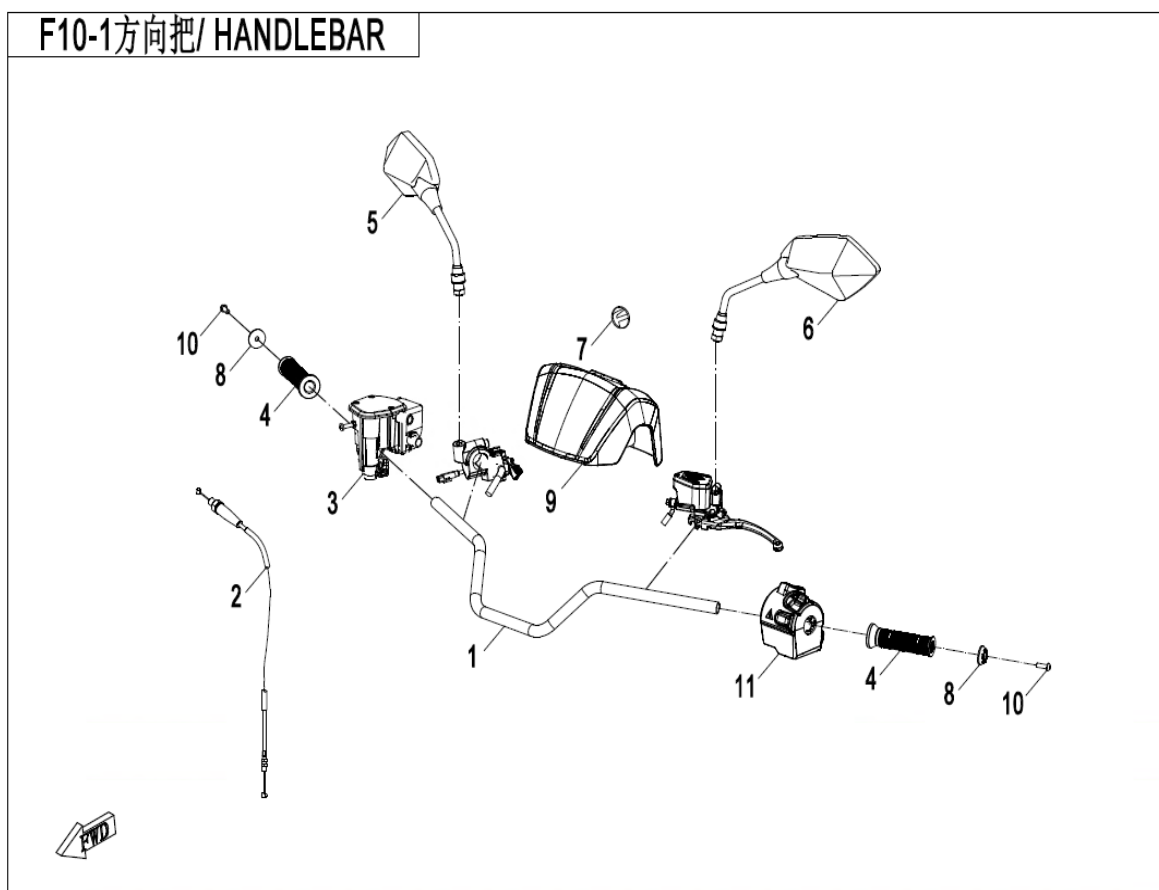

F10-1 HANDLEBAR

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DQV-101100-3000-0BU00	HANDLEBAR ASSY	1	MIST SILVER BLACK
1	9DQV-101100-3001	HANDLEBAR ASSY	1	
02	9CR6-105000	THROTTLE CABLE	1	
03	9DQV-169080-4000	2WD/4WD SWITCH ASSY	1	
04	9DQV-100005-3000	RUBBER SLEEVE, HAND GRIP	2	
05	9AY0-200300	REAR VIEW MIRROR ASSY, RH	1	
06	9AY0-200200	REAR VIEW MIRROR ASSY, LH	1	
07	9AWV-190001-2E00	CFMOTO STICKER	1	
08	9DQV-100003-3000	END CAP, HANDLEBAR	2	
09	9DQV-100002-3000	UPPER GUARD, HANDLEBAR	1	
10	30121-080020870	SCREW M8x20	2	
11	9DQV-166000-4200	HANDLEBAR SWITCH, LH	1	


F10-2-A 转向系统/STEERING SYSTEM

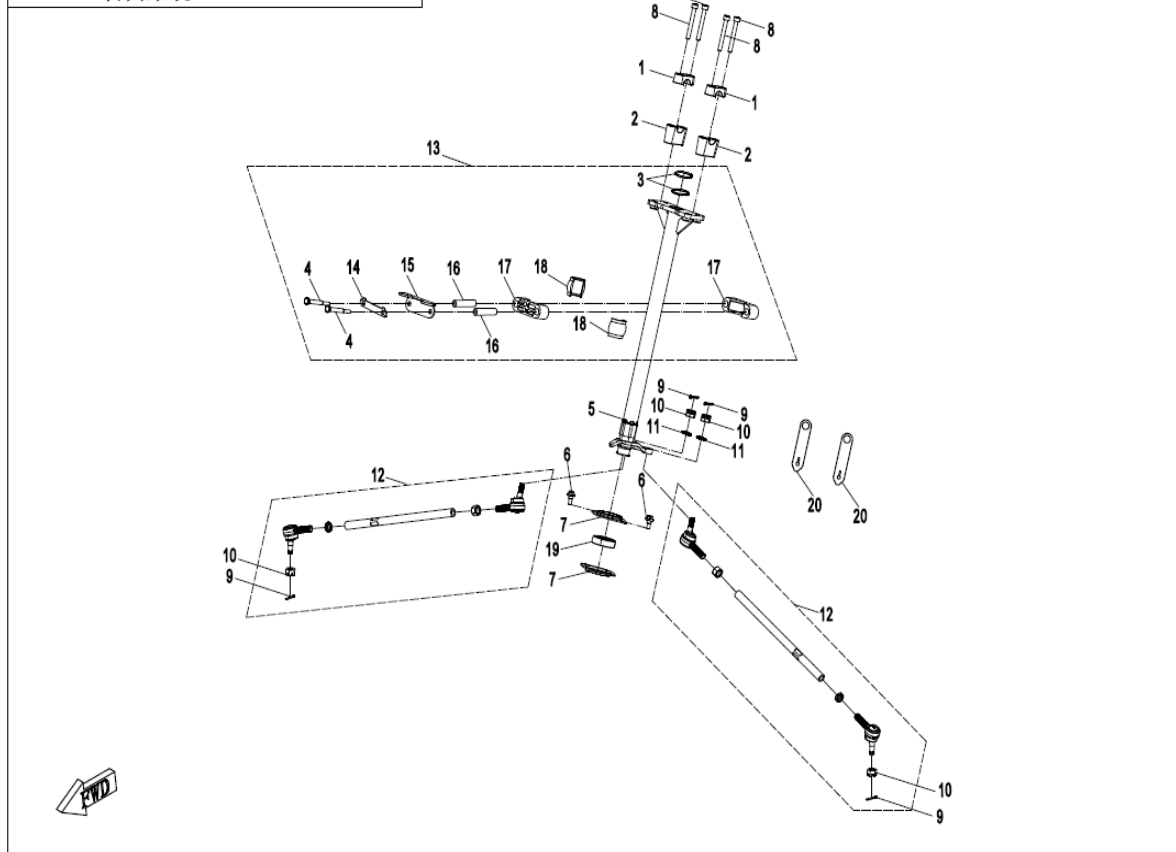

F10-2-A STEERING SYSTEM

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DSV-100001-6K01	HANDLEBAR BLOCK	2	
02	9DQV-100004-3000	LOWER BLOCK, HANDLEBAR	2	
03	30502-032800N	O-RING	2	32x1.8
04	30003-080075810	BOLT M8x75	2	M8x75
05	9DQV-101200-3000	STEERING SHAFT ASSY	1	
06	7020-100001	BOLT M8x22	2	M8x22
07	7020-100301-10000	SEAT, STEERING SHAFT	2	
08	30102-080065810	SCREW	4	
09	30903-0201610	COTTER PIN	4	2.0x16
10	9010-100002	1-TYPE NUT	4	M10x1.25
11	30306-100112	WASHER	2	10
12	9DQV-100530-3000	STEERING ROD	2	
13	7020-1006A0	BUSHING, STEERING SHAFT	1	
14	7020-100603	LOCKING PIECE	1	
15	7020-100610-10000	LINKING PLATE ASSY	1	
16	7020-100604-00001	BUSHING	2	
17	7020-100601-00001	OUTER BUSHING, STEERING SHAFT SPHERICAL	2	
18	7020-100602	INNER BUSHING, STEERING SHAFT SPHERICAL	2	
19	7020-100600	BEARING, OUTER SPHERICAL	1	205
20	6KJ0-100002	TIE BAND, CLUTCH	2	


F10-2-B 转向系统/STEERING SYSTEM

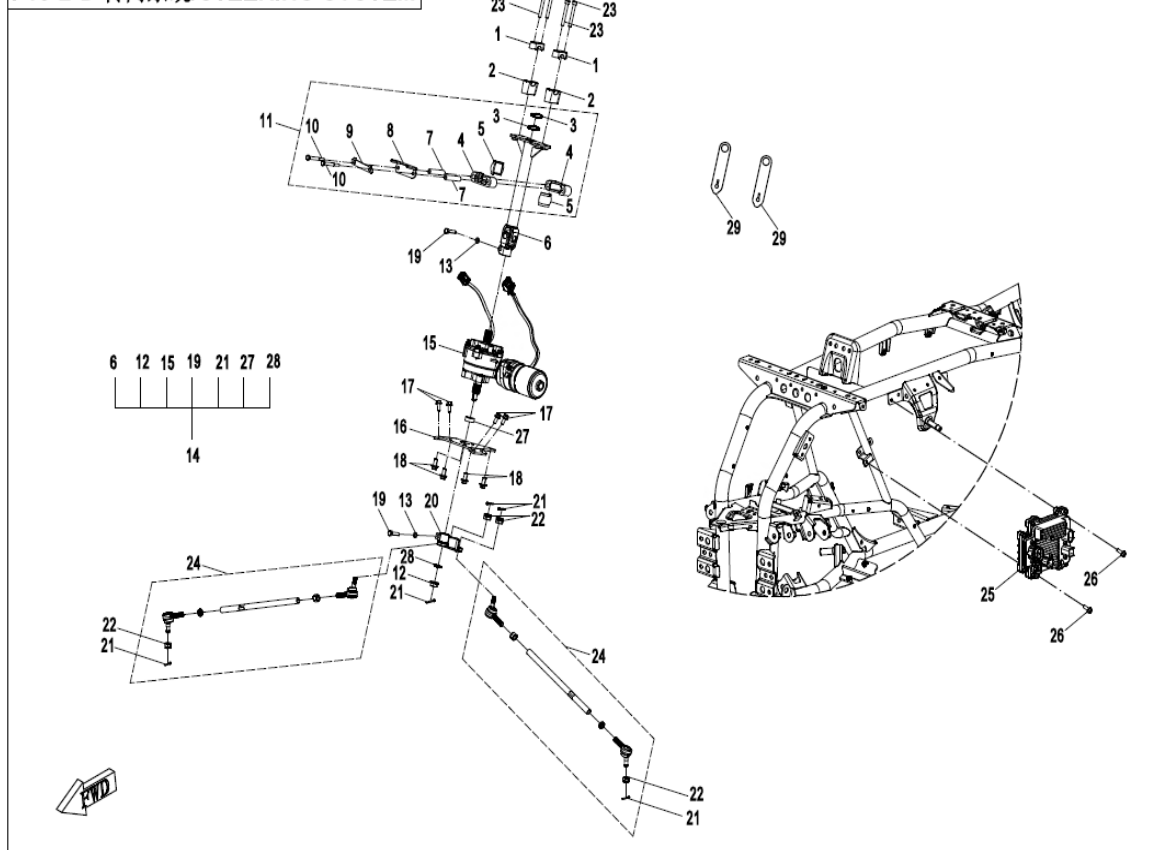

F10-2-B TEERING SYSTEM (EPS)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DSV-100001-6K01	HANDLEBAR BLOCK	2	
02	9DQV-100004-3000	LOWER BLOCK, HANDLEBAR	2	
03	30502-032800N	O-RING	2	32x1.8
04	7020-100601-00001	OUTER BUSHING, STEERING SHAFT SPHERICAL	2	
05	7020-100602	INNER BUSHING, STEERING SHAFT SPHERICAL	2	
06	9DQV-101200-3100	STEERING SHAFT, EPS	1	
07	7020-100604-00001	BUSHING	2	
08	7020-100610-10000	LINKING PLATE ASSY	1	
09	7020-100603	LOCKING PIECE	1	
10	30003-080075810	BOLT M8x75	2	M8x75
11	7020-1006A0	BUSHING, STEERING SHAFT	1	
12	30204-122810	NUT M12x1.25	1	M12x1.25
13	30303-080110	WASHER	2	8
14	9DQV-1508B0	EPS STEERING ASSY	1	
15	9CR6-103300-30000	EPS DRIVER	1	
16	9DQV-100001-3100	BRACKET, EPS	1	
17	30006-080025810	BOLT	4	M8x25
18	30006-100020810	BOLT M10x20	4	M10x20
19	9CR6-102003	BOLT M8x35	2	M8x35
20	9DQV-100006-3100	EPS STEERING ARM	1	
21	30903-0201610	COTTER PIN	5	2.0x16
22	9010-100002	1-TYPE NUT	4	M10x1.25
23	30102-080065810	SCREW	4	
24	9DQV-100530-3000	STEERING ROD	2	
25	9DQV-150810-3100-10	EPS CONTROLLER	1	
26	30006-060012810	BOLT M6x12	2	M6x12
27	9CR6-103003	SPLINE SLEEVE	1	
28	30306-120112	WASHER	1	12
29	6KJ0-100002	TIE BAND, CLUTCH	2	


手把护罩/ HAND GUARD

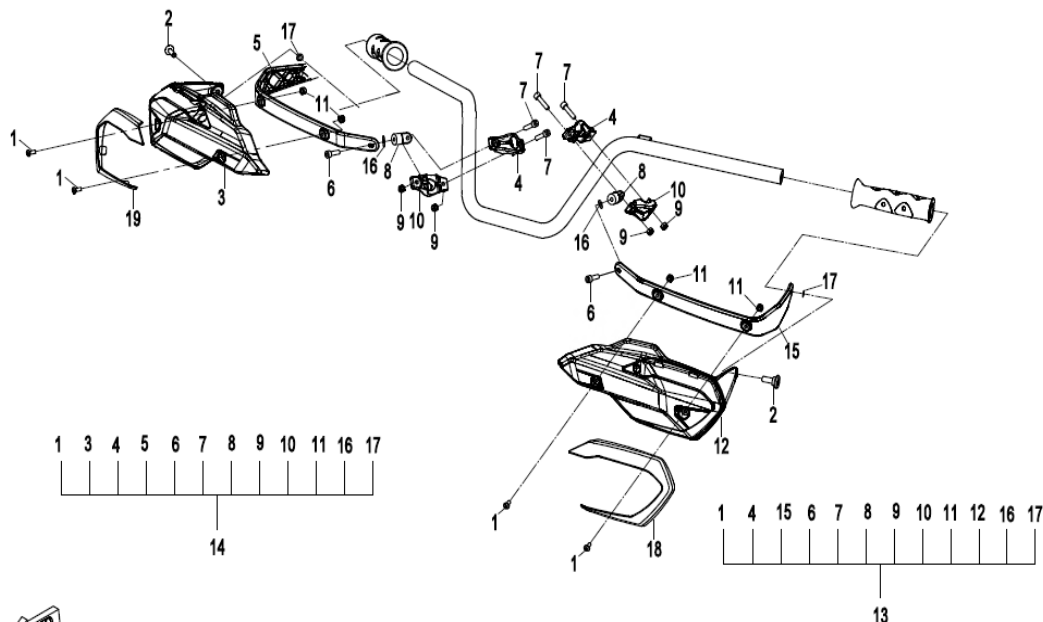

F10-3 HAND GUARD

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	6NQ#-000206-6001	INNER HEX SCREW M6x16	4	M6x16
02	A000-080001	SCREW	2	
03	9AWA-101301-10000	HAND GUARD, RH	1	
04	9CR6-101202-10000	SEAT, BRACKET	2	
05	9AWA-101303-10000	HANDGUARD LEVER, RH	1	
06	6NQ#-000203-6001	INNER HEX SCREW M6x20	2	M6x20
07	30102-060025700	SCREW M6x25	4	M6x25
08	9CR6-101203-10000	CONNECTOR, BRACKET	2	
09	30224-060800	NUT	4	
10	9CR6-101204-10000	PRESS COVER, BRACKET	2	
11	30212-060810	CAP-SHAPE BOLT M6	4	M6
12	9AWA-101201-10000	HAND GUARD, LH	1	
13	9AWA-1012B0	LH HAND GUARD ASSY	1	
14	9AWA-1013B0	RH HAND GUARD ASSY	1	
15	9AWA-101203-20000	HANDGUARD LEVER, LH	1	
16	30305-060112	WASHER	2	6
17	30305-080112	WASHER	2	8
18	9AWA-101202-0YD00	DECO PLATE, LH HAND GUARD	1	LAVA ORANGE
18	9AWA-101202-0BM00	DECO PLATE, LH HAND GUARD	1	NEBULA BLACK
19	9AWA-101302-0BM00	DECO PLATE, RH HAND GUARD	1	NEBULA BLACK
19	9AWA-101302-0YD00	DECO PLATE, RH HAND GUARD	1	LAVA ORANGE


后轮/ REAR WHEEL

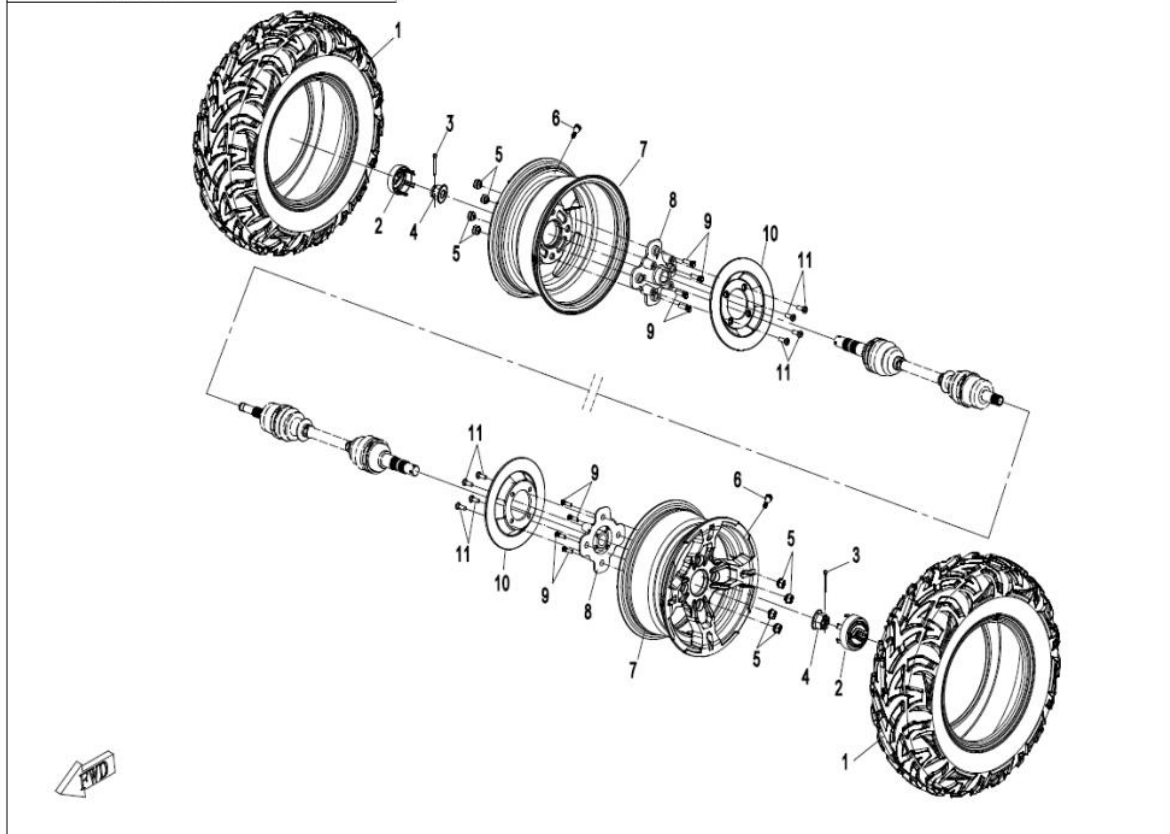

F11-A REAR WHEEL (ALUMINUM)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	30703-1272	TIRE	2	24x10.00-12 6PR(53J)
01	30703-1274	TIRE	2	
01	30703-1276	TIRE	2	25
02	5ASV-070101-6001	DECO COVER, RIM	2	WITH CFMOTO LOGO
03	30903-0403610	COTTER PIN	2	40x36
04	5HY0-110001	HEX FLANGE NUT	2	
05	9010-070002-A000	MOUNTING NUT, RIM	8	CHROME PLATED
06	5190-070030-1000	VALVE, INFLATION	2	
07	5AS0-110100-6000-11	REAR RIM	2	MATTE BLACK
08	9AWV-110001-2B00	REAR WHEEL BRACKET	2	
09	9010-070201	BOLT, FRONT WHEEL BRACKET	8	
10	7020-080004-00001	REAR BRAKE DISC	2	
11	A000-080001	SCREW	8	


后轮/ REAR WHEEL

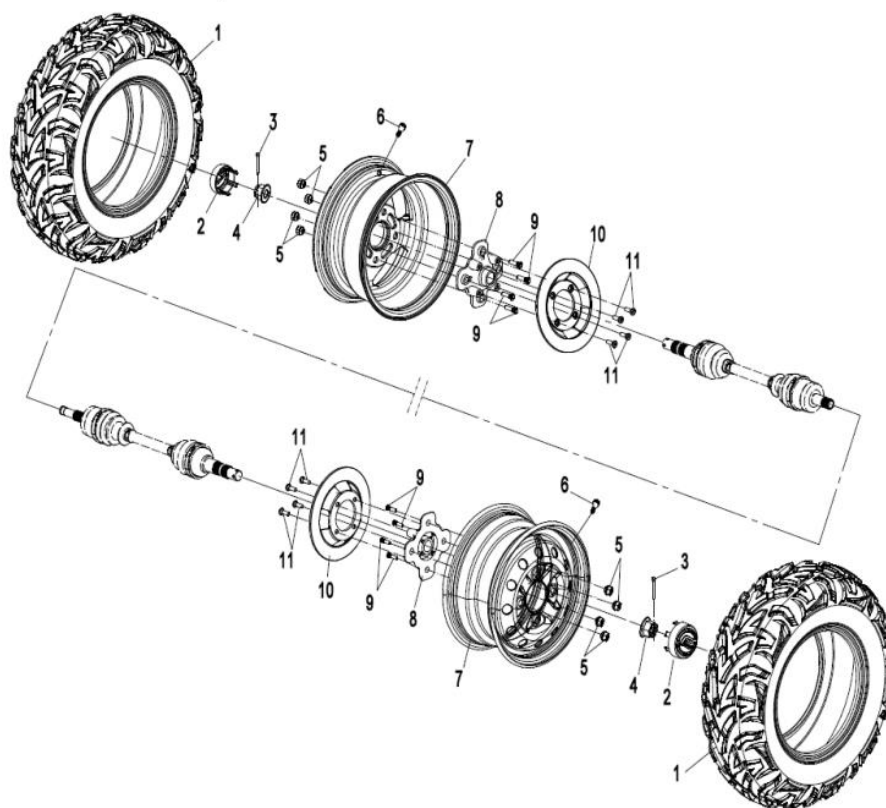

F11-B REAR WHEEL ((STEEL))

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	30703-1272	TIRE	2	24x10.00-12 6PR(53J)
01	30703-1274	TIRE	2	
01	30703-1276	TIRE	2	25
02	9010-040028-1000	DECO COVER, STEEL RIM	2	FOR 12" STEEL WHEEL
03	30903-0403610	COTTER PIN	2	40x36
04	5HY0-110001	HEX FLANGE NUT	2	
05	9010-070002	MOUNTING NUT, RIM	8	ARMY GREEN
05	9010-070002	MOUNTING NUT, RIM	8	CHROME PLATED
06	5190-070030-1000	VALVE, INFLATION	2	
07	7020-110100-1B000	REAR RIM	2	12 IN, STEEL RIM, BLACK
08	9AWV-110001-2B00	REAR WHEEL BRACKET	2	
09	9010-070201	BOLT, FRONT WHEEL BRACKET	8	
10	7020-080004-00001	REAR BRAKE DISC	2	
11	A000-080001	SCREW	8	


油箱/FUEL TANK

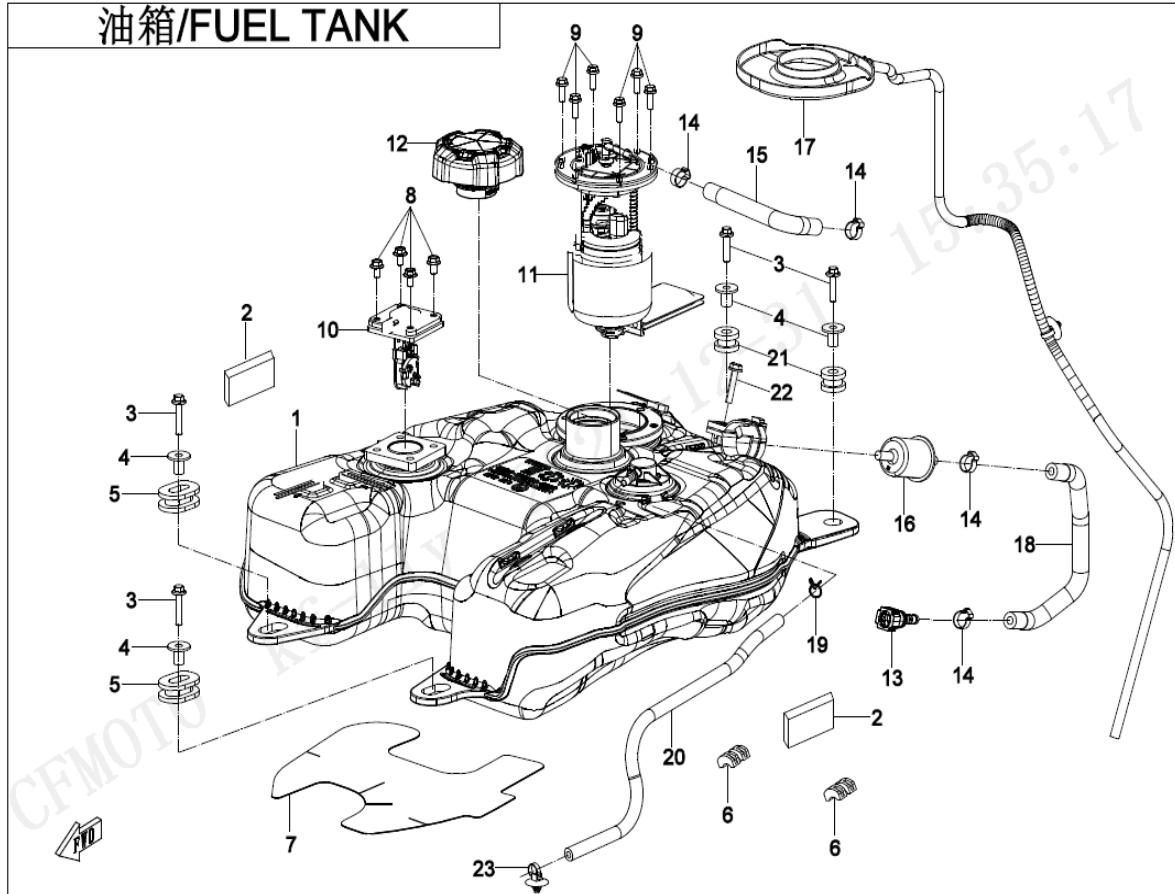

F12 FUEL TANK

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DQV-120100-3000	FUEL TANK ASSY	1	
02	9010-120008	SPONGE PAD, FUEL TANK	4	
03	30006-060030810	BOLT M6x30	4	M6x30
04	9010-120310	RUBBER LINER, FUEL TANK	4	
05	9010-120006	FRONT RUBBER SLEEVE, FUEL TANK	2	
06	9010-120005	CUSHION MAT, FUEL TANK	2	
07	9DQV-120010-3000	HEAT INSULATOR, FUEL TANK	1	
08	30006-060012810	BOLT M6x12	4	M6x12
09	30006-050014810	BOLT M5x14	6	M5x14
10	9DQV-170200-3000	OIL LEVEL SENSOR	1	
11	9DQV-150900-3000	FUEL PUMP ASSY	1	
12	9DS#-120300-6000	CAP, FUEL TANK	1	
13	6KJ0-120330-10000	QUICK JOINT	1	
14	7020-120006	CLAMP Dia 16.6	4	
15	9DQV-120210-3000	HIGH-PRESSURE FUEL HOSE ASSY 1	1	
16	805A-120004	FUEL FILTER, EFI	1	
17	9DQV-120300-3000	FUEL PAN	1	
18	9DQV-120220-3000	HIGH-PRESSURE FUEL HOSE ASSY 2	1	
18	9DQV-120220-3001	HIGH-PRESSURE FUEL HOSE ASSY 2	1	
19	30601-112010	CLAMP A12	1	A12
20	9DQV-360001-3000	FUEL VAPOR ADSORPTION HOSE 1	1	
21	9010-120007	REAR CUSHION SLEEVE, FUEL TANK	2	
22	30006-060025810	BOLT M6x25	1	M6x25
23	7030-150005	TIE BAND	1	


座垫/ SEAT

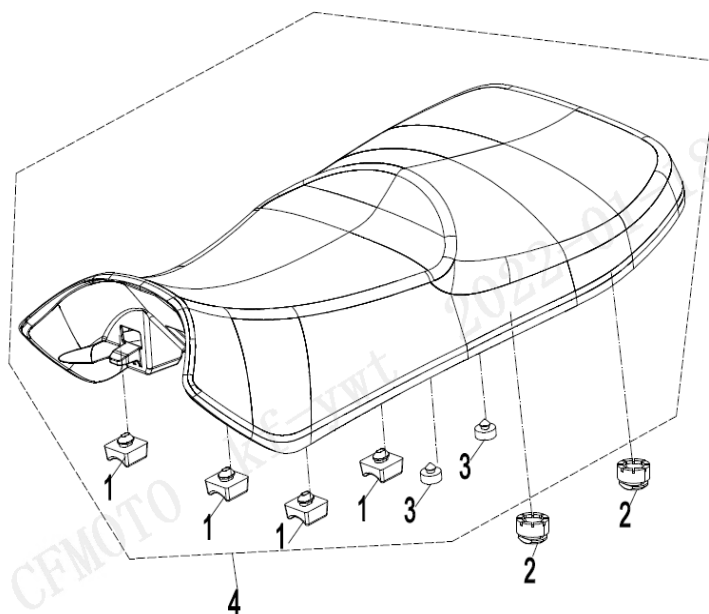

F13 SEAT


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DQV-130002-3000	DAMPING RUBBER GASKET	4	
02	7020-130001	RUBBER SLEEVE, SEAT	2	
03	8030-130211	CUSHION RUBBER WAHSER	2	
04	9CQV-130000-3000	SEAT ASSY	1	

货架/RACK

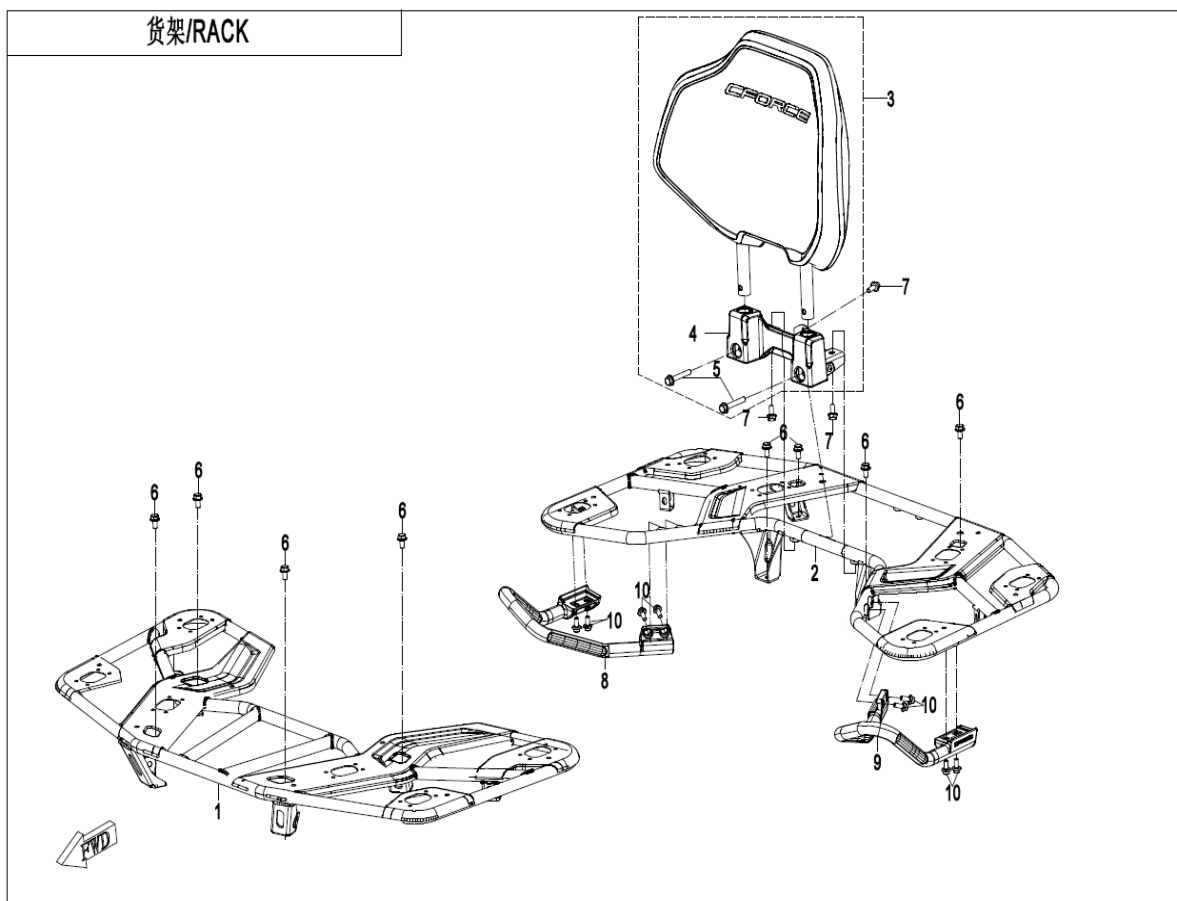

F14 RACK


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-141000-3000-0BP00	FRONT RACK ASSY	1	MAUD SPIRIT BLACK
2	9DQV-142000-3000-0BP00	REAR RACK ASSY	1	MAUD SPIRIT BLACK
3	9CQV-131000-3000	BACKREST ASSY	1	
4	9CQV-131200-3000	ADAPTER BRACKET ASSY	1	
5	30006-080050870	BOLT	2	
6	30006-080016810	BOLT M8x16	8	M8x16
7	30006-080020870	BOLT	3	
8	9CQV-140700-3000	RH ARMREST ASSY	1	
9	9CQV-140600-3000	LH ARMREST ASSY	1	
10	30102-080020870	SCREW M8x20	8	

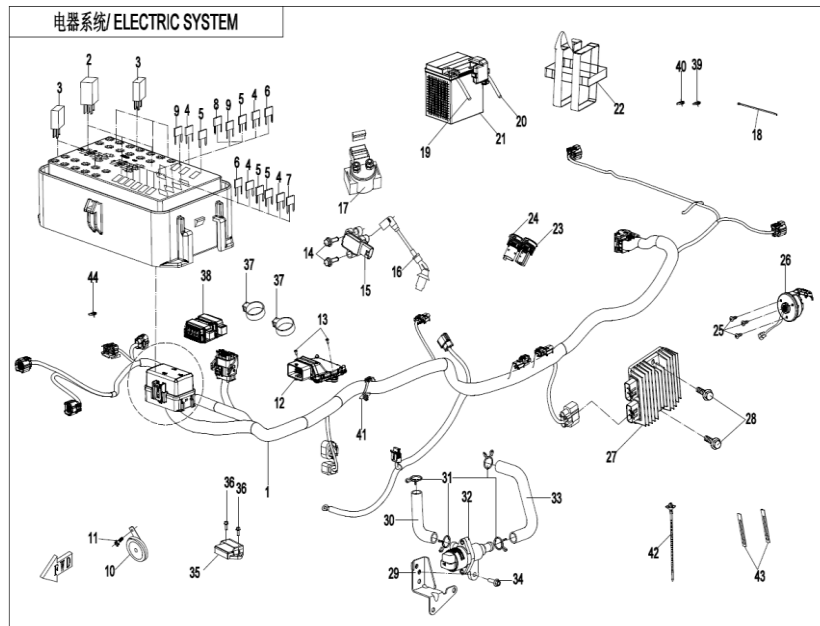

F15-1 ELECTRIC SYSTEM


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9CQV-150100-3000	MAIN CABLE	1	
01	9CQV-150100-3001	MAIN CABLE	1	
02	9010-150350	AUXILIARY RELAY	3	
03	5BY4-150330	AUXILIARY RELAY	6	
04	806A-151305	FUSE 15A	4	15A
05	806A-151302	FUSE 10A	4	10A
06	806A-151307	25A FUSE	2	
07	5BY0-150301	30A FUSE	1	
08	5BY0-150302	40A FUSE	1	
09	806A-151301	FUSE 7.5A	2	7.5A
10	5020-150700	ELECTRIC HORN	1	
11	30006-080014810	BOLT M8x14	1	M8x14
12	9DQV-001000-4000	ECU	1	
12	9DQV-001000-4300	ECU	1	
13	30105-060016410	SCREW M6x16	2	M6x16
14	30006-060025810	BOLT M6x25	2	M6x25
15	018B-178000	IGNITION COIL	1	
16	0GRO-178000-10000	HIGH VOLTAGE CABLE	1	
17	9CR6-150310	STARTER RELAY	1	
18	8010-150003	TIE BAND	6	5x250
19	9CQV-150420-3000	NEGATIVE CABLE, BATTERY	1	
19	9CQV-150420-3001	NEGATIVE CABLE, BATTERY	1	
20	9DQV-150410-3000	POSITIVE CABLE, BATTERY	1	
20	9DQV-150410-3001	POSITIVE CABLE, BATTERY	1	
21	31023004	BATTERY	1	DYNAVOLT,12V30Ah
22	9060-152100	BELT, BATTERY	1	
23	9DSV-150600-6R01	USB OUTLET SOCKET ASSY	1	
24	9DSV-150500-6R01	POWER OUTLET SOCKET ASSY	1	
25	30105-050030410	SCREW M5x30	3	M5x30
26	9DQV-151300-3100	POWER SOCKET, TRAILER	1	
27	9DQV-151000-3000	REGULATOR	1	
28	30006-060030810	BOLT M6x30	2	M6x30
29	9GQA-030010-20000	BRACKET, STEPPER MOTOR	1	
30	9GQA-001002-10000	AIR OUTLET PIPE, STEPPER MOTOR SEAT	1	
31	30601-118010	CLAMP A18	4	
32	0GQ0-175000	STEPPER MOTOR	1	
33	9GQA-001001	INLET PIPE, STEPPER MOTOR SEAT	1	
34	30006-060016810	BOLT M6x16	1	M6x16
35	9DRV-161000-B000	FLASHER	1	
36	5BWV-040008-5000	INNER HEX BOLT M6x20	2	M6x20
37	6KMV-150901-B001	RUBBER RING, T-BOX	2	
38	6GUV-151800-7100-M1	T-BOX	1	
38	6GUV-151800-7500-M1	T-BOX	1	
38	6GUV-151800-6900-M1	T-BOX	1	
38	6GUV-151800-7300-M1	T-BOX	1	
38	6KMV-150900-B001	T-BOX	1	
38	6NQV-150900-3001-M1	T-BOX	1	
38	6NQV-150900-B101-M1	T-BOX	1	
38	6NTV-150900-C201-M1	T-BOX	1	
38	6KMV-150900-B002	T-BOX	1	
38	6GUV-151800-7301-M1	T-BOX	1	
38	6GUV-151800-6901-M1	T-BOX	1	
38	6GUV-151800-7501-M1	T-BOX	1	
38	6GUV-151800-7101-M1	T-BOX	1	
39	A000-050015	WIRE CLIP, FRONT BRAKE FLUID HOSE	1	
40	CFCV-CBC001-2001-M1	CLIP	2	
41	9DS#-150009-6100-M1	TIE BAND ZDG4.7x194	1	
42	7030-150005	TIE BAND	7	
43	0180-014010	WIRE CLAMP	2	
44	CFCV-156103-2000	PLUG, T-BOX CONNECTOR	1	

绞盘/TOWING WINCH

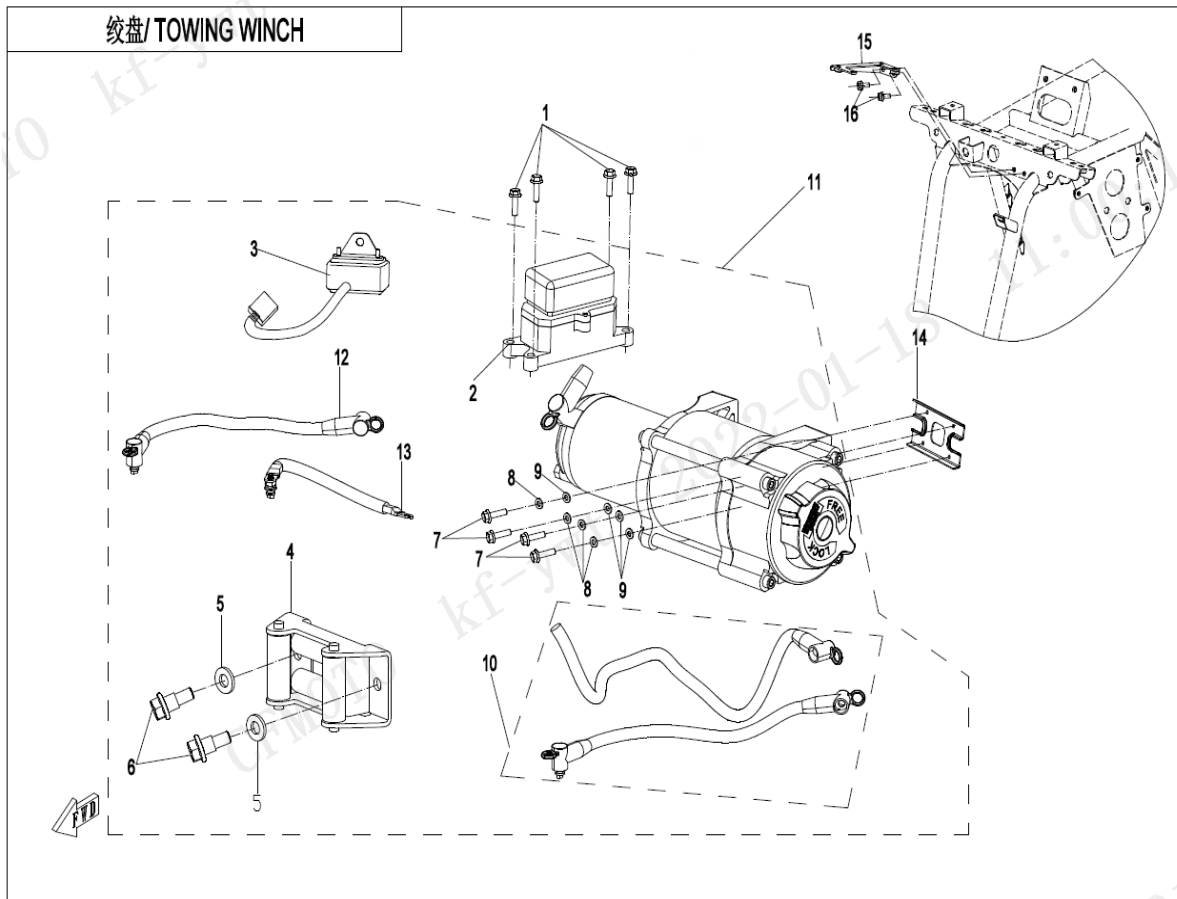


F15-2 绞盘 TOWING WINCH

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	30006-060022810	BOLT	4	@
02	5HYV-150720-1C00	WINCH CONTROL RELAY	1	
03	9DQV-150730-3000	WINCH CONTROL SWITCH	1	
04	9030-150730	CABLE PULLEY	1	
05	30303-100112	WASHER	2	
06	30004-100025810	BOLT M10x25	2	M10x25
07	30006-080025810	BOLT	4	M8x25
08	30304-080420	WASHER	4	
09	30303-080112	WASHER	4	8
10	9DQV-150760-3000	MOTOR CABLE, WINCH	1	
11	9CQV-150700-3000	WINCH ASSY	1	
12	9CQV-150770-3000	POSITIVE WIRE, WINCH	1	
13	9DQV-150780-3000	NEGATIVE WIRE, WINCH	1	
14	9DQV-030130-3000	MOUNTING BRACKET, WINCH	1	
15	9DQV-030060-3000	BRACKET, WINCH RELAY	1	
16	30006-060012810	BOLT M6x12	2	M6x12

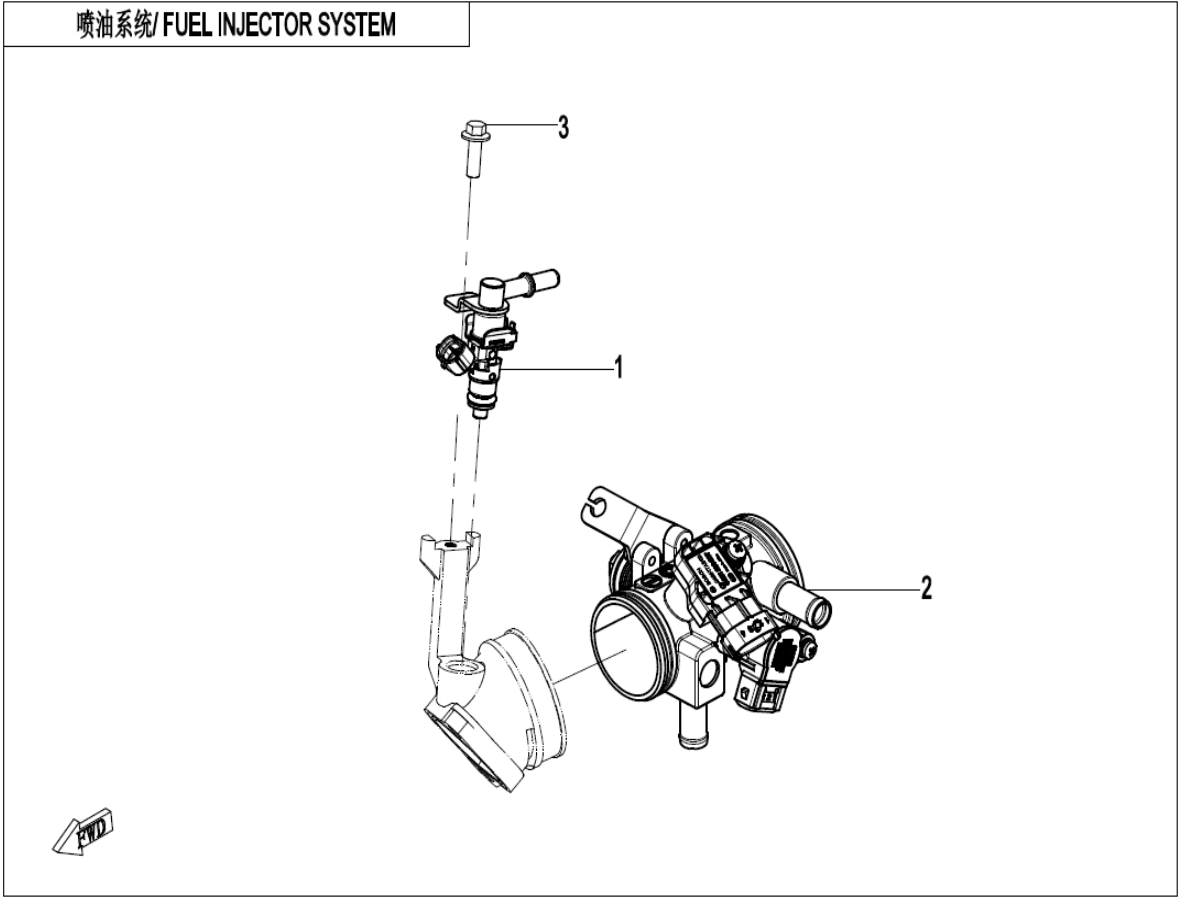


F15-3 FUEL INJECTION SYSTEM

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0GQ#-172000-1100	FUEL INJECTOR ASSY.	1	
02	0GQ0-173000-20000	THROTTLE BODY	1	FULL POWER
03	0110-090008-0030	BOLT M6x14	1	M6x14

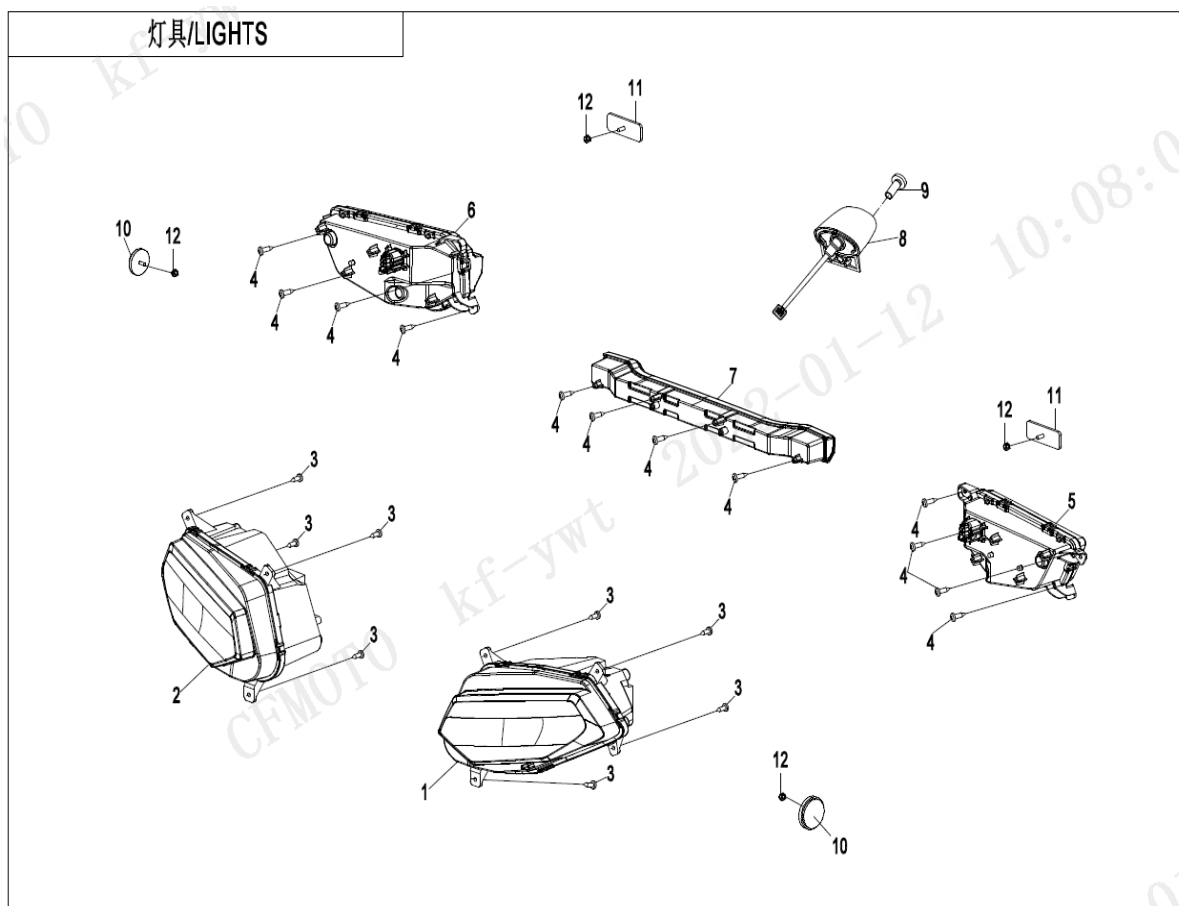

F16 LIGHTS


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DQV-160111-3000	LH HEADLIGHT	1	
01	9DQV-160111-3001	HEADLIGHT, LH	1	
02	9DQV-160112-3000	RH HEADLIGHT	1	
02	9DQV-160112-3001	HEADLIGHT, RH	1	
03	30110-480160010	SELF-TAPPING SCREW ST4.8x16	8	ST4.8x16
04	30132-480130030	SELF-TAPPING SCREW ST4.8x13	12	ST4.8x13
05	9DQV-160210-3100	LH TAIL LIGHT	1	
06	9DQV-160220-3100	RH TAIL LIGHT	1	
07	9DSV-160230-7002	POSITION LIGHT	1	
07	9DSV-160230-7003	POSITION LIGHT	1	
08	9CR6-161400-10000	T3 LICENSE LIGHT	1	
09	30105-050012410	SCREW M5x12	1	M5x12
10	9DQV-160920-6001-M1	FRONT SIDE REFLECTOR	2	
11	9GQV-160910-2401-M1	REAR REFLECTOR	2	
12	30204-050810	NUT M5	4	M5

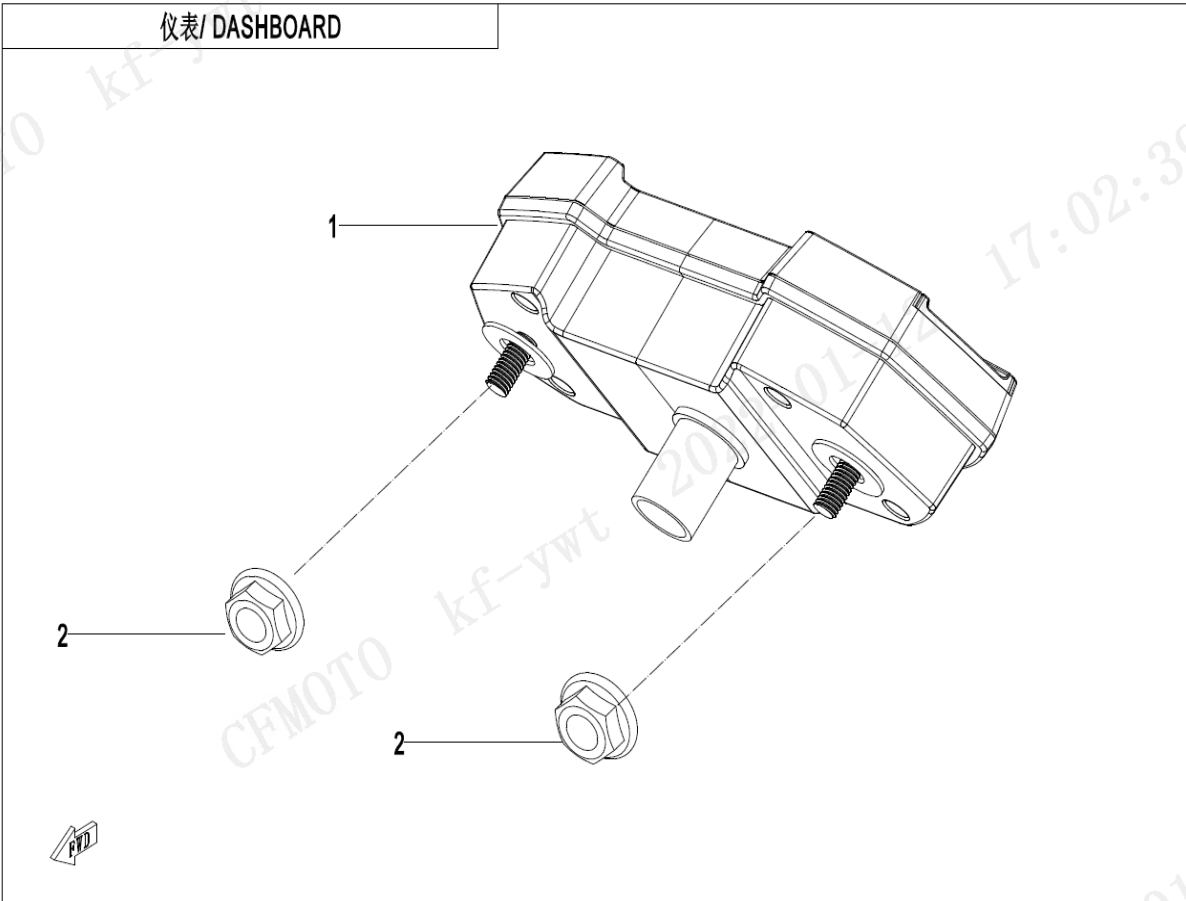

F17 DASHBOARD


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DQV-170100-3000	LCD DASHBOARD	1	
02	30202-060110	NUT M6	2	M6

冷却系统/ COOLING SYSTEM

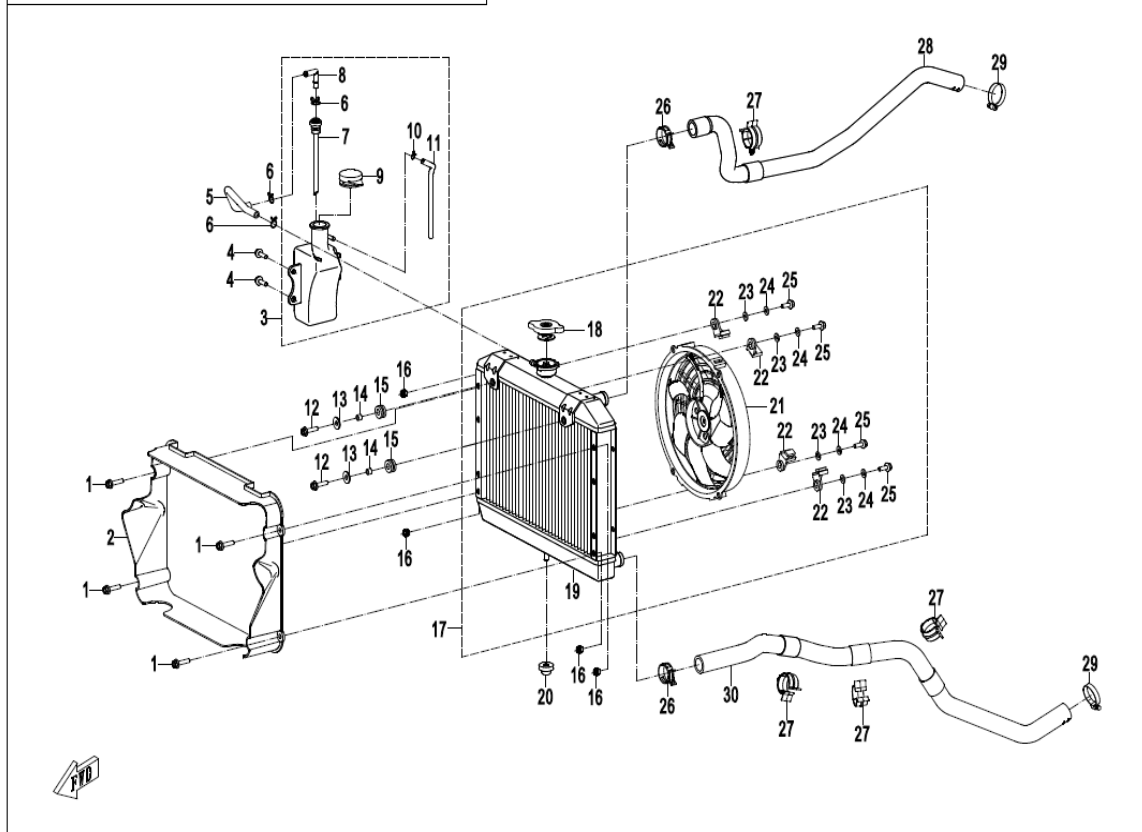


F18 COOLING SYSTEM

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	30006-060016870	BOLT M6x16	4	M6x16
2	9DQV-180004-3000	FRONT DEFLECTOR, RADIATOR	1	
3	9DQV-180300-3000	RESERVOIR TANK ASSY	1	
4	30006-060020810	BOLT M6x20	2	M6x20
5	9DQV-180003-3000	CONNECTING HOSE, RESERVOIR TANK	1	
6	30601-111010	CLAMP A11	6	A11
7	9DQV-180300-3000-22	HOSE, RESERVOIR TANK	1	
8	9DQV-180310-3000	JOINT, RESERVOIR TANK	1	
9	8010-180023	CAP, RESERVOIR TANK	1	
10	30601-108010	CLAMP A8	1	A8
11	9DQV-180300-3000-21	OVERFLOW HOSE, RESERVOIR TANK	1	
12	30006-060025810	BOLT M6x25	2	M6x25
13	30301-060412	WASHER	2	6
14	6090-040303	BUSHING	2	
15	9060-180027	RUBBER CUSHION, RADIATOR	2	
16	30202-060110	NUT M6	4	M6
17	9DQV-181000-3000	RADIATOR ASSY	1	
18	8010-180024	CAP, WATER FILLER	1	
19	9DQV-181100-3000	RADIATOR	1	
20	9060-180026	PIN RUBBER CAP, RADIATOR	1	
21	9DQV-181200-3000	FAN MOTOR	1	
22	9030-180071	ADAPTOR, CLIP	4	
23	30304-060410	WASHER	4	
24	30303-060112	WASHER	4	6
25	30006-060016810	BOLT M6x16	4	M6x16
26	A000-180006	CLAMP B30	2	B30
27	5ASV-180008-6000	HOSE CLIP	4	
28	9DQV-180001-3000	WATER OUTLET PIPE, RADIATOR	1	
29	9010-180007	CLAMP, WATER HOSE	2	
30	9DQV-180002-3000	WATER OUTLET PIPE, RADIATOR	1	

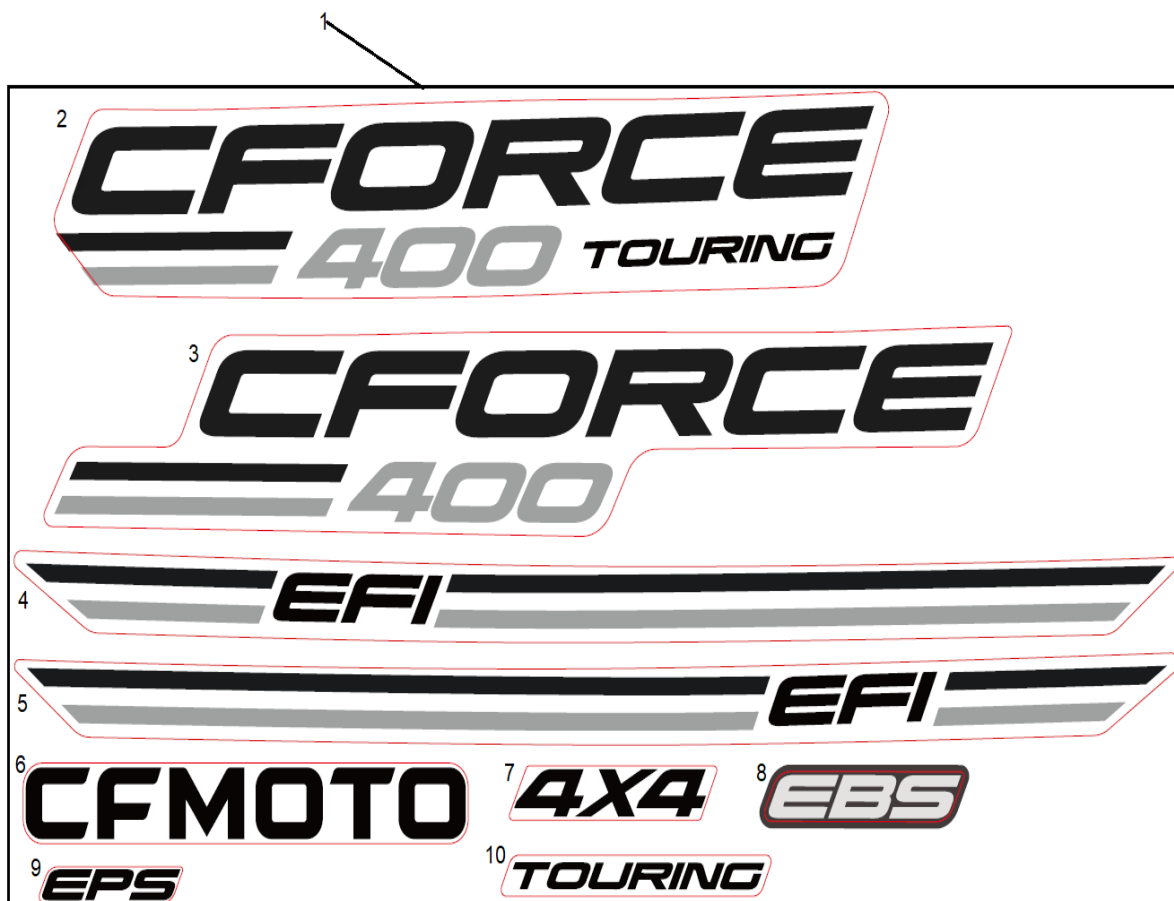


F19-1-A DECAL KITS (NA, CM INJECTED PEARL WHITE, LAVA ORANGE)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CQV-190020-4100-10	DECAL KIT	1	
2	9CQV-190201-4100-10	LH DECAL, FUEL TANK	1	
3	9DQV-190102-4000-10	RH DECAL, FUEL TANK	1	
4	9CQV-190103-4000-10	DECAL, LH PANEL	1	
5	9CQV-190104-4000-10	DECAL, RH PANEL	1	
6	9DQV-190105-3200-10	CFMOTO STICKER	2	
7	9DQV-190106-3200-10	4x4 DECAL	2	
8	9DQV-190107-4000-10	EPS DECAL	1	
9	9DQV-190109-3200-10	EPS DECAL	2	
10	9CQV-190211-4100-10	TOURING DECAL	1	

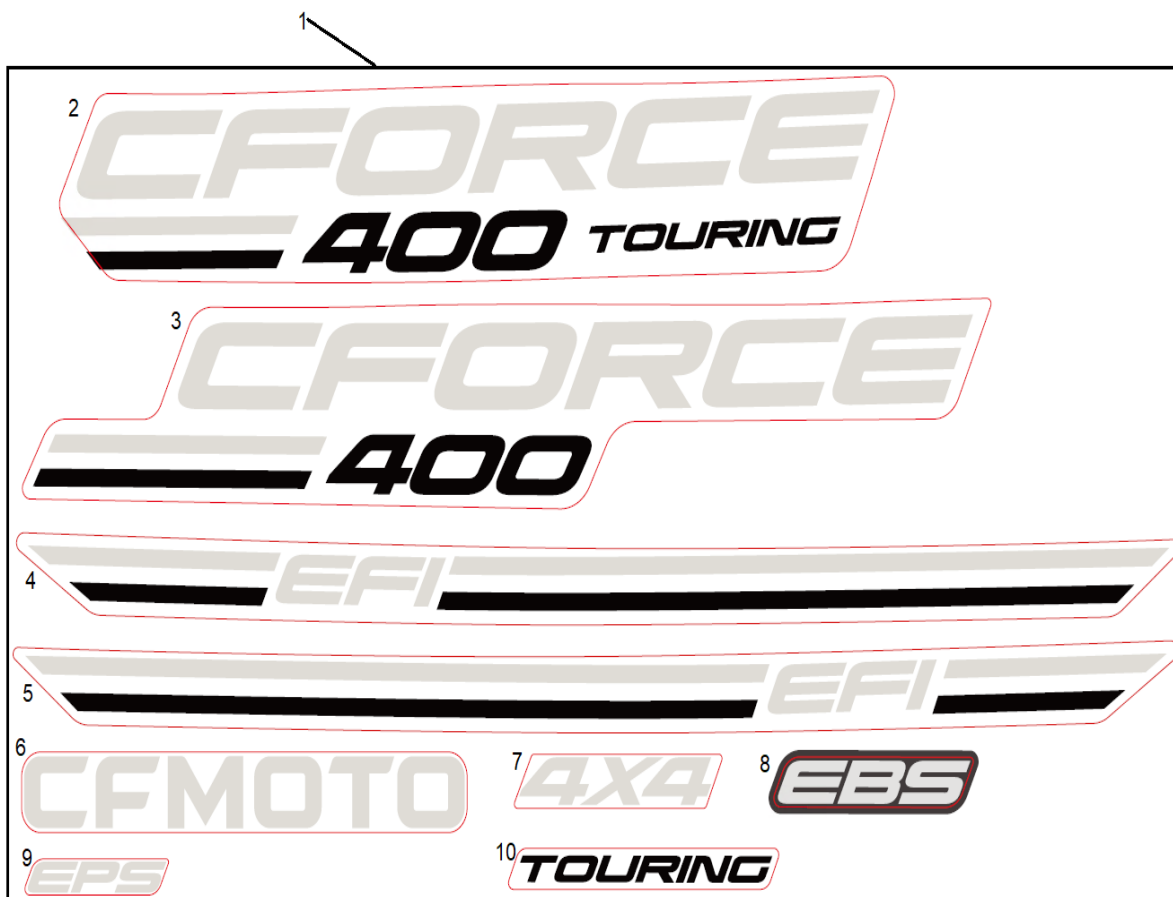


F19-1-B DECAL KITS (NA, CM HUNTER GREEN)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CQV-190020-4100-11	DECAL KIT	1	
2	9CQV-190201-4100-11	LH DECAL, FUEL TANK	1	
3	9DQV-190102-4000-11	RH DECAL, FUEL TANK	1	
4	9CQV-190103-4000-11	DECAL, LH PANEL	1	
5	9CQV-190104-4000-11	DECAL, RH PANEL	1	
6	9DQV-190105-4000-11	CFMOTO STICKER	2	
7	9DQV-190106-4000-11	4x4 DECAL	2	
8	9DQV-190107-4000-10	EPS DECAL	1	
9	9DQV-190109-4100-11	EPS DECAL	2	
10	9CQV-190211-4100-10	TOURING DECAL	1	

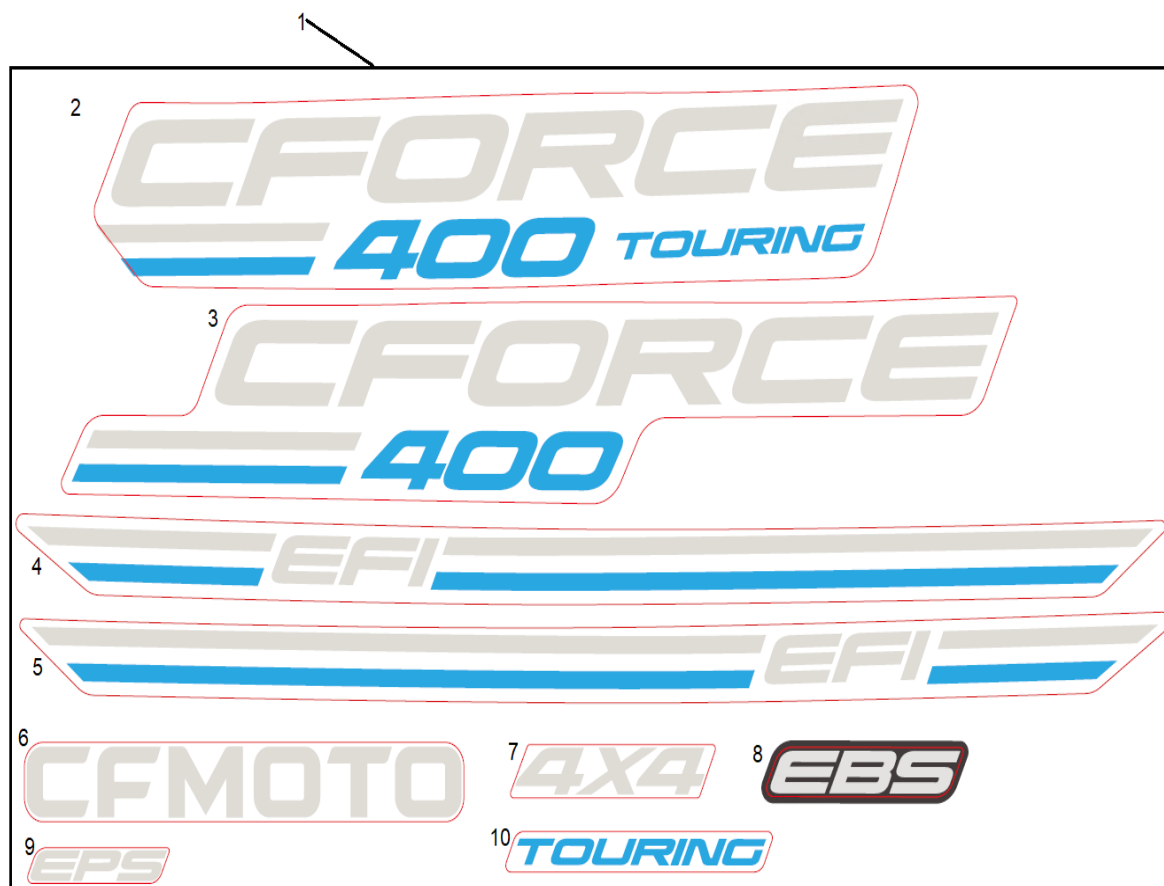


F19-1-C DECAL KITS (NA, CM EXPLORE BLUE)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CQV-190020-4100-12	DECAL KIT	1	
2	9CQV-190201-4100-12	LH DECAL, FUEL TANK	1	
3	9DQV-190102-4000-12	RH DECAL, FUEL TANK	1	
4	9CQV-190103-4000-12	DECAL, LH PANEL	1	
5	9CQV-190104-4000-12	DECAL, RH PANEL	1	
6	9DQV-190105-4000-11	CFMOTO STICKER	2	
7	9DQV-190106-4000-11	4x4 DECAL	2	
8	9DQV-190107-4000-10	EPS DECAL	1	
9	9DQV-190109-4100-11	EPS DECAL	2	
10	9CQV-190211-4100-12	TOURING DECAL	1	

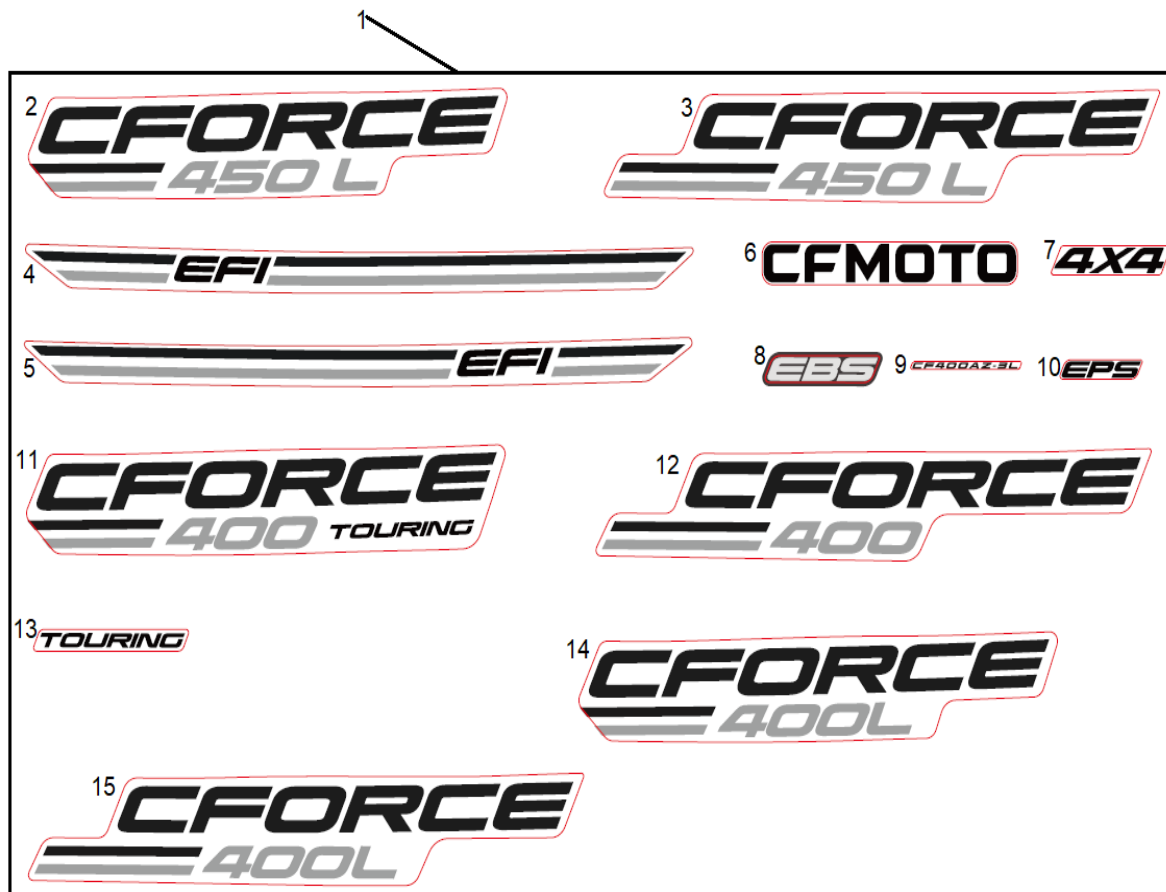


F19-1-D DECAL KITS (INT, CM INJECTED PEARL WHITE, LAVA ORANGE)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CQV-190020-4200-10	DECAL KIT	1	
2	9CQV-190101-3200-10	LH DECAL, FUEL TANK GUARD	1	
3	9CQV-190102-3200-10	RH DECAL, FUEL TANK GUARD	1	
4	9CQV-190103-4000-10	DECAL, LH PANEL	1	
5	9CQV-190104-4000-10	DECAL, RH PANEL	1	
6	9DQV-190105-3200-10	CFMOTO STICKER	2	
7	9DQV-190106-3200-10	4x4 DECAL	2	
8	9DQV-190107-4000-10	EPS DECAL	1	
9	9CQV-190108-4200-10	MODEL DECAL	2	
10	9DQV-190109-3200-10	EPS DECAL	2	
11	9CQV-190201-4100-10	LH DECAL, FUEL TANK	1	
12	9DQV-190102-4000-10	RH DECAL, FUEL TANK	1	
13	9CQV-190211-4100-10	TOURING DECAL	1	
14	9CQV-190113-4200-10	LH DECAL, FUEL TANK	1	
15	9CQV-190114-4200-10	RH DECAL, FUEL TANK	1	

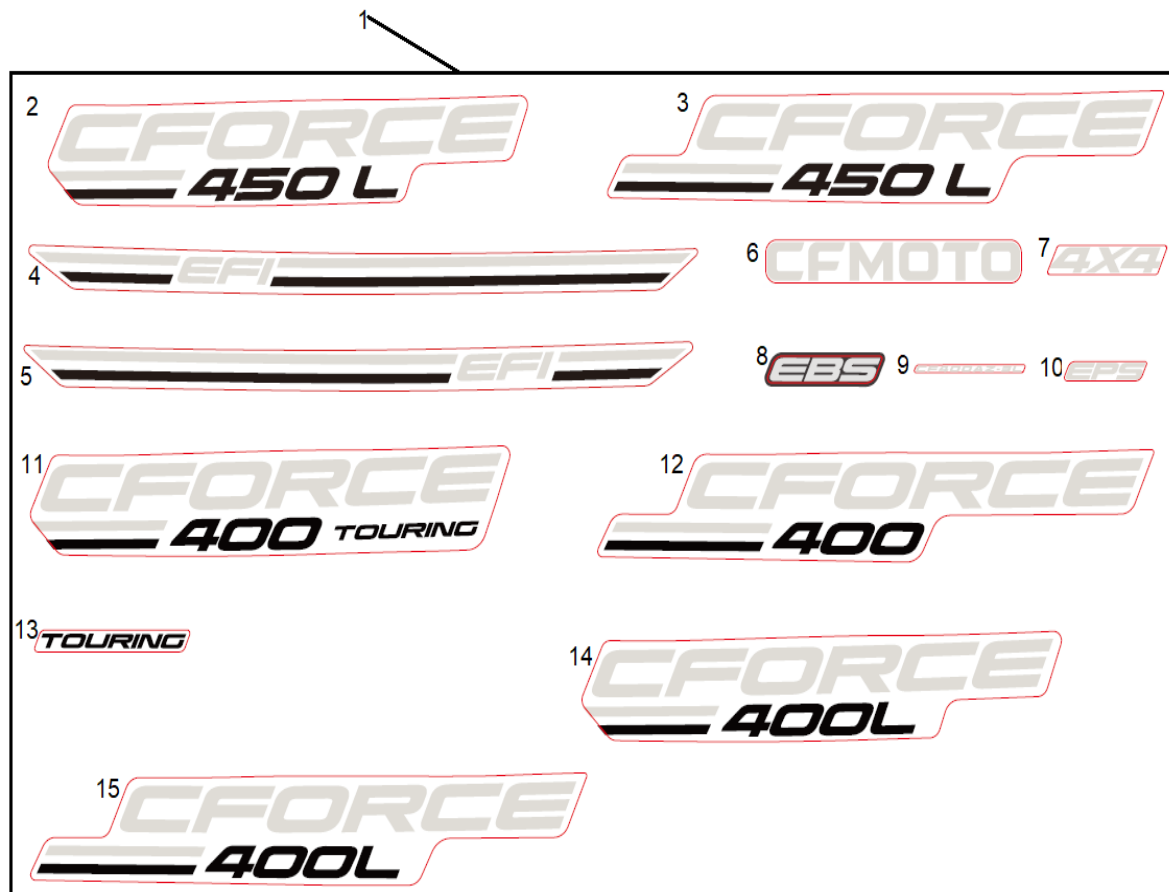

F19-1-E DECAL KITS INTERNATIONAL, CM HUNTER GREEN)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CQV-190020-4200-11	DECAL KIT	1	
2	9CQV-190101-3200-11	LH DECAL, FUEL TANK GUARD	1	
3	9CQV-190102-3200-11	RH DECAL, FUEL TANK GUARD	1	
4	9CQV-190103-4000-11	DECAL, LH PANEL	1	
5	9CQV-190104-4000-11	DECAL, RH PANEL	1	
6	9DQV-190105-4000-11	CFMOTO STICKER	2	
7	9DQV-190106-4000-11	4x4 DECAL	2	
8	9DQV-190107-4000-10	EPS DECAL	1	
9	9CQV-190108-4200-11	MODEL DECAL	2	
10	9DQV-190109-4100-11	EPS DECAL	2	
11	9CQV-190201-4100-11	LH DECAL, FUEL TANK	1	
12	9DQV-190102-4000-11	RH DECAL, FUEL TANK	1	
13	9CQV-190211-4100-10	TOURING DECAL	1	
14	9CQV-190113-4200-11	LH DECAL, FUEL TANK	1	
15	9CQV-190114-4200-11	RH DECAL, FUEL TANK	1	

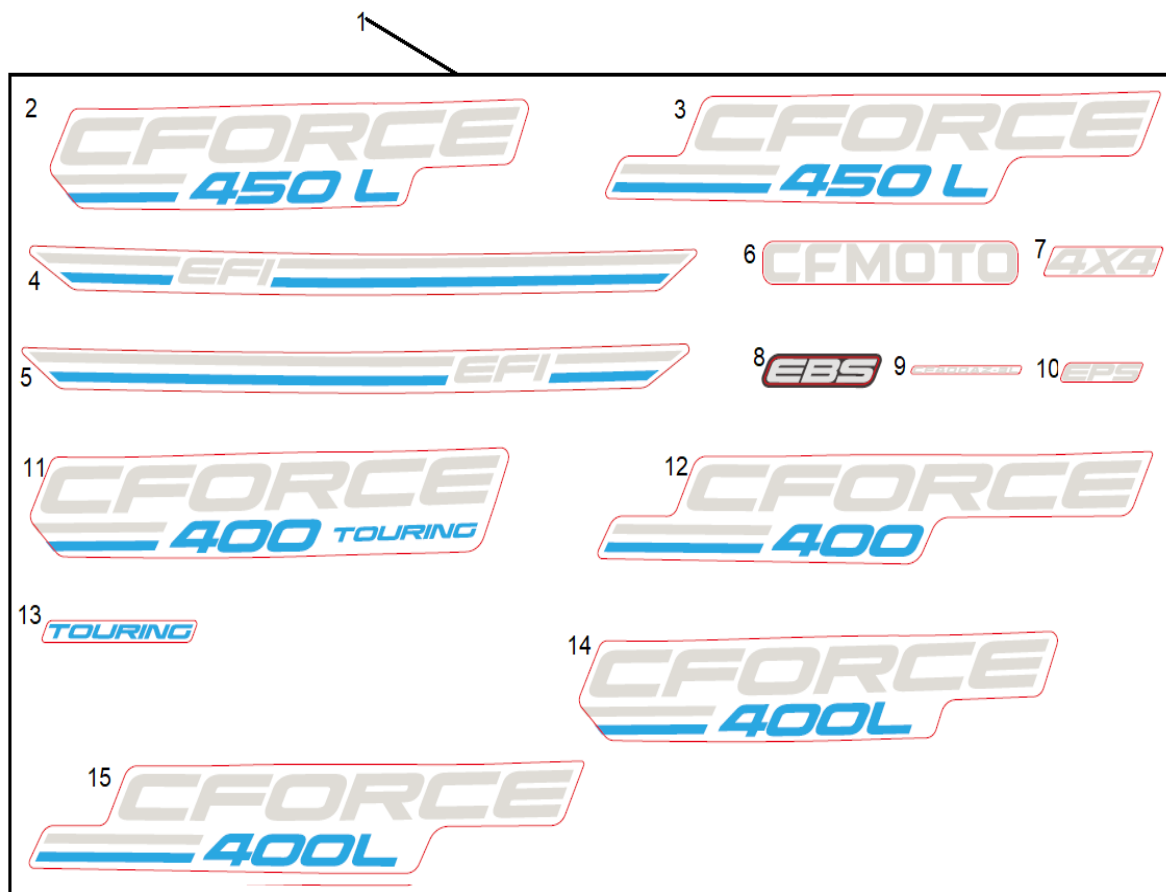


F19-1-F DECAL KITS (INTERNATIONAL, CM EXPLORE BLUE)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CQV-190020-4200-12	DECAL KIT	1	
2	9CQV-190101-3200-12	LH DECAL, FUEL TANK GUARD	1	
3	9CQV-190102-3200-12	RH DECAL, FUEL TANK GUARD	1	
4	9CQV-190103-4000-12	DECAL, LH PANEL	1	
5	9CQV-190104-4000-12	DECAL, RH PANEL	1	
6	9DQV-190105-4000-11	CFMOTO STICKER	2	
7	9DQV-190106-4000-11	4x4 DECAL	2	
8	9DQV-190107-4000-10	EPS DECAL	1	
9	9CQV-190108-4200-11	MODEL DECAL	2	
10	9DQV-190109-4100-11	EPS DECAL	2	
11	9CQV-190201-4100-12	LH DECAL, FUEL TANK	1	
12	9DQV-190102-4000-12	RH DECAL, FUEL TANK	1	
13	9CQV-190211-4100-12	TOURING DECAL	1	
14	9CQV-190113-4200-12	LH DECAL, FUEL TANK	1	
15	9CQV-190114-4200-12	RH DECAL, FUEL TANK	1	


巴西FM客户 CF400AU-3L




驾驶员警告贴花 115×178
9DQV-191001-4200

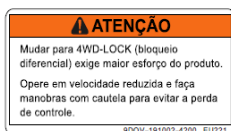


四驱行驶操作警告贴花
9DQV-191002-4200

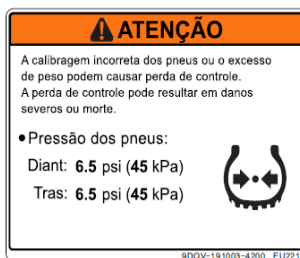


轮胎气压及负荷说明贴花 80×105
9DQV-191003-4200

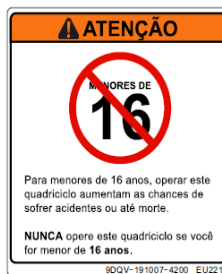


驾驶员年龄警告贴花 77×85
9DQV-191007-4200



拖挂载荷说明贴花 36×56
9DQV-191006-4200



前货架载荷说明贴花
9DQV-191004-4200




后货架载荷说明贴花
9DQV-191005-4200




乘员警告贴花 85×60
9DQV-191011-4200



安全警告说明贴花
9DQV-191013-4200

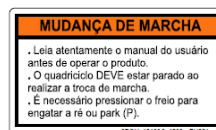


换挡操作说明贴花 40×75
9DQV-191008-4200



发动机机油警告贴花 60×30
9DQV-191009-4200

F19-2-A WARNING DECAL (BRAZIL)


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-191001-4200	DECAL, DRIVE WARNING	1	
2	9DQV-191002-4200	WARNING LABEL, 4WD OPERATION	1	
3	9DQV-191003-4200	INSTRUCTION LABEL, TIRE PRESSURE AND LOAD	1	
4	9DQV-191004-4200	INSTRUCTION LABEL, FRONT RACK LOAD	1	
5	9DQV-191005-4200	INSTRUCTION LABEL, REAR RACK LOAD	1	
6	9DQV-191006-4200	INSTRUCTION LABEL, TOWING LOAD	1	
7	9DQV-191007-4200	WARNING DECAL, DRIVER AGE	1	
8	9DQV-191008-4200	INSTRUCTION LABEL, GEAR SHIFT	1	
9	9DQV-191009-4200	WARNING DECAL, ENGINE OIL	1	
10	9DQV-191011-4200	WARNING DECAL, PASSENGER	1	
11	9DQV-191013-4200	DECAL, SAFETY WARNING	1	

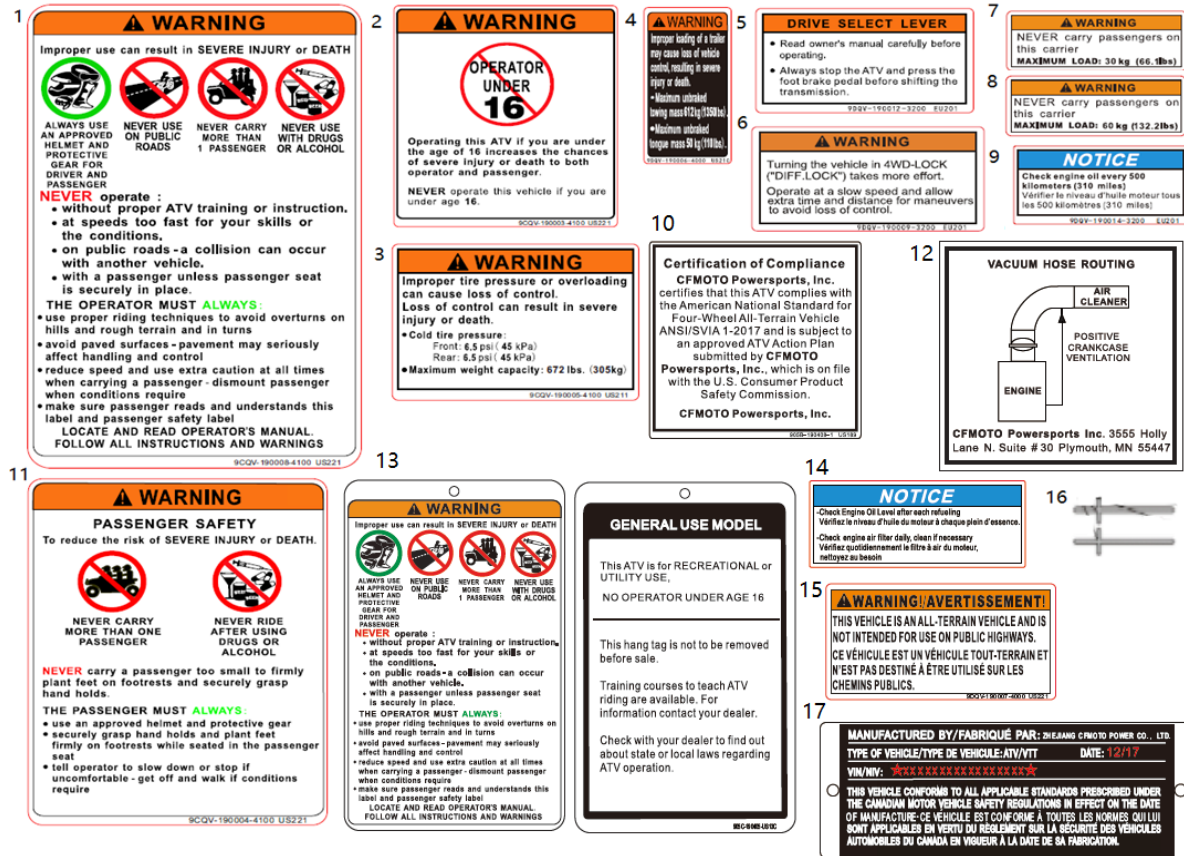

F19-2-B WARNING DECAL(NA)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9CQV-190008-4100	DECAL, DRIVE WARNING	1	
2	9CQV-190003-4100	WARNING DECAL, DRIVER AGE	1	
3	9CQV-190005-4100	INSTRUCTION DECAL, TIRE PRESSURE AND LOA	1	
4	9DQV-190006-4000	INSTRUCTION LABEL, TOWING LOAD	1	
5	9DQV-190012-3200	INSTRUCTION LABEL, GEAR SHIFT	1	
6	9DQV-190009-3200	WARNING LABEL, 4WD OPERATION	1	
7	9CQV-190002-3200	FRONT RACK LOADING INSTRUCTION LABEL	1	
8	9CQV-190003-3200	REAR RACK LOADING INSTRUCTION LABEL	1	
9	9DQV-190014-3200	WARNING DECAL, ENGINE OIL	1	
10	905B-190408-10000	DECLARATION DECAL	1	
11	9CQV-190004-4100	WARNING DECAL, PASSENGER	1	
12	905B-190412	LABEL, EXHAUST GAS RECYCLING DRAWING	1	
13	905C-190405-US13C	ANSI TAG	1	ANSI TAG
14	9DQV-190009-4000	WARNING DECAL, DASHBOARD	1	
15	9DQV-190007-4000	WARNING LABEL	1	
16	30902-0401320	BLIND RIVET	2	4x13
17	7020-191312	VIN PLATE	1	CANADA


专用工具/ TOOLS

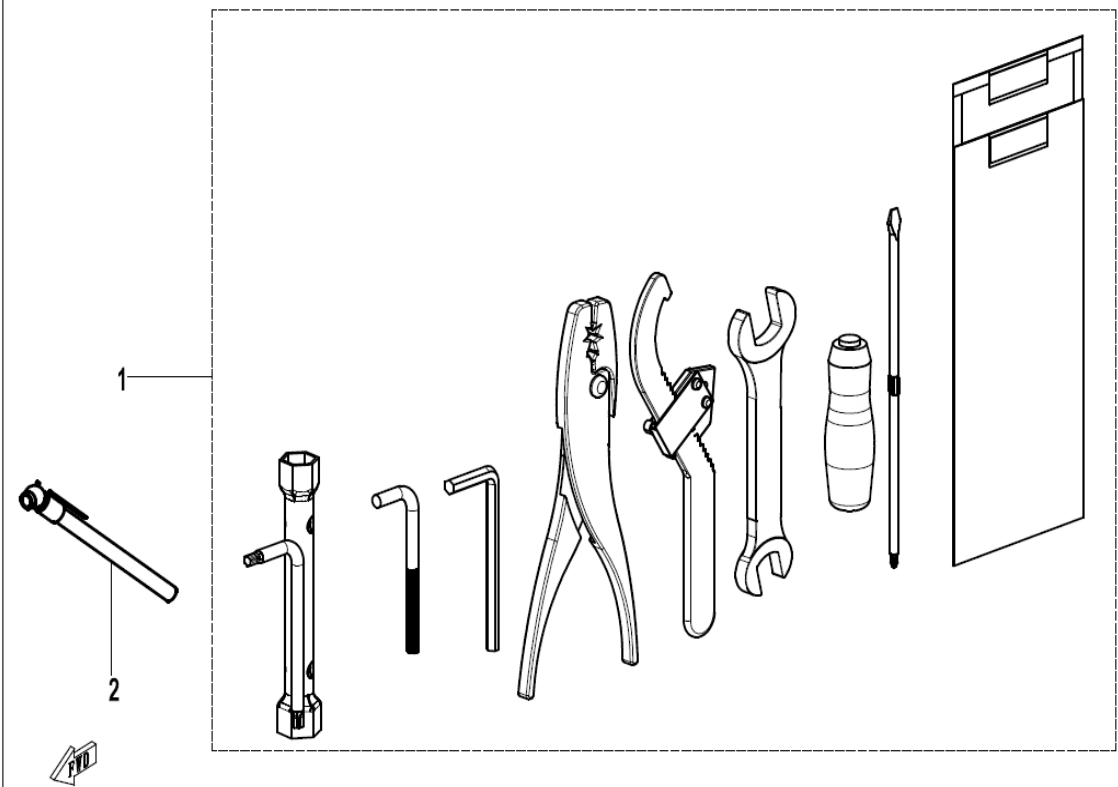

F20 TOOLS

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	5BWV-200100-5000	TOOL KIT	1	
02	TFQ002	TIRE PRESSURE PEN	1	


F23 保险杠组/BUMPER

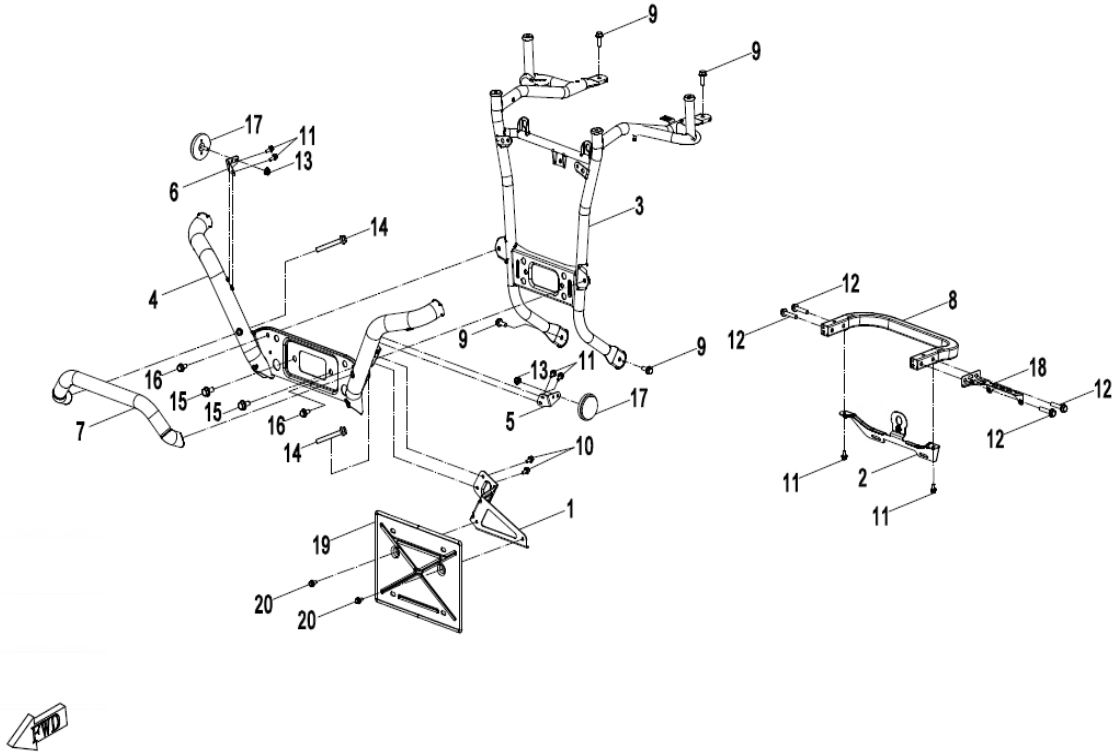

F23 BUMPER

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DQV-230010-3200	BRACKET, FRONT LICENSE	1	
02	9DQV-230020-3200	BRACKET, REAR LICENSE	1	
03	9DQV-231000-3000	FRONT BRACKET	1	
04	9DQV-232000-3000-0BP00	FRONT BUMOER ASSY	1	MAUD SPIRIT BLACK
05	9DQV-232005-3200	LH BRACKET, SIDE REFLECTOR	1	
06	9DQV-232006-3200	RH BRACKET, SIDE REFLECTOR	1	
07	9DQV-232200-3000-0BP00	CONNECTING PIPE, FRONT BUMPER	1	MAUD SPIRIT BLACK
08	9DQV-233000-3000-0BP00	REAR BUMPER ASSY	1	MAUD SPIRIT BLACK
09	30006-080020810	BOLT M8x20	4	M8x20
10	30006-060016810	BOLT M6x16	2	M6x16
11	30006-060012810	BOLT M6x12	6	M6x12
12	30006-080040810	BOLT M8x40	4	M8x40
13	30204-060810	NUT M6	2	M6
14	30006-080055810	BOLT M8x55	2	M8x55
15	30006-100020810	BOLT M10x20	2	M10x20
16	30006-080016810	BOLT M8x16	2	M8x16
17	9DQV-160920-6001-M1	FRONT SIDE REFLECTOR	2	
18	9DQV-030070-3000	BRACKET, FOG LIGHT	1	
19	7000-044601	BASE PLATE, FRONT LICENSE	1	
20	30006-060016870	BOLT M6x16	2	M6x16


F27 前桥等速传动轴/ FRONT CV SHAFT

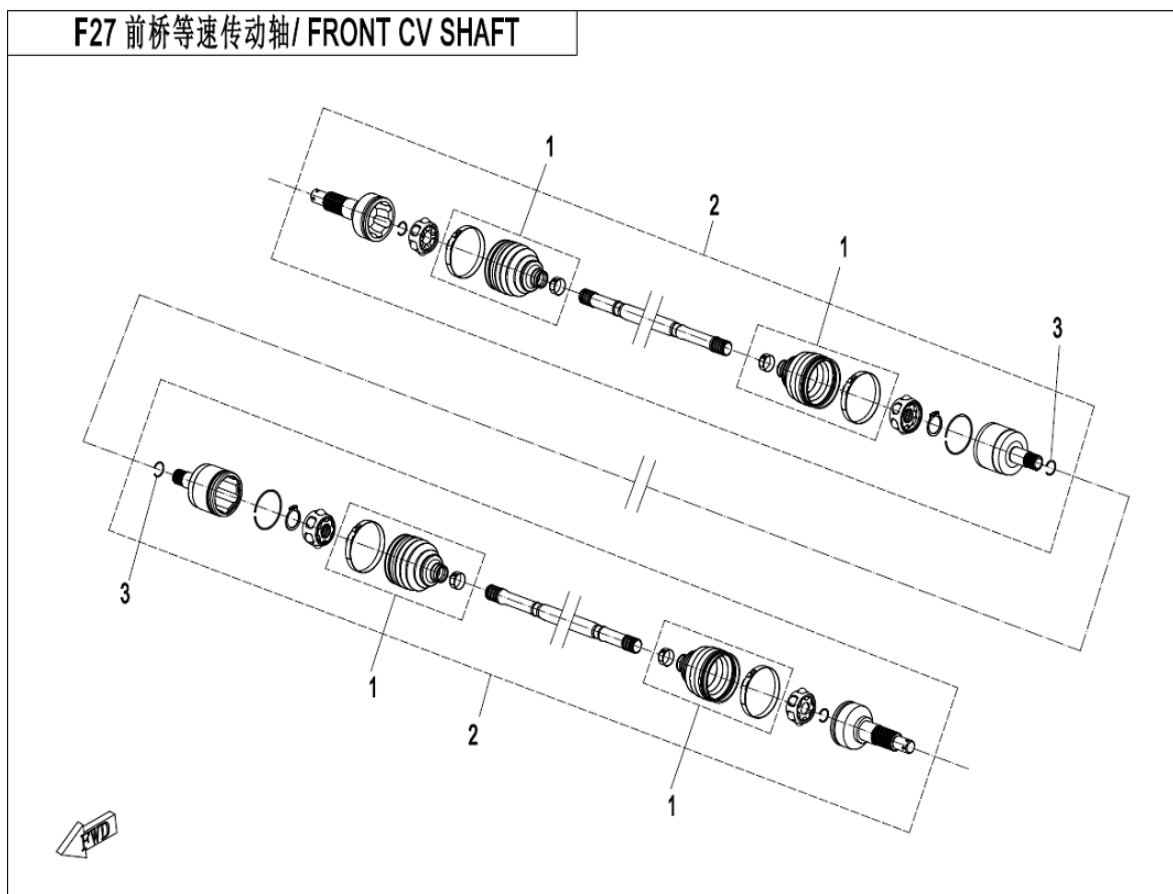

F27 FRONT CV SHAFT


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9GQ0-280150	DUST BOOT KIT, FIXED END	4	
02	9DQV-270100-3000-M1	FRONT CV DRIVE SHAFT	2	
03	9010-270203-00001	WIRE CIRCLIP	2	

后桥等速传动轴/ REAR CV SHAFT

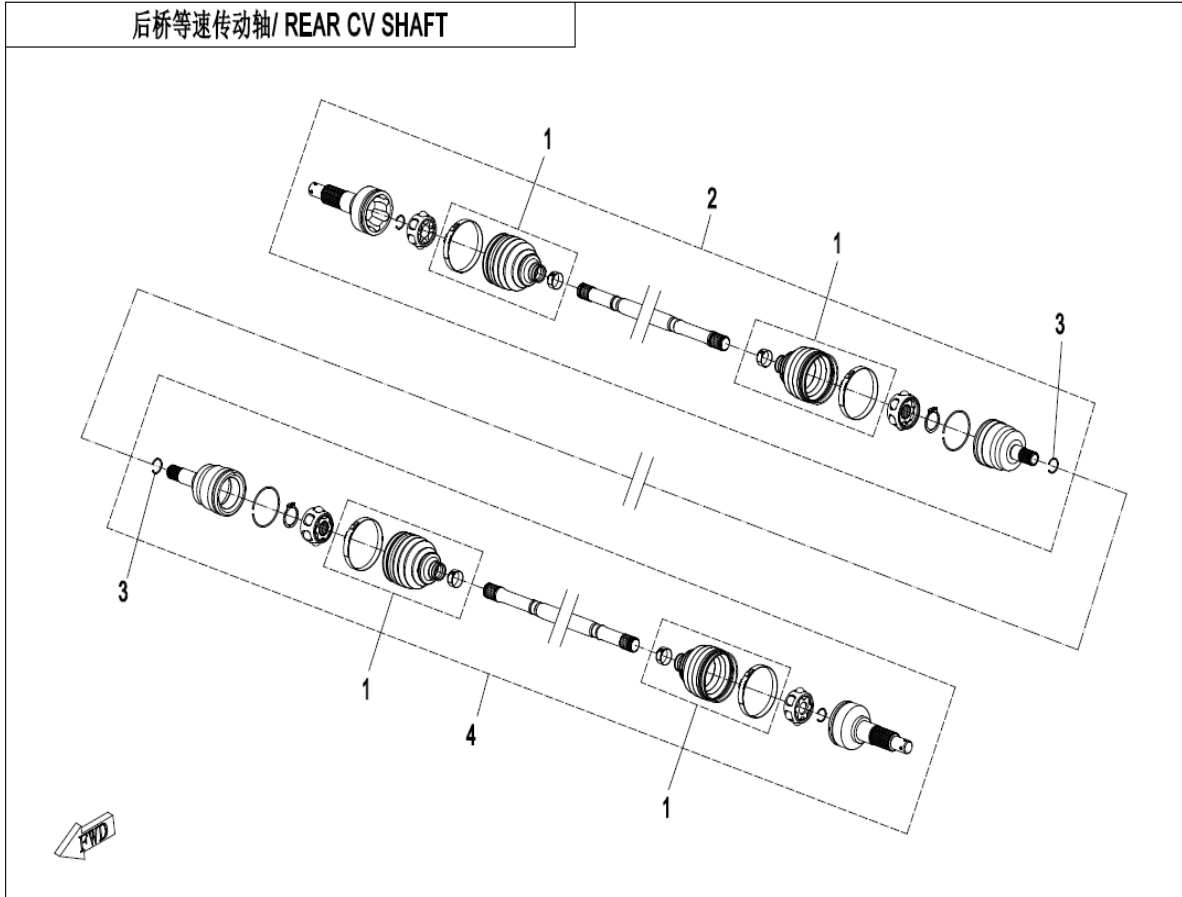


F28 REAR CV SHAFT

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	7020-280160-50000	DUST BOOT, REAR FIXED END	4	ODM
02	9DQV-280200-3000-M1	REAR RH CV DRIVE SHAFT	1	
03	9010-280102-00001	WIRE CIRCLIP	2	
04	9DQV-280100-3000-M1	REAR LH CV DRIVE SHAFT	1	

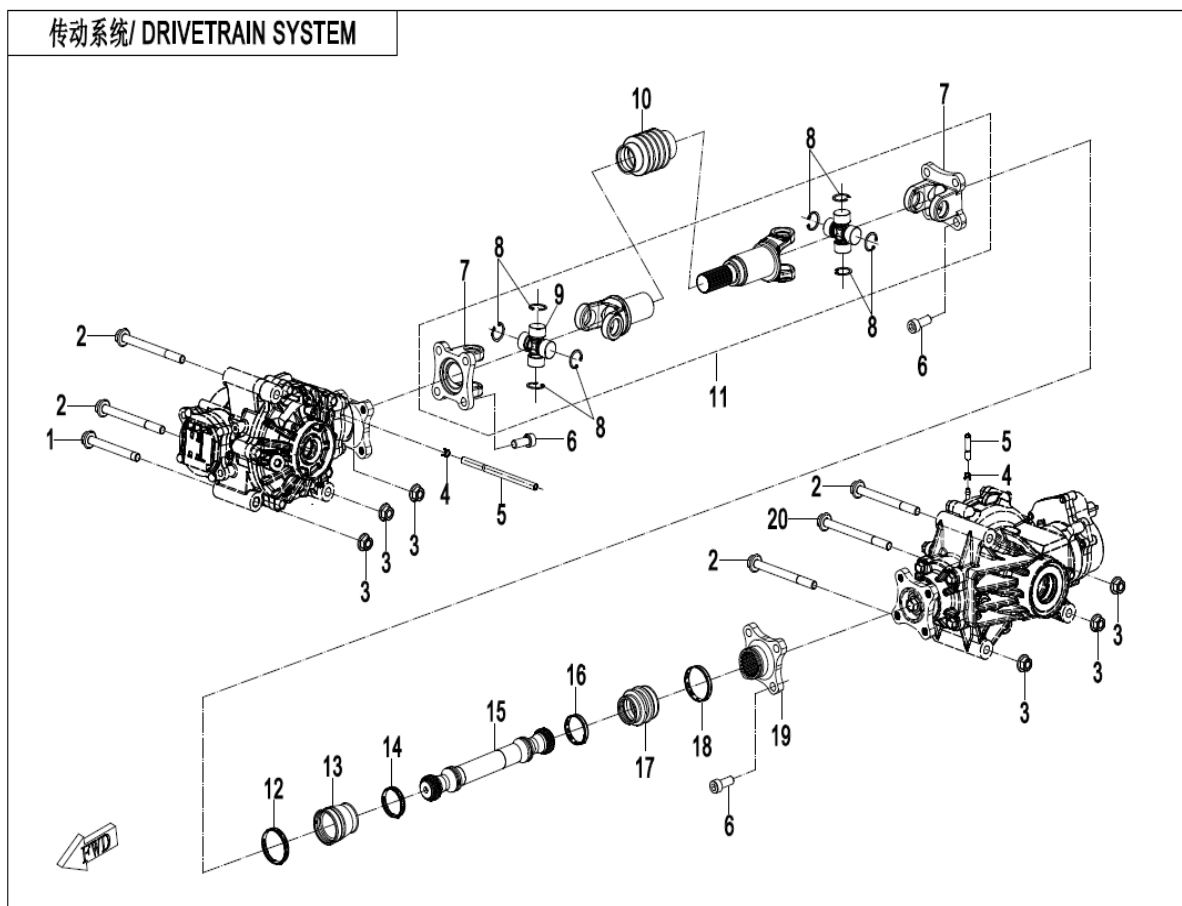

F30 DRIVE TRAIN SYSTEM


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	30006-102090810	BOLT M10x1.25x90	1	M10x1.25x90
2	30006-102110810	BOLT M10x1.25x110	4	M10x1.25x110
3	30204-102810	NUT M10x1.25	6	M10x1.25
4	30601-108010	CLAMP A8	2	A8
5	9010-310001	BREATHER HOSE, FRONT GEAR CASE	1	
6	30102-102025810	SCREW M10x1.25x25	12	M10x1.25x25
7	9GQ0-290201	FRONT CONNECTING FLANGE COUPLER	2	
8	30800-02205	CIRCLIP FOR HOLE	8	22
9	9GQ0-290210	CROSS SHAFT, UNIVERSAL JOINT	2	
10	700V-290001-1700	DUST BOOT	1	
11	9DQV-290100-3000	FRONT DRIVE SHAFT	1	
12	9GQ0-290104	BIG CLAMP	1	
13	9GQ0-290103-10000	DUST BOOT	1	
14	9GQ0-290102	SMALL CLAMP	1	
15	9CRB-300110	REAR CORE SHAFT	1	
16	9CR6-300204	SMALL CLAMP	1	
17	9CR6-300203-10000	DUST BOOT	1	
18	9CR6-300202	BIG CLAMP	1	
19	9CR6-300206-10000	DRIVE SLEEVE, REAR GEAR CASE	1	
20	30006-102130810	BOLT M10x1.25x130	1	M10x1.25x130

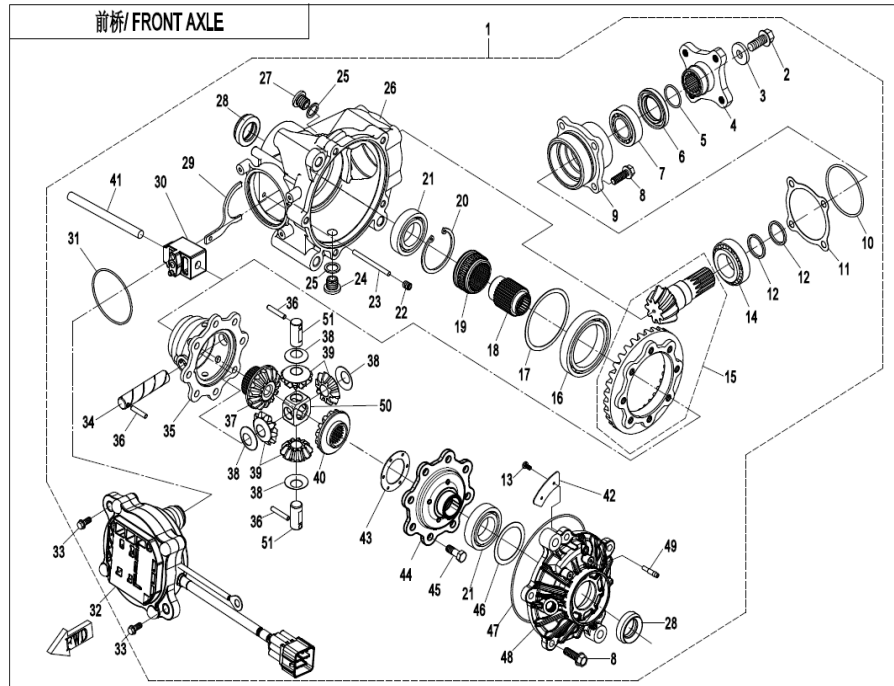

F31 FRONT AXLE


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	Q830-310000-60000	FRONT GEAR CASE ASSY	1	
02	Q800-062203	BOLT M10x1.25x20	1	M10x1.25x20
03	Q800-062204	WASHER 10x27.5x4	1	10x27.5x4
04	Q850-331002	COUPLER	1	
05	0800-062205	O-SEAL RING 25x2	1	25x2
06	0800-062204	OIL SEAL 35x50x7	1	35x50x7
07	30409-02500	BEARING	1	33005(25x47x17)
08	0110-060011-0010	BOLT M8x28	9	M8x28
09	Q830-311002-00001	BEARING SEAT	1	
10	Q830-310006-10000	O-RING 55x2.5	1	55x2.5
11	Q830-310023-00200	ADJUSTING WASHER T=0.30	1	T=0.30
11	Q830-310023-00100	ADJUSTING WASHER T=0.20	1	T=0.20
12	Q830-311003-01400	ADJUSTING WASHER 32x25.4 T=3.00	2	T=3.00
12	Q830-311003-01300	ADJUSTING WASHER 32x25.4 T=2.90	2	T=2.90
12	Q830-311003-01200	ADJUSTING WASHER 32x25.4 T=2.80	2	T=2.80
12	Q830-311003-01100	ADJUSTING WASHER 32x25.4 T=2.70	2	T=2.70
12	Q830-311003-01000	ADJUSTING WASHER 32x25.4 T=2.60	2	T=2.60
12	Q830-311003-00900	ADJUSTING WASHER 32x25.4 T=2.50	2	T=2.50
12	Q830-311003-00800	ADJUSTING WASHER 32x25.4 T=2.48	2	T=2.48
12	Q830-311003-00700	ADJUSTING WASHER 32x25.4 T=2.46	2	T=2.46
12	Q830-311003-00600	ADJUSTING WASHER 32x25.4 T=2.44	2	T=2.44
12	Q830-311003-00500	ADJUSTING WASHER 32x25.4 T=2.42	2	T=2.42
12	Q830-311003-00400	ADJUSTING WASHER 32x25.4 T=2.40	2	T=2.40
12	Q830-311003-00300	ADJUSTING WASHER 32x25.4 T=2.30	2	T=2.30
12	Q830-311003-00200	ADJUSTING WASHER 32x25.4 T=2.20	2	T=2.20
12	Q830-311003-00100	ADJUSTING WASHER 32x25.4 T=2.10	2	T=2.10
13	30105-040008410	SCREW M4x8	2	M4x8
14	30409-03000	BEARING	1	32006(30x55x17)
15	Q830-310080	BEVEL GEAR ASSY, FRONT GEAR CASE	1	
16	30400-05500	BEARING	1	61911(55x80x13)
17	Q830-310015-00600	ADJUSTING WASHER 79.5x68 T=1.00	1	T=1.00
17	Q830-310015-00500	ADJUSTING WASHER 79.5x68 T=0.50	1	T=0.50
17	Q830-310015-00400	ADJUSTING WASHER 79.5x68 T=0.40	1	T=0.40
17	Q830-310015-00300	ADJUSTING WASHER 79.5x68 T=0.30	1	T=0.30
17	Q830-310015-00200	ADJUSTING WASHER 79.5x68 T=0.20	1	T=0.20
17	Q830-310015-00100	ADJUSTING WASHER 79.5x68 T=0.10	1	T=0.10
18	Q830-310014	DRIVE CLUTCH COVER	1	
19	Q830-310013	SPLINE BUSHING	1	
20	30800-05505	CIRCLIP FOR HOLE 55	1	55
21	30400-03001	BEARING 30x55x13	2	6006
22	30130-080010810	SCREW M8x10	1	M8x10
23	Q830-310003	PIN SHAFT	1	
24	0180-332100	OIL DRAIN BOLT M14x1.25x12, MAGNETIC	1	M14x1.25x12
25	0180-011006	GASKET 14	2	14
26	Q830-310007-20000	FRONT GEAR CASE	1	
27	0180-021008-0010	BOLT M14x1.25x12	1	M14x1.25x12
28	0180-311001	OIL SEAL 24x38x8	2	24x38x8
29	Q830-310005-10001	FORK	1	
30	Q890-310010	BLOCK ASSY.	1	
31	Q830-310012-10000	O-RING 67.5x2	1	
32	Q890-314000-10000	MOTOR ASSY, FRONT GEAR CASE	1	Kaidi PLUG
33	0010-023008-0010	BOLT M6x18	2	M6x18
34	0180-313002-10000	CENTER GEAR SHAFT, DIFFERENTIAL	1	
35	Q830-313003-10000	FRONT DIFFERENTIAL CASE	1	
36	30906-0503000	PIN	3	5x30
37	Q830-313004	GEAR, CV SHAFT	1	
38	0181-313011	WEARING RING	4	
39	0180-313003-00004	CENTRAL GEAR, DIFFERENTIAL	4	SURFACE PEENING TREATMENT, THE INNER HOLE TOLERANCE INCREASING
40	0180-313006-00001	DRIVEN GEAR, DIFFERENTIAL	1	
41	30913-0300550	PIN SHAFT	1	
42	Q830-310022	OIL GUARD	1	
43	Q800-313005-00100	GEAR WASHER	1	t=1.00
43	Q800-313005-00200	GEAR WASHER	1	t=1.20
44	Q830-313001-10000	COUPLER	1	
45	9010-290001	BOLT M8x1x22	8	M8x1x22
46	Q830-310009-00600	ADJUSTING WASHER 54.5x43 T=1.00	1	T=1.00
46	Q830-310009-00500	ADJUSTING WASHER 54.5x43 T=0.50	1	T=0.50
46	Q830-310009-00400	ADJUSTING WASHER 54.5x43 T=0.40	1	T=0.40
46	Q830-310009-00300	ADJUSTING WASHER 54.5x43 T=0.30	1	T=0.30
46	Q830-310009-00200	ADJUSTING WASHER 54.5x43 T=0.20	1	T=0.20
46	Q830-310009-00100	ADJUSTING WASHER 54.5x43 T=0.10	1	T=0.10
47	Q830-310011	O-SEAL RING 130x2	1	
48	Q830-310008-10000	FRONT GEAR CASE COVER	1	
49	0180-311004-0020	JOINT, BREATHER HOSE	1	
50	Q820-333008	CROSS BUSHING	1	
51	Q800-313001	PLANET GEAR SHAFT, SHORT	2	

换挡机构/GEAR SHIFTING

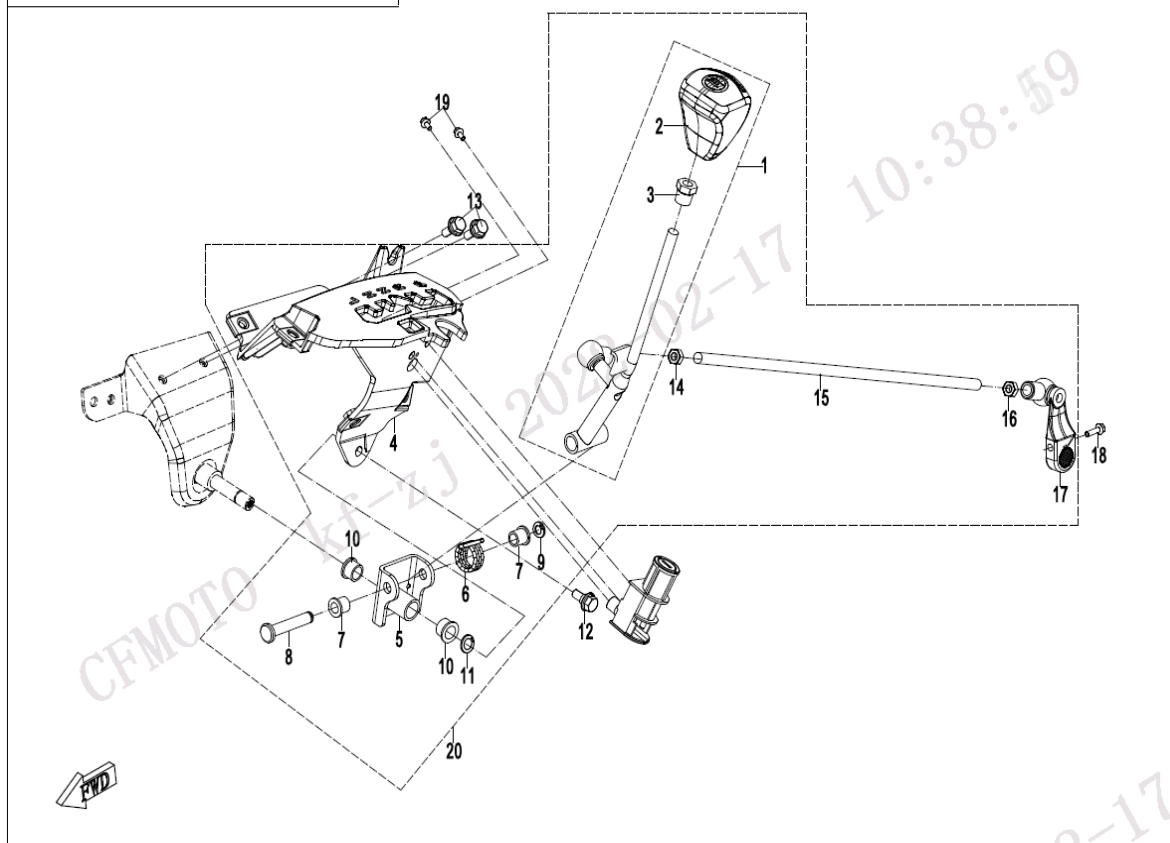

F32 EAR SHIFTING

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-321100-3000	GEARSHIFT ROD ASSY	1	
1	9DQV-321100-3001	GEARSHIFT LEVER	1	
2	5BWV-321300-5000	GEARSHIFT BALL HEAD	1	
3	9CR6-321301	LOCK NUT, GEARSHIFT	1	M8
4	9DQV-320001-3001	GEARSHIFT LIMIT GUARD	1	
5	9DQV-321120-3000	GEARSHIFT ROCKER ARM	1	
6	9CR6-321002	SPRING, GEARSHIFT LEVER	1	
7	9010-320009	NYLON BUSHING	2	
8	9CR6-321001	PIN SHAFT, GEARSHIFT LEVER	1	
9	30802-00605	CIRCLIP 6	1	6
10	9CR6-321003	BUSHING, ARM	2	
11	30802-00805	SPLIT WASHER	1	8
12	30006-060012810	BOLT M6x12	1	M6x12
13	30006-060016810	BOLT M6x16	2	M6x16
14	30200-060810	NUT	1	M6
15	9GQ0-321004	GEARSHIFT ROD	1	
16	30200-06081L	NUT M6	1	M6, LEFT-HAND THREAD
17	9010-320200-2000	ROCKER, GEARSHIFT	1	
18	0010-080013-0010	BOLT M6x22	1	M6x22
19	30107-060012410	SCREW M6x12	2	M6x12
20	9DQV-321000-3000	GEARSHIFT ASSY	1	
20	9DQV-321000-3001	GEARSHIFT ASSY	1	

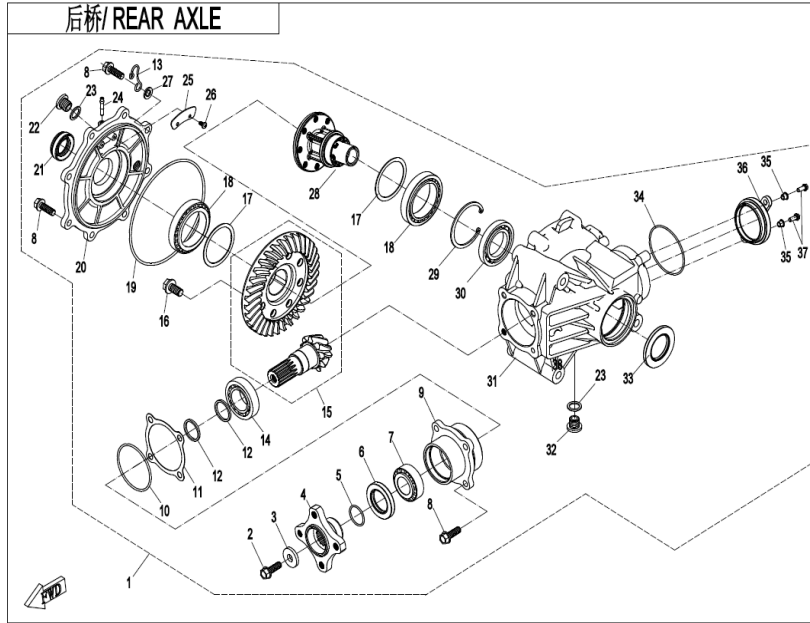

F33 REAR AXLE (WITHOUT DIFFERENTIAL)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	Q820-330000-10000	REAR GEAR CASE ASSY	1	
02	0GR0-062203	BOLT M10x1.25x20	1	M10x1.25x20
03	0GR0-062204	WASHER 10x27.5x4	1	10x27.5x4
04	Q850-331002	COUPLER	1	
05	0800-062205	O-SEAL RING 25x2	1	25x2
06	0800-062204	OIL SEAL 35x50x7	1	35x50x7
07	30409-02500	BEARING	1	33005(25x47x17)
08	0110-060011-0010	BOLT M8x28	12	M8x28
09	Q830-311002-00001	BEARING SEAT	1	
10	Q830-310006-10000	O-RING 55x2.5	1	55x2.5
11	Q830-310023-00100	ADJUSTING WASHER T=0.20	1	T=0.20
11	Q830-310023-00200	ADJUSTING WASHER T=0.30	1	T=0.30
12	Q830-311003-00400	ADJUSTING WASHER 32x25.4 T=2.40	2	T=2.40
12	Q830-311003-00500	ADJUSTING WASHER 32x25.4 T=2.42	2	T=2.42
12	Q830-311003-00600	ADJUSTING WASHER 32x25.4 T=2.44	2	T=2.44
12	Q830-311003-00700	ADJUSTING WASHER 32x25.4 T=2.46	2	T=2.46
12	Q830-311003-00800	ADJUSTING WASHER 32x25.4 T=2.48	2	T=2.48
12	Q830-311003-00900	ADJUSTING WASHER 32x25.4 T=2.50	2	T=2.50
12	Q830-311003-01000	ADJUSTING WASHER 32x25.4 T=2.60	2	T=2.60
12	Q830-311003-01100	ADJUSTING WASHER 32x25.4 T=2.70	2	T=2.70
12	Q830-311003-01200	ADJUSTING WASHER 32x25.4 T=2.80	2	T=2.80
12	Q830-311003-01300	ADJUSTING WASHER 32x25.4 T=2.90	2	T=2.90
12	Q830-311003-01400	ADJUSTING WASHER 32x25.4 T=3.00	2	T=3.00
12	Q830-311003-00100	ADJUSTING WASHER 32x25.4 T=2.10	2	T=2.10
12	Q830-311003-00200	ADJUSTING WASHER 32x25.4 T=2.20	2	T=2.20
12	Q830-311003-00300	ADJUSTING WASHER 32x25.4 T=2.30	2	T=2.30
13	9CRB-082001	CLIP, RH REAR PARKING CABLE	1	
14	30409-03000	BEARING	1	32006(30x55x17)
15	Q820-3300B0	BEVEL GEAR ASSY, REAR GEAR CASE	1	
16	0181-313100-0010	BOLT M10x1.25x22	8	M10x1.25x22
17	Q820-330003-00100	ADJUSTING WASHER 61x50.5 T=0.10	2	T=0.10
17	Q820-330003-00200	ADJUSTING WASHER 61x50.5 T=0.30	2	T=0.30
17	Q820-330003-00300	ADJUSTING WASHER 61x50.5 T=0.50	2	T=0.50
17	Q820-330003-00400	ADJUSTING WASHER 61x50.5 T=0.90	2	T=0.90
17	Q820-330003-00500	ADJUSTING WASHER 61x50.5 T=0.92	2	T=0.92
17	Q820-330003-00600	ADJUSTING WASHER 61x50.5 T=0.94	2	T=0.94
17	Q820-330003-00700	ADJUSTING WASHER 61x50.5 T=0.96	2	T=0.96
17	Q820-330003-00800	ADJUSTING WASHER 61x50.5 T=0.98	2	T=0.98
17	Q820-330003-00900	ADJUSTING WASHER 61x50.5 T=1.00	2	T=1.00
18	30409-05000	BEARING	2	
19	0180-310005	O-SEAL RING 141x2.4	1	141x2.4
20	Q820-330002	REAR GEAR CASE COVER	1	
21	0180-311001	OIL SEAL 24x38x8	1	24x38x8
22	0180-021008-0010	BOLT M14x1.25x12	1	M14x1.25x12
23	0180-011006	GASKET 14	2	14
24	0180-311004-0020	JOINT, BREATHER HOSE	1	
25	Q820-330007-10000	OIL BAFFLE	1	
26	30105-040008410	SCREW M4x8	2	M4x8
27	30306-080112	WASHER	1	8
28	Q820-330008	MOUNTING SEAT	1	
29	30800-06200	CIRCLIP FOR HOLE 62	1	62
30	30400-03501	BEARING	1	16007
31	Q820-330001-00001	REAR GEAR CASE	1	
32	0180-332100	OIL DRAIN BOLT M14x1.25x12, MAGNETIC	1	M14x1.25x12
33	0120-061000	OIL SEAL 35x58x5	1	35x58x5
34	Q830-310012-10000	O-RING 67.5x2	1	
35	018A-180001	SLEEVE	2	
36	Q820-330009	PLUG, MOTOR	1	
37	0010-023008-0010	BOLT M6x18	2	M6x18



F38-A OWNER\`S MANUAL (CA&INTERNATIONAL)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DQV-380101-3000-13	OWNERS MANUAL	1	



CFORCE 450 / 450 L 520 / 520 L

Owner's Manual

READ THIS
MANUAL
CAREFULLY

It contains important
safety information

Make sure operator holds a valid driver license.
Passengers must always:
use an approved helmet and protective gear.
securely grasp hand holds and plant feet firmly on
footrests while seated in the passenger seat.


F38-B OWNER'S MANUAL (INTERNATIONAL)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9DQV-380101-3200-12	OWNERS MANUAL	1	



F38-C OWNER\ 'S MANUAL (RUSSIAN)


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	9CQV-380101-4200-14	OWNERS MANUAL	1	

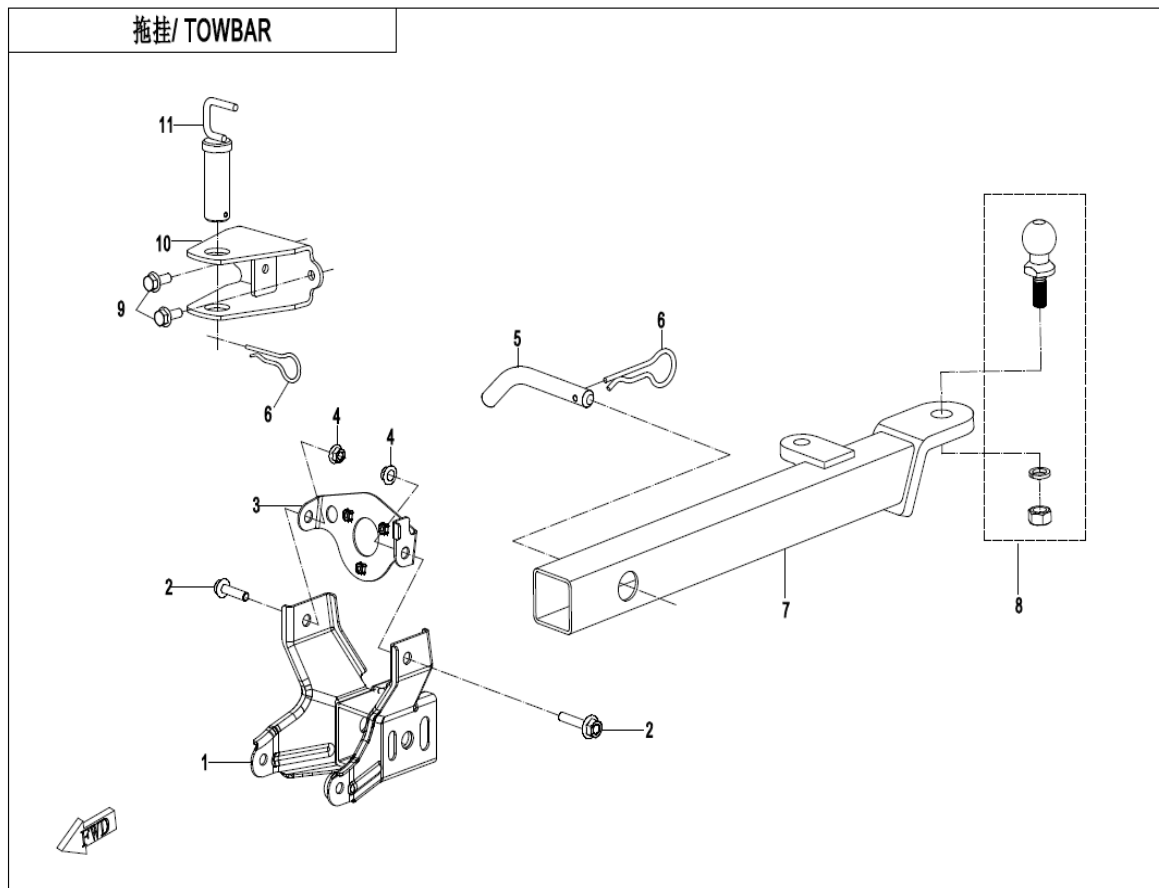

F40 TOWBAR

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	9DQV-400010-3000	TOWING BRACKET	1	
1	9DQV-400010-3001	TOWING BRACKET	1	
2	30102-102025810	SCREW M10x1.25x25	2	M10x1.25x25
3	9DQV-400020-3000	BRACKET, TRAILER POWER	1	
4	30204-102810	NUT M10x1.25	2	M10x1.25
5	9010-400103	PIN SHAFT	1	
6	9010-400102-10000	COTTER PIN,BRACKET	2	
7	5BW1-401200-20000	TOWING TUBE	1	
8	5BW1-401310-10000	TOWING HITCHBALL	1	50MM
9	30004-100025810	BOLT M10x25	2	M10x25
10	9CR6-404100	BRACKET, FRONT HOOK	1	
11	9CR6-404200	PIN ASSY	1	


空滤器组/ AIR FILTER ASSY.

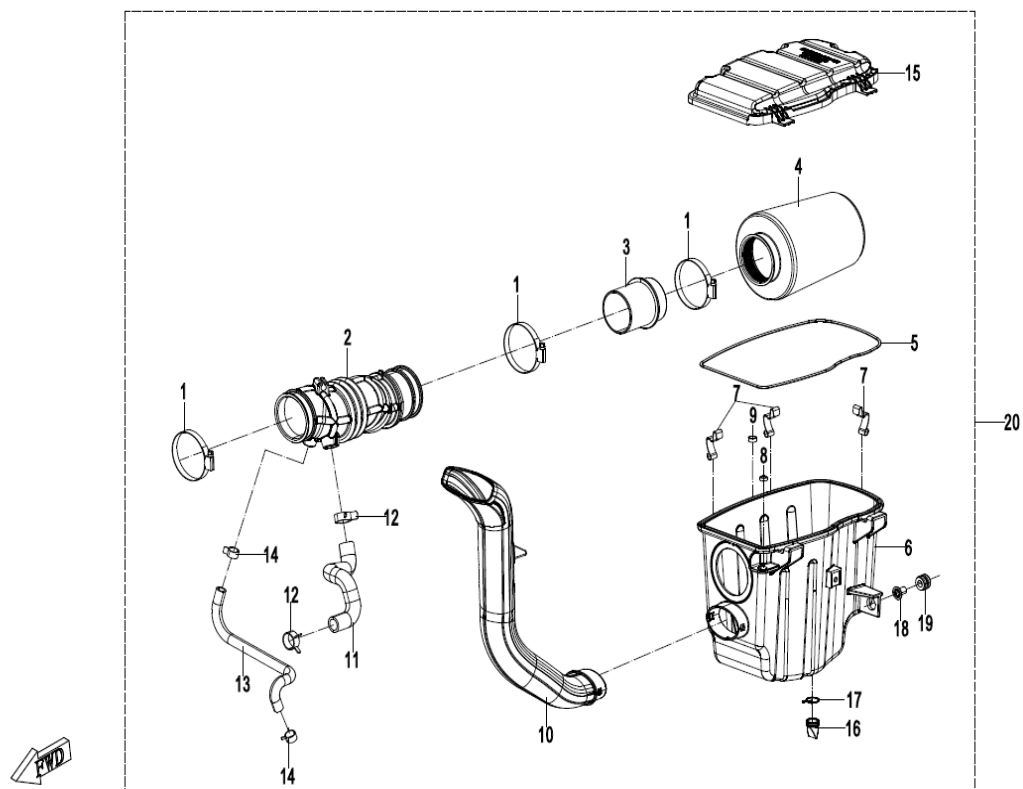

F41-V1 AIR FILTER ASSY


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	0GQV-110000-1000-20	HOSE CLIP	3	
2	0GQV-117000-1000	AIR OUTLET PIPE, AIR FILTER	1	
3	0GQV-110005-1000	CONNECTING PIPE, FILTER ELEMENT	1	
4	0800-112000-20010	FILTER ELEMENT	1	WITH BLACK SPONGE,MANUFACTURER:HENGBO
5	0GQV-115000-1000-20	SEAL RING, AIR FILTER	1	
6	0GQV-115000-1000-21	LOWER HOUSING, AIR FILTER	1	
7	0GQV-110006-1000	CLASP	3	
8	0GQV-115000-1000-22	BUSHING	1	
9	0GQV-115000-1000-26	BUSHING	1	
10	0GQV-111000-1000	AIR INLET PIPE, AIR FILTER	1	
11	0GQV-110008-1000	AIS HOSE	1	
12	0GQV-110000-1000-21	HOSE CLIP	2	
13	0GQV-110009-1000	BREATHER HOSE, CRANKCASE	1	
14	0GQV-110000-1000-22	HOSE CLIP	2	
15	0GQV-110007-1000	UPPER HOUSING, AIR FILTER	1	
16	0GQV-115000-1000-23	DUST RELEASE VALVE	1	
17	0GQV-115000-1000-27	CLAMP	1	
18	0GQV-115000-1000-24	RUBBER DAMPING LINER, FUEL TANK	1	
19	0GQV-115000-1000-25	REAR DAMPING BUSHING, FUEL TANK	1	
20	0GQV-110000-1000-11	AIR FILTER ASSY	1	

空滤器组/ AIR FILTER ASSY.

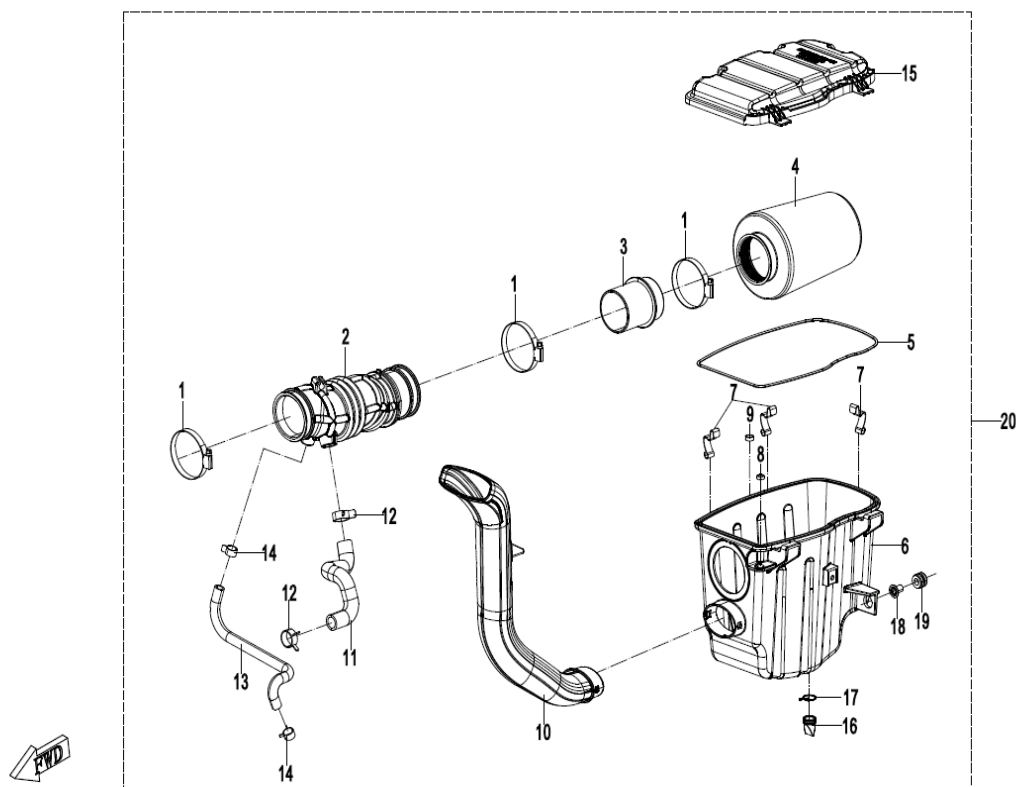


F41-V2 AIR FILTER ASSY

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	0GQV-110000-1000-20	HOSE CLIP	3	
2	0GQV-117000-1000	AIR OUTLET PIPE, AIR FILTER	1	
3	0GQV-110005-1000	CONNECTING PIPE, FILTER ELEMENT	1	
4	0800-112000-20010	FILTER ELEMENT	1	WITH BLACK SPONGE,MANUFACTURER:HENGBO
5	0GQV-115000-1000-20	SEAL RING, AIR FILTER	1	
6	0GQV-115000-1001-21	LOWER HOUSING, AIR FILTER	1	
7	0GQV-110006-1000	CLASP	3	
8	0GQV-115000-1000-22	BUSHING	1	
9	0GQV-115000-1000-26	BUSHING	1	
10	0GQV-111000-1001	AIR INLET PIPE, AIR FILTER	1	
11	0GQV-110008-1000	AIS HOSE	1	
12	0GQV-110000-1000-21	HOSE CLIP	2	
13	0GQV-110009-1000	BREATHER HOSE, CRANKCASE	1	
14	0GQV-110000-1000-22	HOSE CLIP	2	
15	0GQV-110007-1000	UPPER HOUSING, AIR FILTER	1	
16	0GQV-115000-1000-23	DUST RELEASE VALVE	1	
17	0GQV-115000-1000-27	CLAMP	1	
18	0GQV-115000-1000-24	RUBBER DAMPING LINER, FUEL TANK	1	
19	0GQV-115000-1000-25	REAR DAMPING BUSHING, FUEL TANK	1	
20	0GQV-110000-1001-11	AIR FILTER	1	

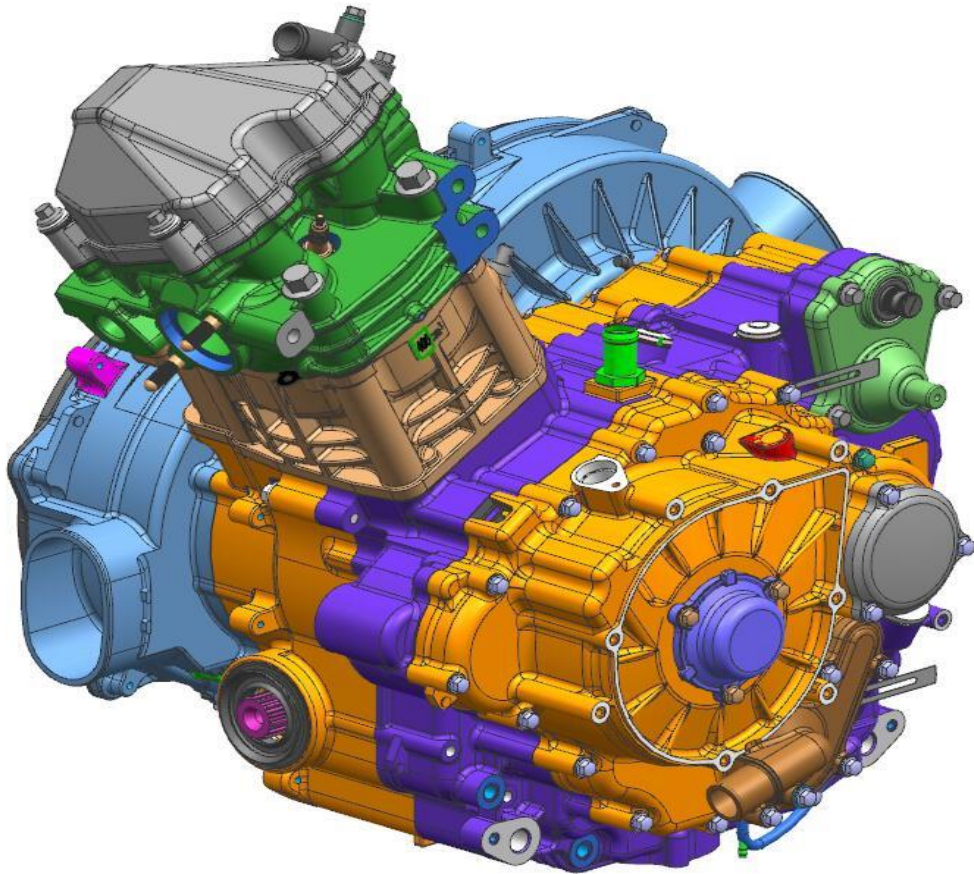


E00 91Q ENGINE

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0GQV-ALB000-0840	191Q_LONG BLOCK	1	

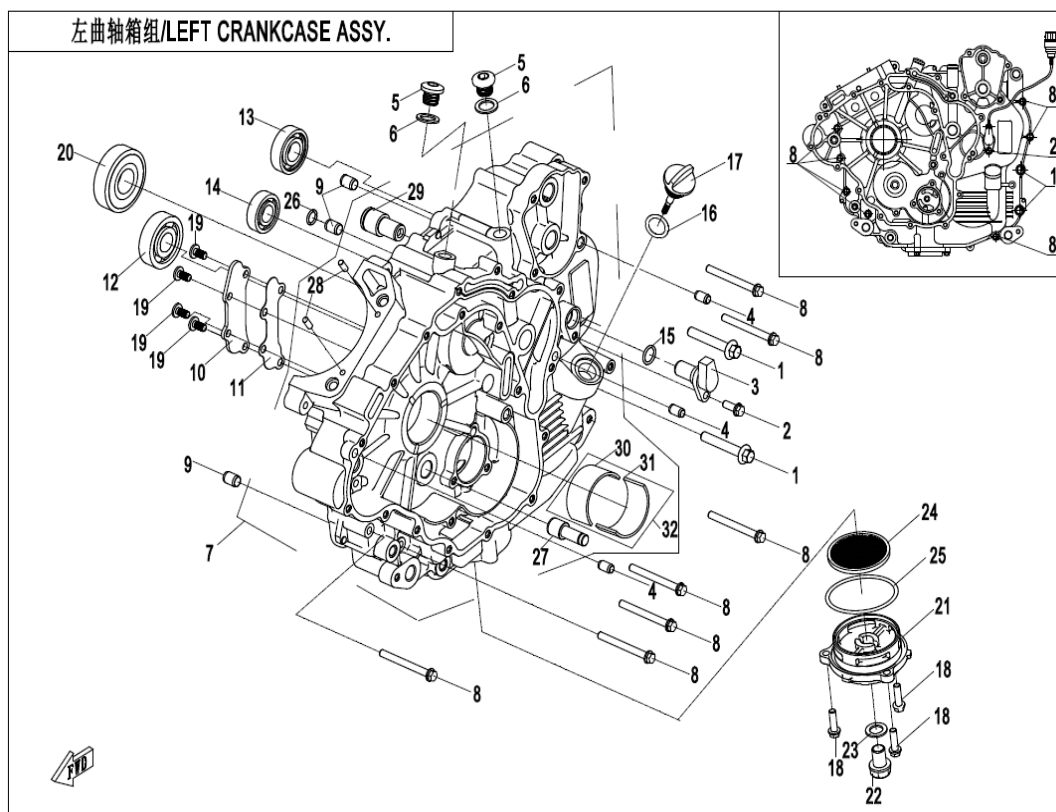

E01-1 LEFT CRANKCASE ASSY


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0040-012006-0010	BOLT M8x50	2	M8X50
02	0010-090005-0010	BOLT M6x16	1	M6x16
03	0GR0-011020	SPEED SENSOR	1	
04	0010-080008	DOWEL PIN Dia 8x14	3	Dia 8x14
05	0GR0-011003-00001	BOLT	2	
06	0180-011006	GASKET 14	2	14
07	0GR0-011100-00001	LH CRANKCASE ASSY	1	
08	0010-011017-0010	BOLT M6x60	7	M6x60
09	0010-021005	DOWEL PIN Dia 10x14	3	Dia 10x14
10	0GR0-011002	OIL RAIL COVER PLATE	1	
11	0GR0-011004	PAPER WASHER, OIL RAIL	1	
12	30499-01700	BEARING	1	17
13	30400-01704	BEARING	1	17
14	30499-01500	BEARING	1	6202
15	01A0-013005	O-SEAL RING 13x2	1	13x2
16	0110-013030	O-SEAL RING 18x3.55	1	18x3.55
17	0GR0-011005	DIPSTICK, ENGINE OIL	1	
18	0010-023010-0010	BOLT M6x20	3	M6x20
19	30105-060012410	SCREW M6x12	4	M6x12
20	30400-02201	BEARING	1	
21	0GR0-011001	PLATE, OIL STRAINER	1	
22	0110-013005-00002	DRAIN BOLT M12x1.5x15	1	M12x1.5x15
23	0010-021014	WASHER 12	1	12
24	0GR0-011010	OIL STRAINER	1	
25	0800-014003	O-SEAL RING 63x2.5	1	63x2.5
26	30502-010000N	O-RING	1	10x1.8
27	0GR0-011102	DUAL GEAR SHAFT, OIL PUMP	1	
28	30406-00500	ROLLER NEEDLE P5x11.8	2	P5x11.8
29	0GR0-011103	INTERMEDIATE GEAR SHAFT, REVERSE	1	
30	0800-011102-00011	PLAIN BEARING 1	1	RED@THIN
30	0800-011102-00021	PLAIN BEARING 1	1	BLUE@THICK
31	0800-011103-00011	PLAIN BEARING 2	1	RED@THIN
31	0800-011103-00021	PLAIN BEARING 2	1	BLUE@THICK
32	0800-0111A0-00001	PLAIN BEARING KIT, MAIN SHAFT	1	RED
32	0800-0111B0-00001	PLAIN BEARING KIT, MAIN SHAFT	1	BLUE

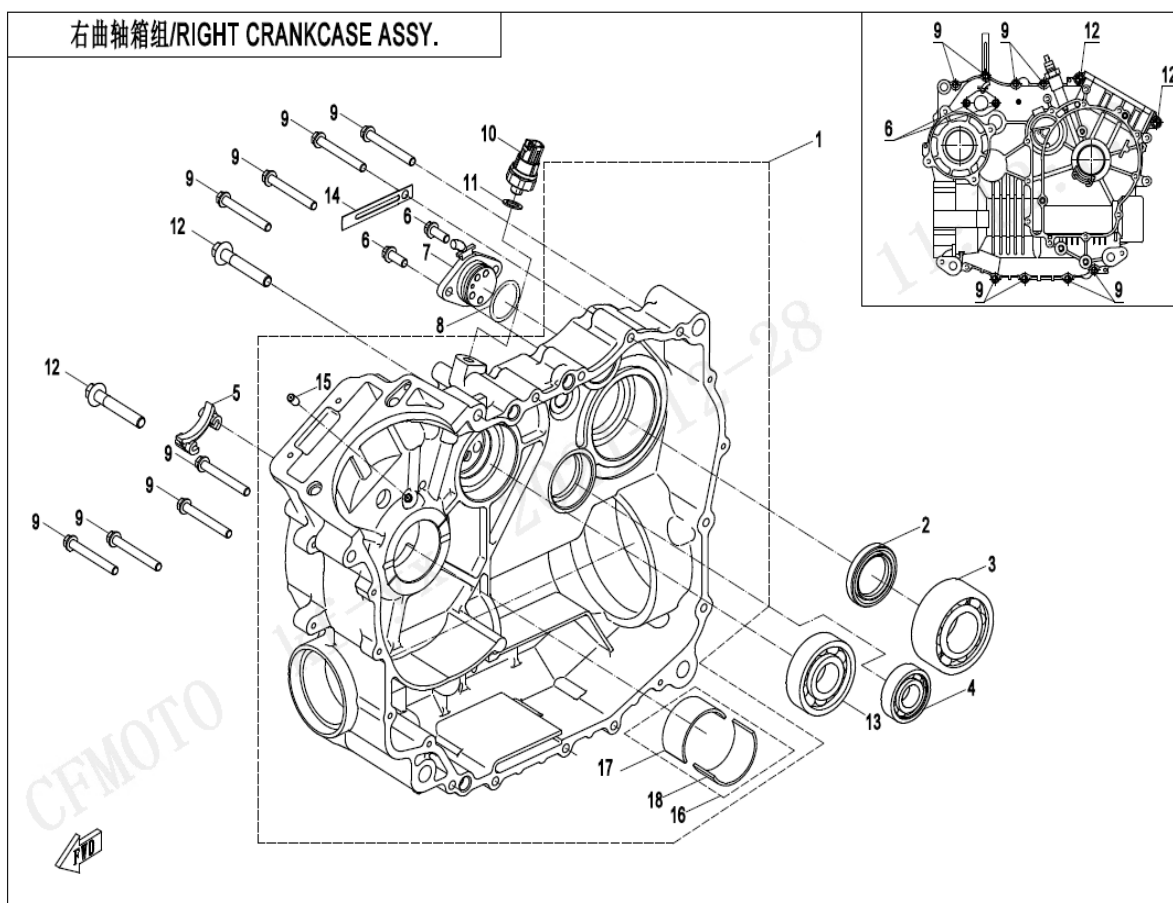

E01-2 RIGHT CRANKCASE ASSY

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0GR0-012100-10001	RH CRANKCASE ASSY	1	
02	0180-012006-00001	OIL SEAL 30X45X8	1	
03	30499-03000	BEARING	1	5206
04	30400-01704	BEARING	1	17
05	0800-011007	CHAIN GUARD	1	
06	0010-090005-0010	BOLT M6x16	2	M6x16
07	0GQV-012200-1000	GEAR SENSOR	1	
08	0180-023002	O-SEAL RING 24x2.5	1	24x2.5
09	0010-013010-0010	BOLT M6x50	8	M6x50
10	0800-012400	OIL PRESSURE SWITCH	1	
11	0010-060010	WASHER 10	1	10
12	0040-012006-0010	BOLT M8x50	2	M8X50
13	30400-02201	BEARING	1	
14	0180-014010	WIRE CLAMP	1	
15	01A0-011003	NOZZLE	1	
16	0800-0111A0-00001	PLAIN BEARING KIT, MAIN SHAFT	1	RED
16	0800-0111B0-00001	PLAIN BEARING KIT, MAIN SHAFT	1	BLUE
17	0800-011102-00011	PLAIN BEARING 1	1	RED@THIN
17	0800-011102-00021	PLAIN BEARING 1	1	BLUE@THICK
18	0800-011103-00011	PLAIN BEARING 2	1	RED@THIN
18	0800-011103-00021	PLAIN BEARING 2	1	BLUE@THICK


CVT 箱组/ CVT ASSY.

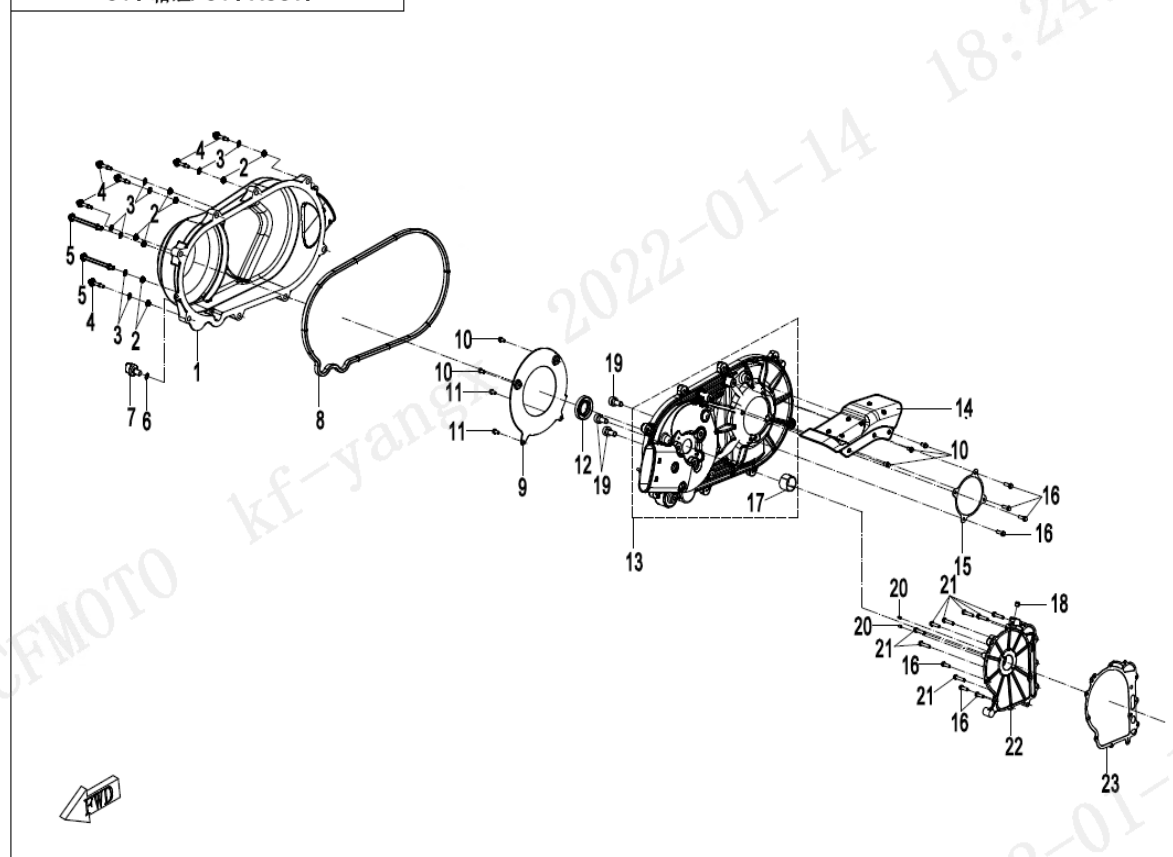

E01-3 CVT CASE ASSY.

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
1	0GSV-013201-3000	CVT COVER	1	
2	0800-021102-10000	RUBBER WASHER	8	
3	0800-021103	CAP, RUBBER WASHER	8	
4	0GSV-013004-3000	BOLT 1, CVT COVER	6	
5	0GSV-013002-3001	BOLT, CVT COVER	2	
6	0700-012701	O-SEAL RING 10x2	1	10x2
7	0JWV-013202-6000	DRAIN BOLT	1	
8	0GSV-013104-3000	GASKET, CVT COVER	1	
9	0GSV-013103-3000	WIND GUARD	1	
10	0010-021019-0010	BOLT M6x12	5	M6x12
11	0010-013008-0010	BOLT M6x35	2	M6x35
12	0JY0-013103	OIL SEAL 32X55X10	1	32X55X10
13	0GSV-0131A0	CVT CASE	1	
14	0GSV-013102-3000	HEAT INSULATOR, CVT	1	
15	0800-012002	GASKET(2), CVT CASE	1	
15	0800-012002-10000	GASKET 2, CVT CASE	1	
16	0010-023010-0010	BOLT M6x20	7	M6x20
17	0JY0-013102-00011	PLAIN BEARING, CVT	2	RED
17	0JY0-013102-00021	PLAIN BEARING, CVT	2	BLUE
18	01A0-012010-00001	SCREW	1	
19	30102-080020810	SCREW M8x20	3	M8x20
20	0010-080008	DOWEL PIN Dia 8x14	2	Dia 8x14
21	0010-060012-0010	BOLT M6x30	8	M6x30
21	0010-070003-00002	BOLT	8	
22	0GSV-015001-3000	RH CRANKCASE COVER	1	
22	0GSV-015001-3001	RH CRANKCASE COVER	1	
23	0GRO-013001-20000	STEEL GASKET, CVT CASE	1	


E01-4 左曲轴箱盖组/LEFT CRANKCASE COVER

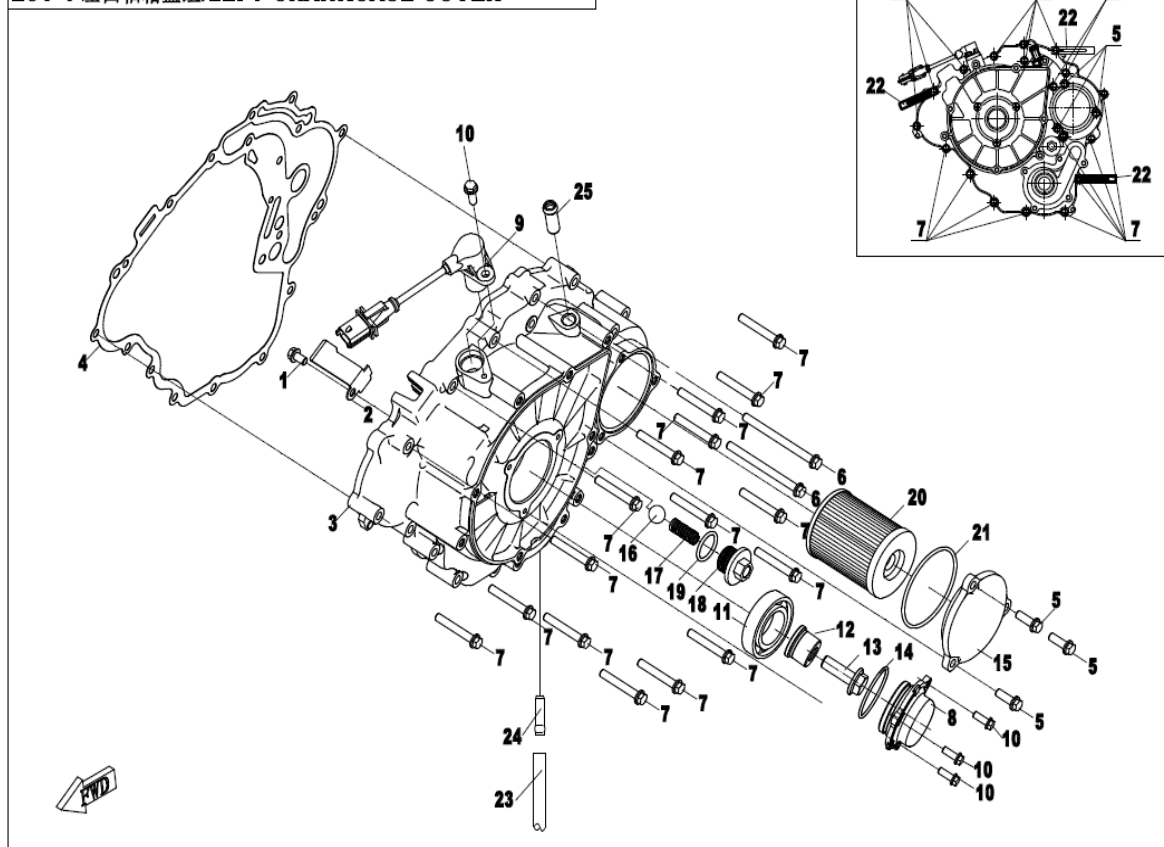

E01-4 LEFT CRANKCASE COVER ASSY


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0010-080010-00001	BOLT	1	
02	0GR0-014005	PLATE	1	
03	0GR0-014001-10000	CRANKCASE COVER, LH	1	
04	0GR0-014002-10000	STEEL GASKET, LH CRANKCASE COVER	1	
05	0010-023008-00001	BOLT	3	
06	0A70-011005-00001	BOLT M6x75	2	
07	0010-013009-0010	BOLT M6x40	16	M6x40
08	0GRA-014001	PLUG	1	SUZUKI RED
09	0800-014100-20000	RPM SENSOR	1	KAIDI PLUG
10	0010-090005-0010	BOLT M6x16	4	M6x16
11	30400-02800	BEARING	1	
12	0800-014008	SLEEVE, TIGHTENING	1	
13	0800-014009-00002	BOLT	1	
14	0GRA-014003	O-SEAL RING 48x2.5	1	
15	0800-014002-00001	FILTER COVER	1	
16	3120015	STEEL BALL	1	
17	0700-012603-1000	SPRING, RELIEF VALVE	1	
18	0GR0-014003	SCREW PLUG, RELIEF VALVE	1	
19	0180-332004	O-SEAL RING 19x2.5	1	19x2.5
20	0800-011300-0004	OIL FILTER ELEMENT	1	
21	0800-014003	O-SEAL RING 63x2.5	1	63x2.5
22	0180-014010	WIRE CLAMP	3	
23	0800-014013	OVERFLOW HOSE	1	
24	01A0-022102	PIPE JOINT	1	
25	0010-013006-0010	JOINT, BREATHER HOSE	1	

E02-1 气缸盖罩组/ CYLINDER HEAD COVER ASSY.

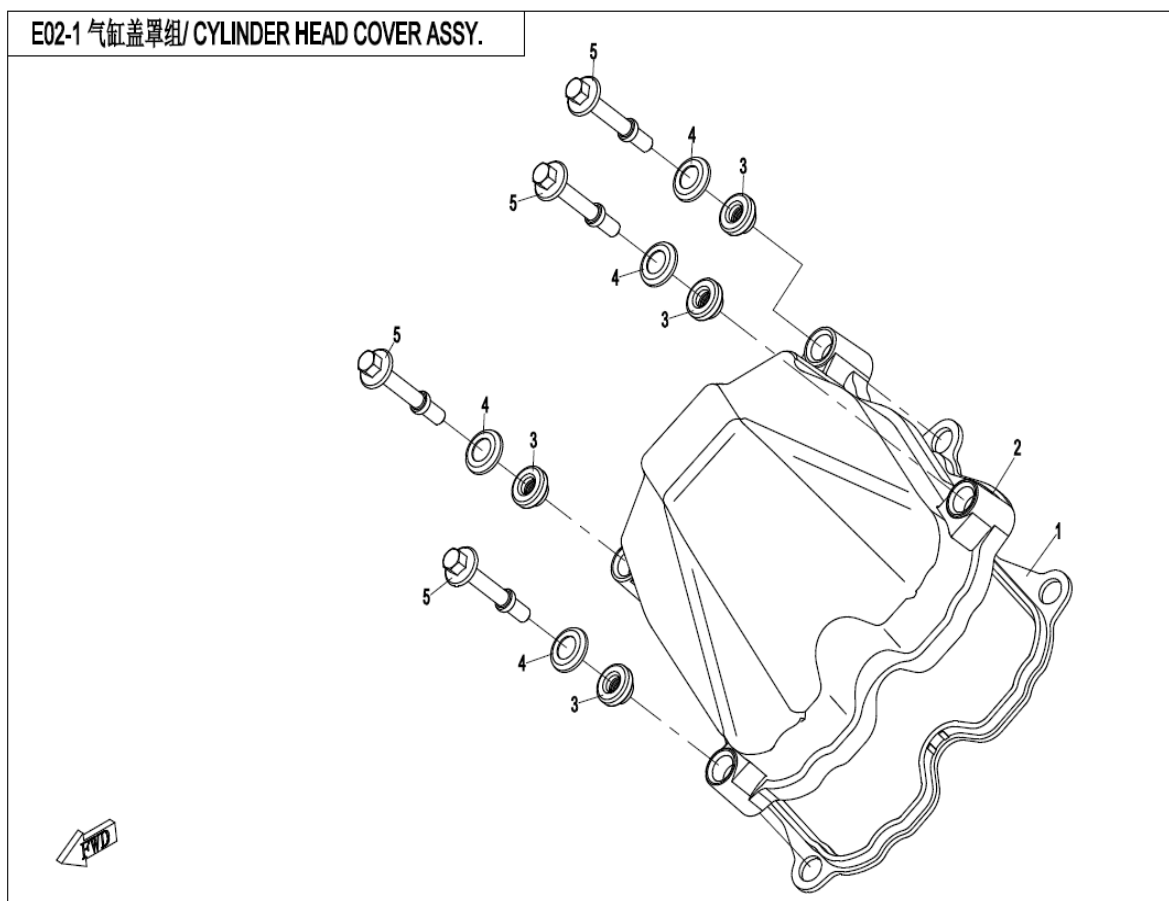


E02-1 CYLINDER HEAD COVER ASSY

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0800-021002-00001	SEAL RING, CYLINDER HEAD COVER	1	
02	0800-021001	CYLINDER HEAD COVER	1	
03	0800-021102-10000	RUBBER WASHER	4	
04	0800-021103	CAP, RUBBER WASHER	4	
05	0800-021101-10001	BOLT, CYLINDER HEAD COVER	4	

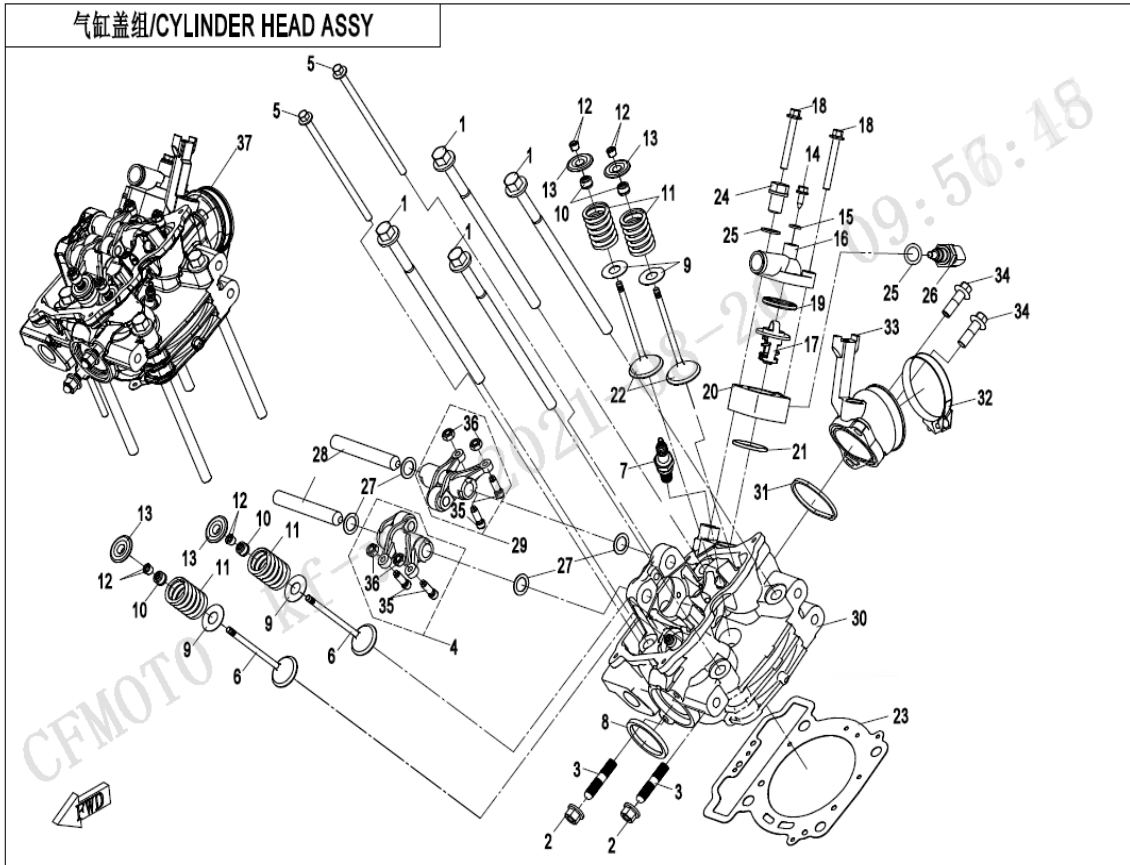


E02-2-A CYLINDER HEAD ASSY (WITHOUT FUEL VAPORIZATION SYSTEM)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0700-022014-10001	BOLT M10x176, CYLINDER HEAD	4	M10x176
02	8010-020001	NUT M8, MUFFLER JOINT	2	M8
03	0180-022003-00001	STUD M8x42	2	
04	0800-022600-20000	ROCKER ARM ASSY, AIR EXHAUST	1	
05	0GQ0-022001-00001	BOLT M6x120	2	M6x120
06	0800-022005	VALVE, EXHAUST	2	
07	0800-022800	SPARK PLUG	1	
08	0800-022300	BUSHING, EXHAUST PIPE	1	
09	0800-022008	LOWER SEAT, VALVE SPRING	4	
10	0010-022500-10000	SEAL RING, VALVE STEM	4	
11	0800-022006-10000	VALVE SPRING	4	
12	0800-022016	LOCK CLIP, VALVE	8	
13	0800-022007	UPPER SEAT, VALVE SPRING	4	
14	30132-550160030	SCREW ST5.5x16	1	ST5.5x16
15	0800-022011	WASHER 5.3x11x1.5	1	5.3x11x1.5
16	0800-022013-10000	THERMOSTAT CAP	1	
17	0800-022700	THERMOSTAT	1	
18	0180-013208-0010	BOLT M6x45	2	M6x45
19	0010-022802	SEAL RING	1	
20	0GR0-022003	SEAT, THERMOSTAT	1	
21	30502-028000N	O-RING	1	28x2.65
22	0800-022004	VALVE, INTAKE	2	
23	0800-022200-00002	GASKET, CYLINDER HEAD	1	
24	0800-022015-00001	SCREW PLUG M12x1.5	1	
25	0800-022014	WASHER 12.2x18x1.5	2	12.2x18x1.5
26	018B-022810	WATER TEMPERATURE SENSOR	1	
27	0800-022002	WASHER 12.3x18.5x0.5	4	12.3x18.5x0.5
28	0800-022001	ROCKER ARM SHAFT	2	
29	0800-022500-20000	ROCKER ARM ASSY, AIR INTAKE	1	
30	0JY0-022100-20000	CYLINDER HEAD	1	
31	080V-025002-1000	SEAL RING, MANIFOLD	1	
32	01A0-110005	CLAMP 57	1	
33	0GR0-022900	INJECTOR SEAT	1	
34	0130-011114-00001	BOLT	2	
35	0800-022510	ADJUST SCREW, VALVE CLEARANCE	4	
36	0800-022506	ADJUST NUT, VALVE CLEARANCE	4	
37	0GQ0-0220A0-10000	CYLINDER HEAD	1	

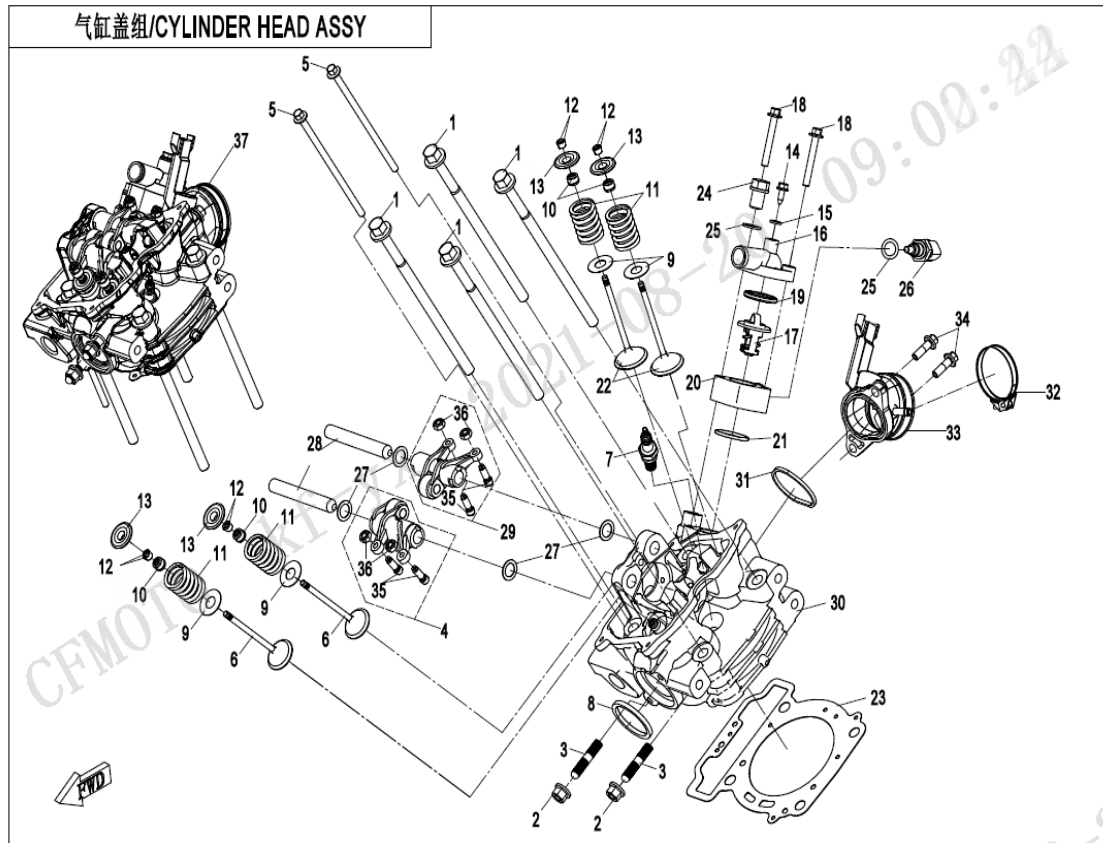

E02-2-B CYLINDER HEAD ASSY (WITH FUEL VAPORIZATION SYSTEM)


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0700-022014-10001	BOLT M10x176, CYLINDER HEAD	4	M10x176
02	8010-020001	NUT M8, MUFFLER JOINT	2	M8
03	0180-022003-00001	STUD M8x42	2	
04	0800-022600-20000	ROCKER ARM ASSY, AIR EXHAUST	1	
05	0GQ0-022001-00001	BOLT M6x120	2	M6x120
06	0800-022005	VALVE, EXHAUST	2	
07	0800-022800	SPARK PLUG	1	
08	0800-022300	BUSHING, EXHAUST PIPE	1	
09	0800-022008	LOWER SEAT, VALVE SPRING	4	
10	0010-022500-10000	SEAL RING, VALVE STEM	4	
11	0800-022006-10000	VALVE SPRING	4	
12	0800-022016	LOCK CLIP, VALVE	8	
13	0800-022007	UPPER SEAT, VALVE SPRING	4	
14	30132-550160030	SCREW ST5.5x16	1	ST5.5x16
15	0800-022011	WASHER 5.3x11x1.5	1	5.3x11x1.5
16	0800-022013-10000	THERMOSTAT CAP	1	
17	0800-022700	THERMOSTAT	1	
18	0180-013208-0010	BOLT M6x45	2	M6x45
19	0010-022802	SEAL RING	1	
20	0GR0-022003	SEAT, THERMOSTAT	1	
21	30502-028000N	O-RING	1	28x2.65
22	0800-022004	VALVE, INTAKE	2	
23	0800-022200-00002	GASKET, CYLINDER HEAD	1	
24	0800-022015-00001	SCREW PLUG M12x1.5	1	
25	0800-022014	WASHER 12.2x18x1.5	2	12.2x18x1.5
26	018B-022810	WATER TEMPERATURE SENSOR	1	
27	0800-022002	WASHER 12.3x18.5x0.5	4	12.3x18.5x0.5
28	0800-022001	ROCKER ARM SHAFT	2	
29	0800-022500-20000	ROCKER ARM ASSY, AIR INTAKE	1	
30	0JY0-022100-20000	CYLINDER HEAD	1	
31	080V-025002-1000	SEAL RING, MANIFOLD	1	
32	01A0-110005	CLAMP 57	1	
33	0GR0-022900-10000	FUEL INJECTOR SEAT	1	
34	0130-011114-00001	BOLT	2	
35	0800-022510	ADJUST SCREW, VALVE CLEARANCE	4	
36	0800-022506	ADJUST NUT, VALVE CLEARANCE	4	
37	0GQ0-0220B0-10000	CYLINDER HEAD	1	

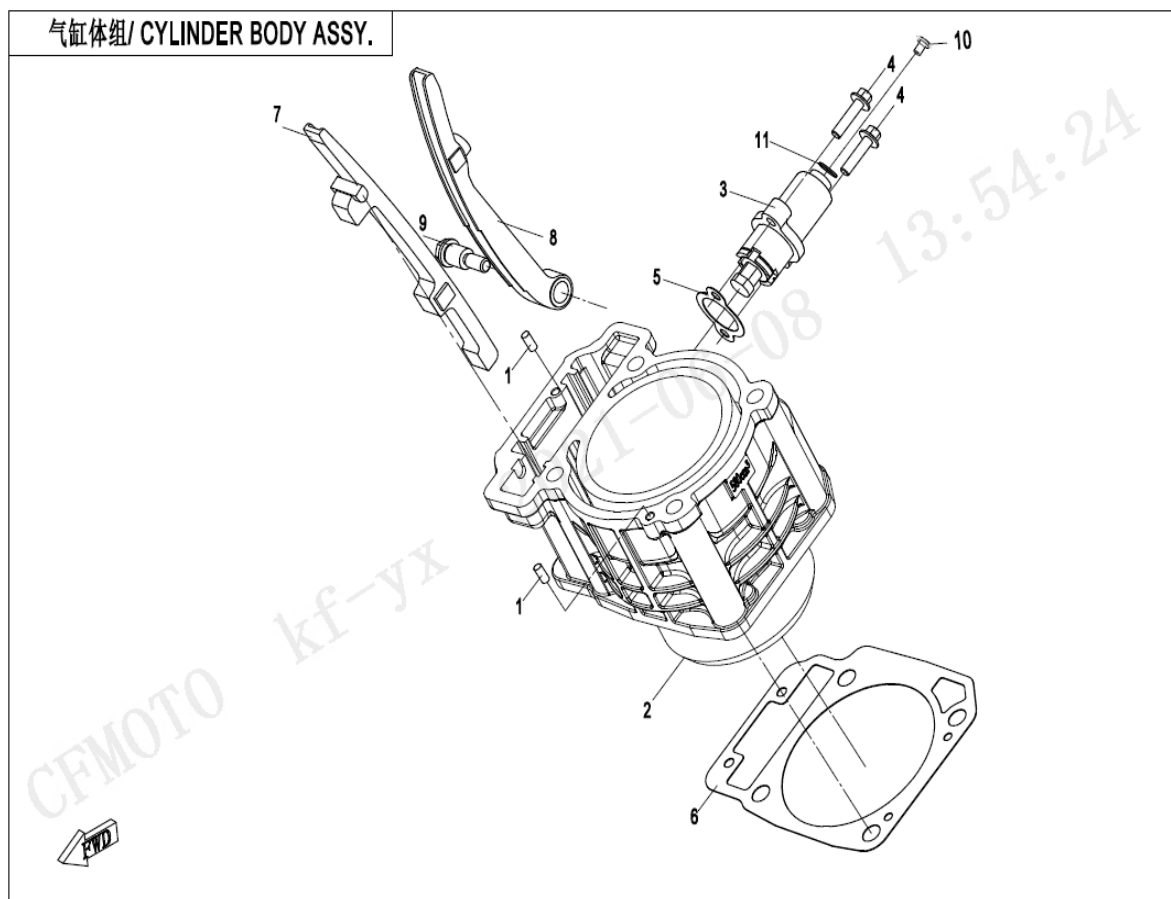

E02-3 CYLINDER BODY ASSY.

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	30406-00500	ROLLER NEEDLE P5x11.8	2	P5x11.8
02	0GQ0-023100-10010	CYLINDER BODY ASSY	1	GROUP 1
02	0GQ0-023100-10020	CYLINDER BODY ASSY	1	GROUP 2
03	0GS0-023200-00001	TENSIONER ASSY	1	
04	0010-021017-0010	BOLT M6x25	2	M6x25
05	0180-023003	GASKET, TENSIONER	1	
06	0GR0-023001	GASKET, CYLINDER BODY	1	
07	0GR0-023300	UPPERGUIDE, CHAIN	1	
08	0GR0-023200	TENSION PLATE	1	
09	0700-024008-00001	PIN SHAFT	1	
10	0JYA-023001-00001	HEX FLANGE BOLT M6x6	1	
11	0700-011202	O-SEAL RING 8.2x1.90	1	8.2x1.90


E02-4 凸轮轴组/ CAMSHAFT OF CYLINDER ASSY.

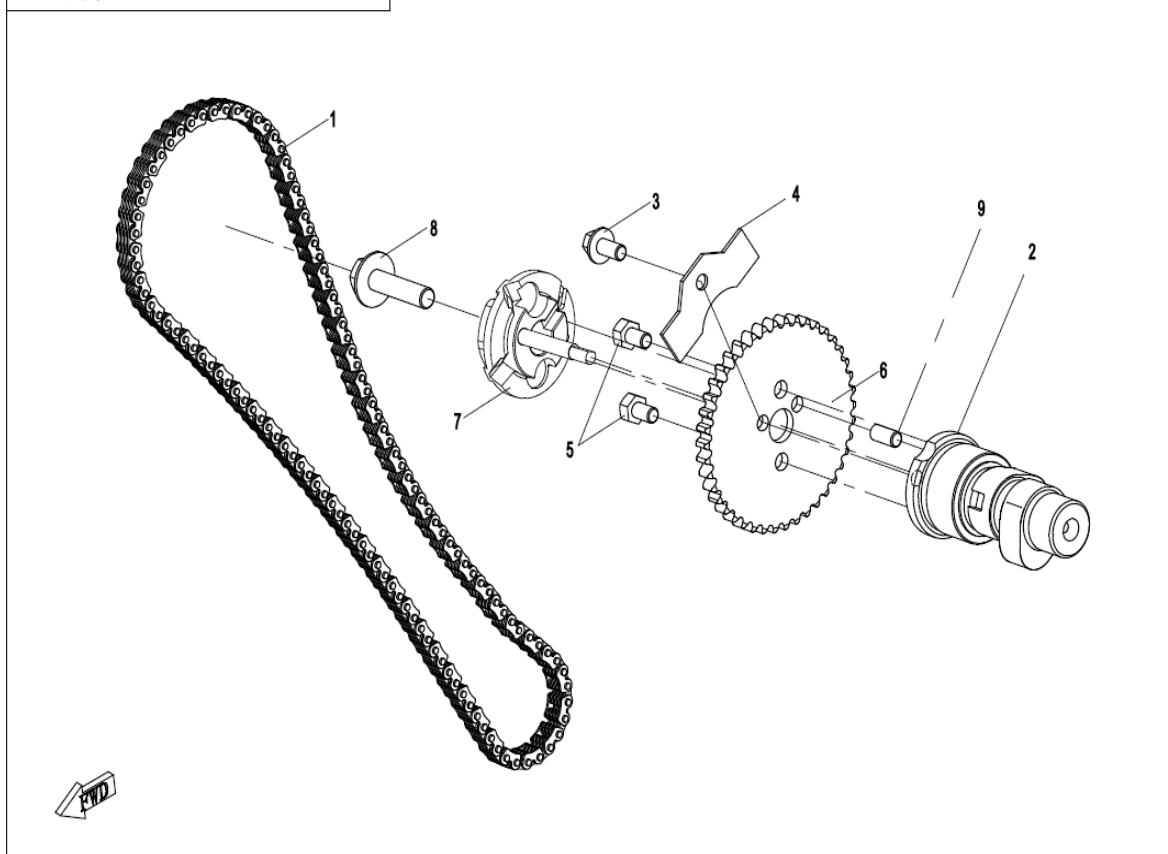

E02-4 CAMSHAFT OF CYLINDER ASSY

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0800-024100	TIMING CHAIN	1	
02	0GR0-024001-00002	CAMSHAFT	1	
03	0010-021019-0010	BOLT M6x12	1	M6x12
04	0800-024004-10000	HOLDING STRIP, CAMSHAFT	1	
05	30004-060010130	BOLT M6x10	2	M6x10
06	0GR0-024002	TIMING DRIVEN SPROCKET	1	
07	0GR0-024200-10000	STARTER DECOMPRESSOER	1	
08	0GR0-024003-00001	BOLT M8x32	1	M8x32
09	0800-024002	DOWEL PIN, SPROCKET	1	


E03-A 磁电机组/ MAGNETO ASSY.

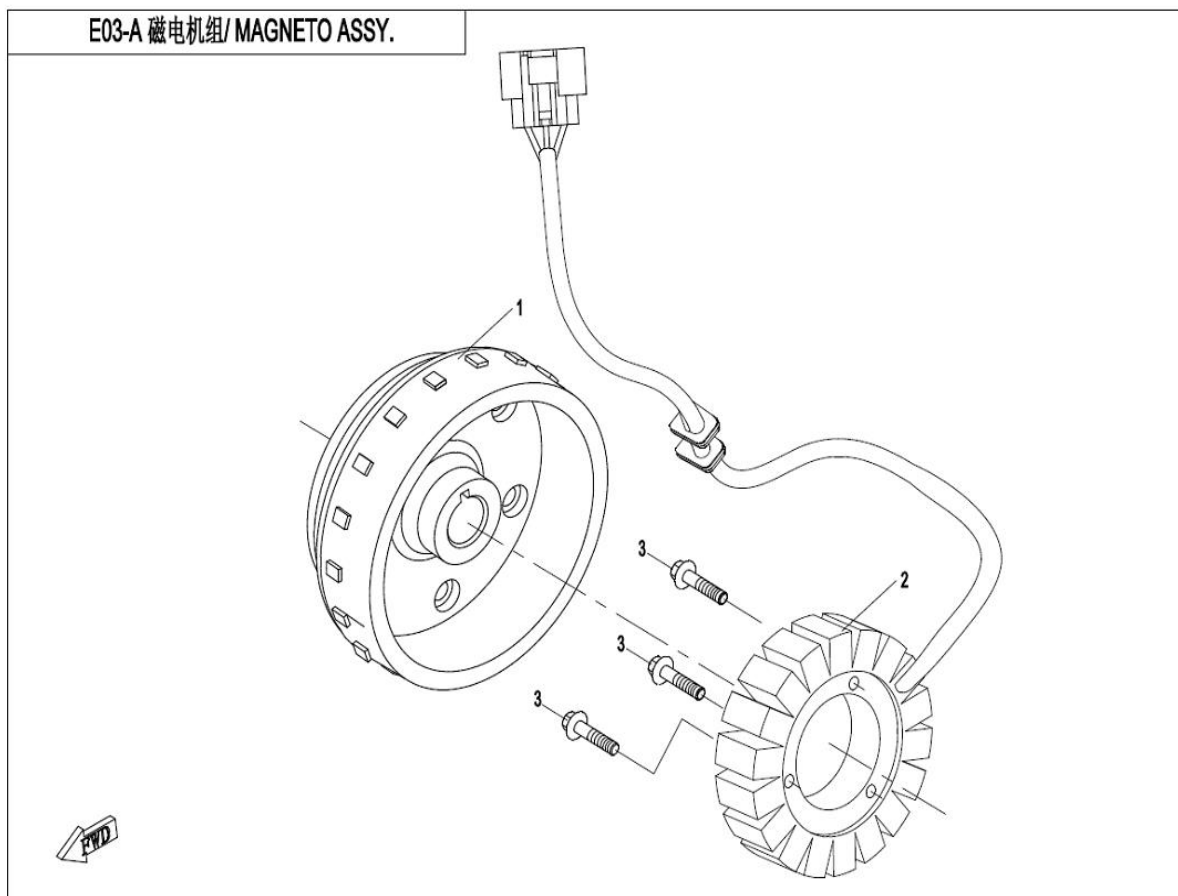

E03 MAGNETO STATOR ASSY


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0GR0-031000-1000	MAGNETO ROTOR	1	HIGH-POWER, PRODUCED BY LANG FANG KE SEN
02	0GQV-032000-1000	MAGNETO ROTOR ASSY	1	
02	0GRV-032000-1700	MAGNETO STATOR ASSY	1	
03	0180-030001-00001	SCREW M6x30	3	

E04 曲柄连杆活塞组/ CRANKSHAFT & CONNECTING ROD & PISTON ASSY.

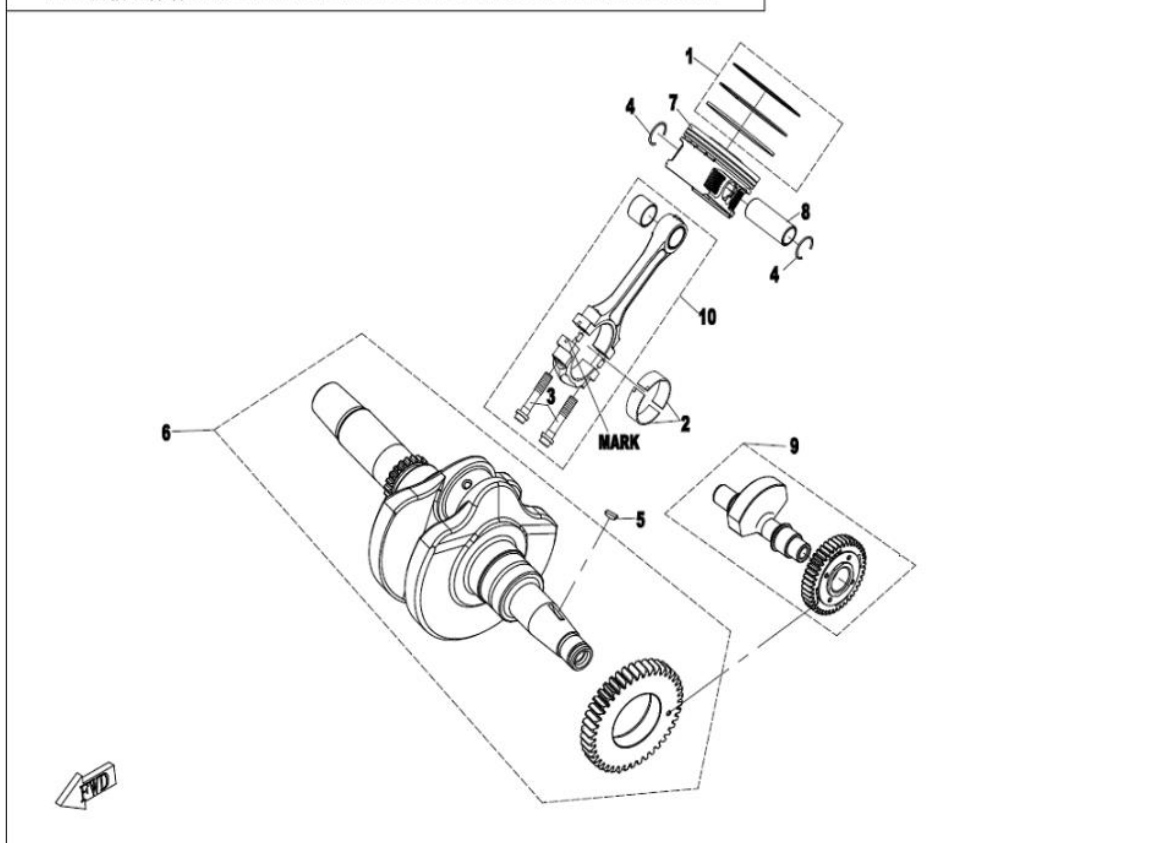

E04 CRANKSHAFT & CONNECTING ROD & PISTON ASSY.


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0JYA-0400B0	PISTON RING ASSY	1	SUPPLIERS:ATG
02	0800-040006-00032	PLAIN BEARING, CONNECTING ROD	2	YELLOW
02	0800-040006-00022	PLAIN BEARING, CONNECTING ROD	2	BLACK
02	0800-040006-00012	PLAIN BEARING, CONNECTING ROD	2	RED
03	0800-042004	BOLT, CONNECTING ROD	2	
04	0800-040005	CIRCLIP, PISTON PIN	2	
05	0180-040007	WOODRUFF KEY	1	
06	0GQ0-041100-00022	CRANKSHAFT ASSY	1	MARK B@MATCHED WITH MARK A BALANCER SHAFT ASSY
06	0GQ0-041100-00012	CRANKSHAFT ASSY	1	MARK A@MATCHED WITH MARK B BALANCER SHAFT ASSY
07	0800-040001-20022	PISTON	1	MARK 2
07	0800-040001-20012	PISTON	1	MARK1
08	0800-040002	PISTON PIN	1	
09	0GQ0-160000-00021	BALANCER SHAFT ASSY	1	MARK B@MATCHED WITH MARK A CRANKSHAFT ASSY
09	0GQ0-160000-00011	BALANCER SHAFT ASSY	1	MARK A@MATCHED WITH MARK B CRANKSHAFT ASSY
10	0800-042000-00011	CONNECTING ROD ASSY	1	MARK 1
10	0800-042000-00021	CONNECTING ROD ASSY	1	MARK 2

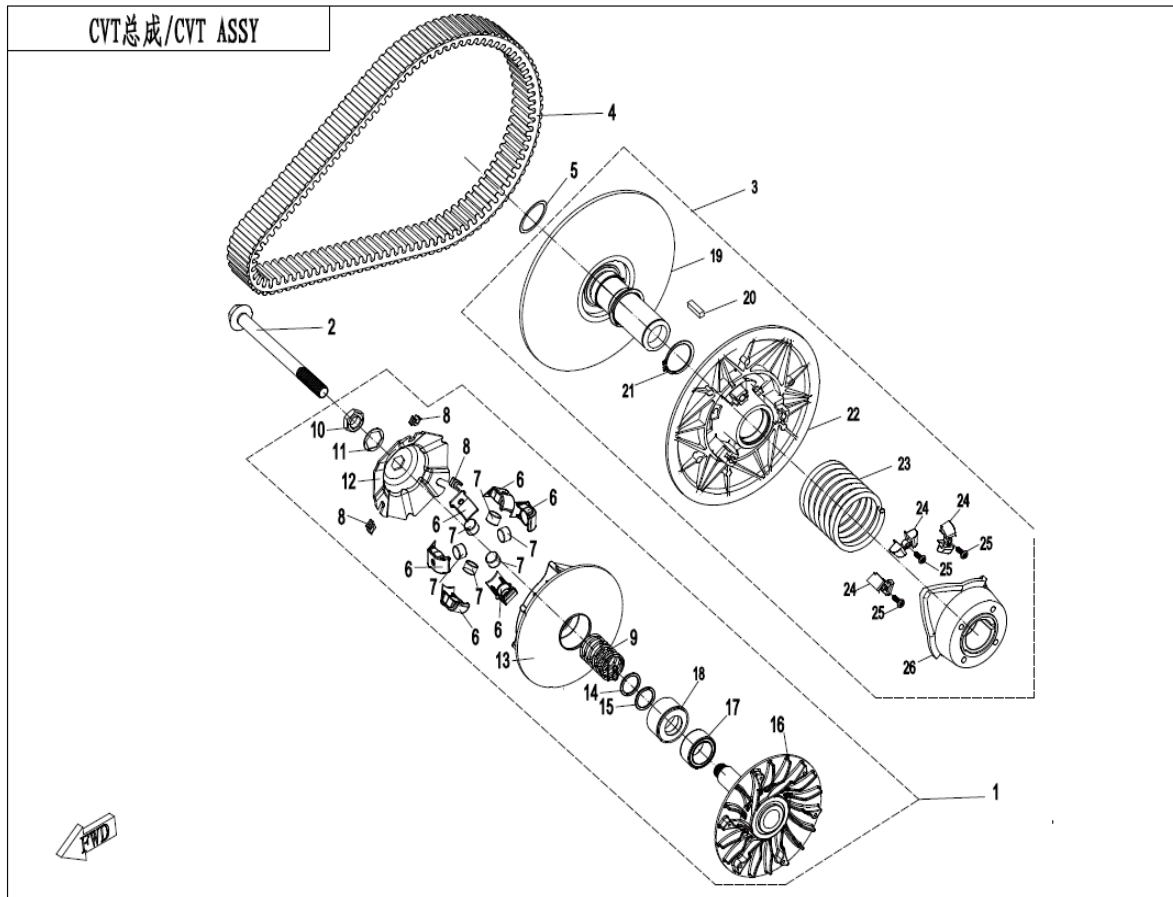

E05 CLUTCH & CVT ASSY.(18g WEIGHT ROLLER)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	OGRB-051000-10070	DRIVE PULLEY ASSY	1	18g WEIGHT ROLLER
02	OJY0-050001-00001	BOLT, DRIVE PULLEY	1	
03	OGR0-052000	DRIVEN PULLEY	1	
04	0180-055000-0003	DRIVE BELT	1	BANDO
04	0180-055000-0004	DRIVE BELT	1	MITSUBOSHI
05	OGR0-050001-00001	ADJUSTING WASHER	1	
06	OGR0-051005	NYLON PROTECTOR, WEIGHT ROLLER	6	CVtech
07	OGR0-051004-50000	WEIGHT ROLLER	6	18g
08	OGR0-051006	NYLON SLIDER	3	
09	OGR0-051003-40000	SPRING, DRIVE PULLEY	1	
10	OJYA-051013-10001	NUT, DRIVE PULLEY	1	
11	OGR0-051007	HEXAGONAL BORE WASHER	1	
12	OGR0-051002-00001	RAMP PLATE	1	
13	OGR0-051100	PRIMARY LOOSE PULLEY ASSY	1	
14	OGR0-051011	STEEL WASHER	1	CVtech
15	OGR0-051009-10000	NYLON WASHER	1	
16	OGR0-051200-10011	PRIMARY TIGHT PULLEY ASSY	1	
17	OGR0-051300	OVERRIDING CLUTCH	1	
18	OGR0-051001	SPRING SEAT	1	CVtech
19	OGR0-052100	DRIVEN FIXED PULLEY ASSY	1	CVtech
20	OGR0-052003	TAPER KEY	1	CVtech
21	OGR0-052004	CIRCLIP	1	CVtech
22	OGR0-052200	DRIVEN SLIDING PULLEY ASSY	1	
23	OGR0-052001	SPRING, DRIVEN PULLEY	1	CVtech
24	OGR0-052005	NYLON BLOCK	3	CVtech
25	OGR0-052006	SCREW	3	CVtech
26	OGR0-052002	CAM PLATE	1	CVtech


E06-1 换档变速总成(1)/TRANSMISSION SYSTEM(1)

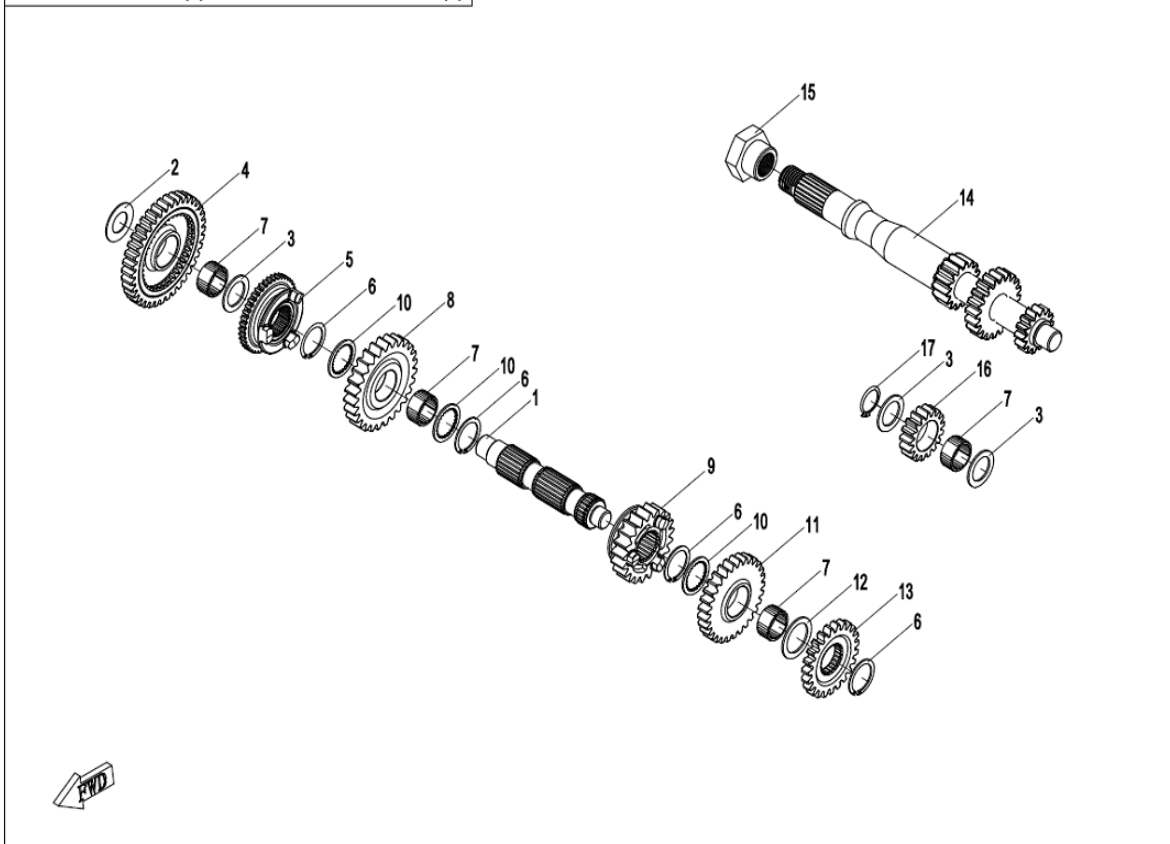

E06-1 TRANSMISSION SYSTEM (1)

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0GR0-061001	SECONDARY SHAFT, DRIVE	1	
02	0800-061002	WASHER 17.5x32x1	1	17.5x32x1
03	0180-061012	GASKET 20.5x30x1.5	3	20.5x30x1.5
04	0GR0-061200	DRIVEN GEAR, LOW RANGE	1	
05	0GR0-061006-10000	SLIDE GEAR	1	
06	0180-061007-0050	CIRCLIP 25	4	25
07	0GR0-060100	NEEDLE BEARING 20x25x12	4	20X25X12
08	0GR0-061005	GEAR, HIGHRANGE	1	
09	0GR0-061004-00001	OUTPUT DRIVE GEAR	1	
10	0GR0-061008	WASHER	3	
11	0GR0-061003	GEAR, REVERSE	1	
12	0GR0-061009-00001	WASHER 25x34x1.5	1	25x34x1.5
13	0GR0-061002	GEAR, PARKING	1	
14	0GR0-060001	MAIN SHAFT	1	
15	0JY0-060001-00002	NUT, MAIN DRIVE SHAFT	1	
16	0GR0-060002	REVERSE GEAR	1	
17	30801-02005	CIRCLIPS FOR SHAFT 20	1	20


E06-2 换挡变速总成(2)/TRANSMISSION SYSTEM(2)

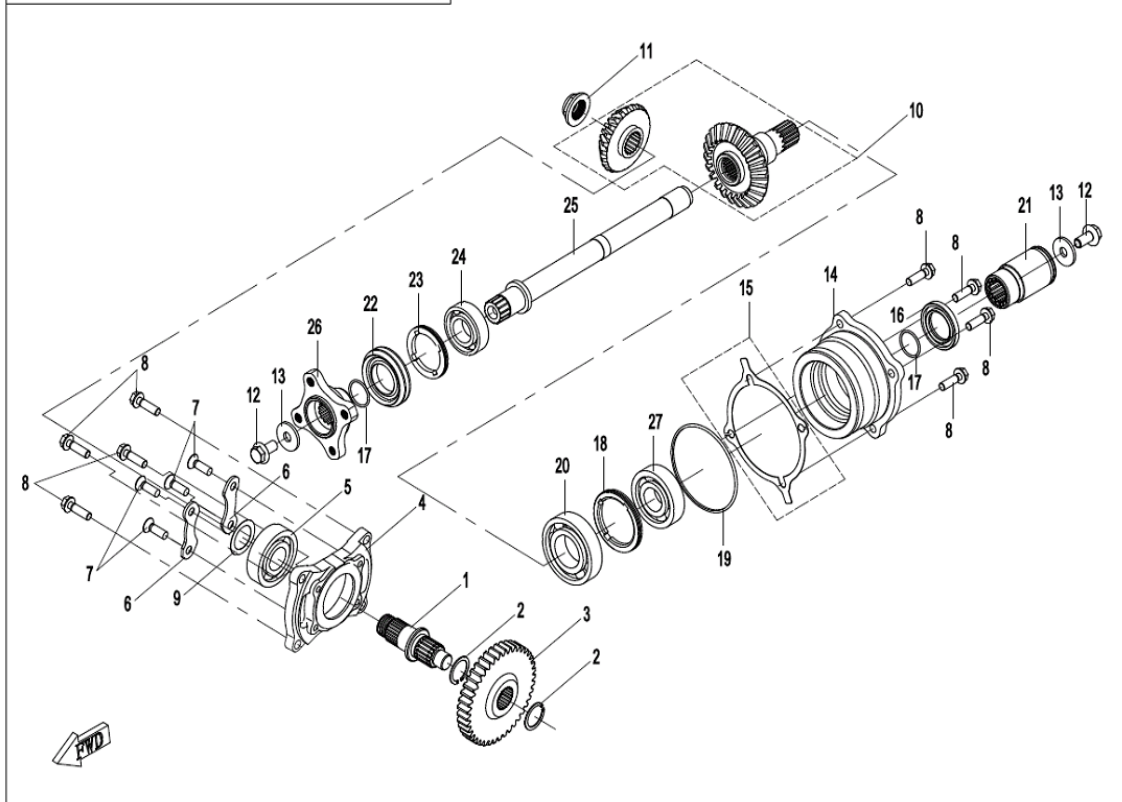

E06-2 TRANSMISSION SYSTEM(2)


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0180-062101	DRIVE BEVEL GEAR SHAFT	1	
02	0180-061007-0050	CIRCLIP 25	2	25
03	0180-062102-00001	OUTPUT DRIVEN GEAR	1	
04	0180-062103-10000	BEARING SEAT, DRIVE BEVEL GEAR	1	
05	30499-02501	BEARING	1	25
06	0180-062104-0010	LIMITATOR, BEARING	2	
07	30124-080025810	SCREW M8x25	4	M8x25
08	0JYA-062104	BOLT M8x28	8	M8x28
09	0180-062105-0004	ADJUSTING WASHER, DRIVE SHAFT GEAR	1	t=0.35
09	0180-062105-0003	ADJUSTING WASHER, DRIVE SHAFT GEAR	1	t=0.3
09	0180-062105-0002	ADJUSTING GASKET, DRIVE BEVEL GEAR T=0.25	1	T=0.25
09	0180-062105-0001	ADJUSTING GASKET, DRIVE BEVEL GEAR T=0.2	1	T=0.2
09	0180-062105	ADJUSTING GASKET, DRIVE BEVEL GEAR T=0.15	1	T=0.15
10	0GR0-0622A0-10001	BEVEL GEAR ASSY	1	
11	0180-062107-00001	LOCK NUT, BEVEL GEAR	1	
12	0JWA-060002-00001	LOCK NUT, BEVEL GEAR	2	
13	0GR0-062204	WASHER 10x27.5x4	2	10x27.5x4
14	0800-062202-10001	DRIVEN BEVEL GEAR BEARING SEAT	1	
15	0800-062203-0004	ADJUSTING GASKET, DRIVEN BEVEL GEAR T=0.5	1	T=0.5
15	0800-062203-0003	ADJUSTING GASKET, DRIVEN BEVEL GEAR T=0.4	1	T=0.4
15	0800-062203-0002	ADJUSTING GASKET, DRIVEN BEVEL GEAR T=0.3	1	T=0.3
15	0800-062203-0001	ADJUSTING GASKET, DRIVEN BEVEL GEAR T=0.2	1	T=0.2
15	0800-062203	ADJUSTING GASKET, DRIVEN BEVEL GEAR T=0.1	1	T=0.1
16	0800-062204	OIL SEAL 35x50x7	1	35x50x7
17	0800-062205	O-SEAL RING 25x2	2	25x2
18	0800-062206	STOPPER NUT, BEARING	1	
19	0180-062205	O-SEAL RING 88x2.5	1	88x2.5
20	30400-03500	BEARING	1	35
21	9CR6-300201-10000	DRIVE SLEEVE, ENGINE	1	
22	0JWA-062302	OIL SEAL 35x61x9(14)	1	35x61x9
23	0180-060008	BEARING RETAINER, FRONT OUTPUT SHAFT	1	
24	30400-02501	BEARING	1	25
25	0GR0-062301-10001	FRONT OUTPUT SHAFT ASSY	1	
26	0GR0-060003	COUPLER	1	
27	30400-02502	BEARING	1	CHINA

E06-3 换挡变速总成(3)/TRANSMISSION SYSTEM(3)

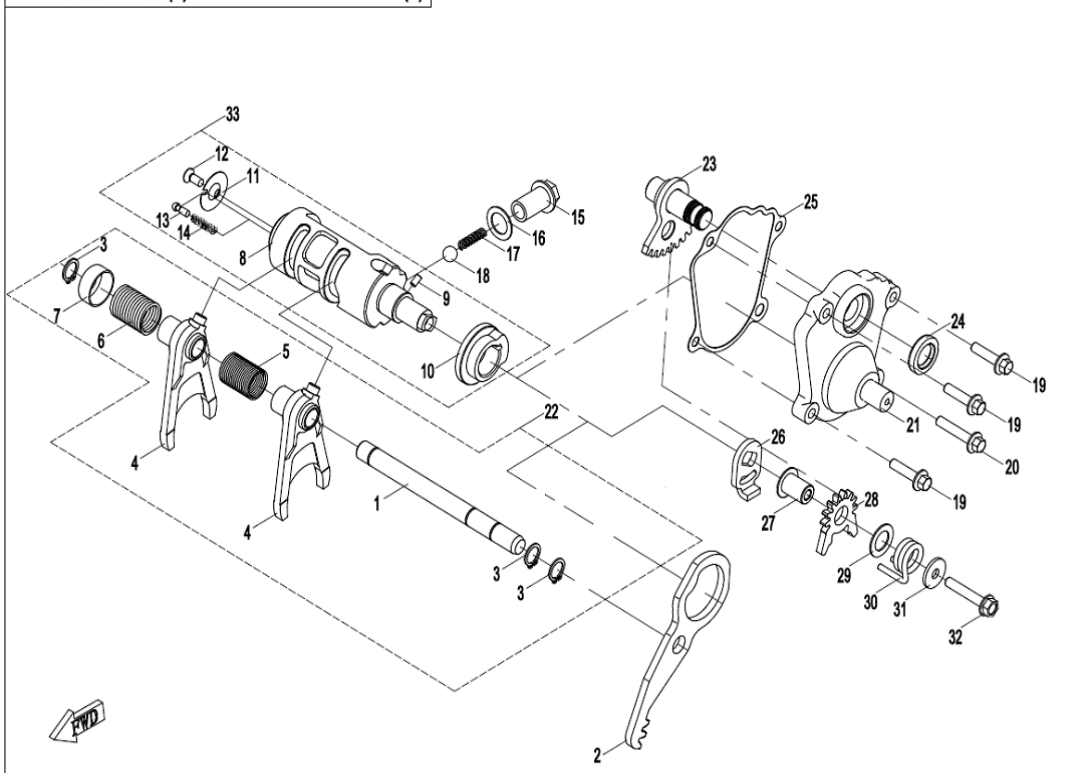

E06-3 TRANSMISSION SYSTEM (3)


Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0800-063002	SHAFT, SHIFT FORK	1	
02	0GR0-063002-00001	SWING ARM, PARKING	1	
03	30801-01205	CIRCLIPS FOR SHAFT12	3	12
04	0GR0-063001	SHIFT FORK	2	
05	0180-063003-0050	FORK SPRING, THIN	1	
06	0180-063005-0050	FORK SPRING, THICK	1	
07	0180-063006-0010	SPRING SEAT	1	
08	0GR0-064001	SHIFT DRUM	1	
09	0800-064002	PIN SHAFT	1	
10	0GR0-064002	CAM, PARKING	1	
11	0180-064001-0010	LIMIT GASKET	1	
12	0180-064002-00001	LOCK SCREW T25	1	
13	0180-064003-0050	GEAR CONTACTOR	1	
14	0180-064004-0050	SPRING, GEAR CONTACTOR	1	
15	0180-068001-00100	HOLLOW BOLT M14x1.5	1	M14x1.5
16	0180-068002	GASKET 14.4x22x1	1	14.4x22x1
17	0180-068003-0050	SPRING, LIMIT	1	
18	3120003	STEEL BALL3/8	1	3/8"
19	0010-021017-0010	BOLT M6x25	3	M6x25
20	0010-080012-0010	BOLT M6x32	1	M6x32
21	0800-065001-20000	GEARSHIFT COVER	1	
22	0GR0-0630A0	SHIFT FORK ASSY	1	
23	0180-065100-10002	DRIVE SECTOR GEAR	1	
24	0180-065002	OIL SEAL SD15x25x5	1	SD15x25x5
25	0GR0-065003	METAL GASKET, SECTOR GEAR	1	
26	0180-065201-0010	WASHER, DRIVEN SECTOR GEAR	1	
27	0180-065202-0050	SHAFT, DRIVEN SECTOR GEAR	1	
28	0180-065203	DRIVEN SECTOR GEAR	1	
29	0180-065204-0050	GASKET 13.5x22x1	1	13.5x22x1
30	0180-065205-0010	DRIVE SPRING, DRIVEN SECTOR GEAR	1	
31	0180-065206-00001	WASHER 6.2x22x2	1	
32	0010-013008-0010	BOLT M6x35	1	M6x35
33	0GR0-064000	SHIFT DRUM ASSY	1	

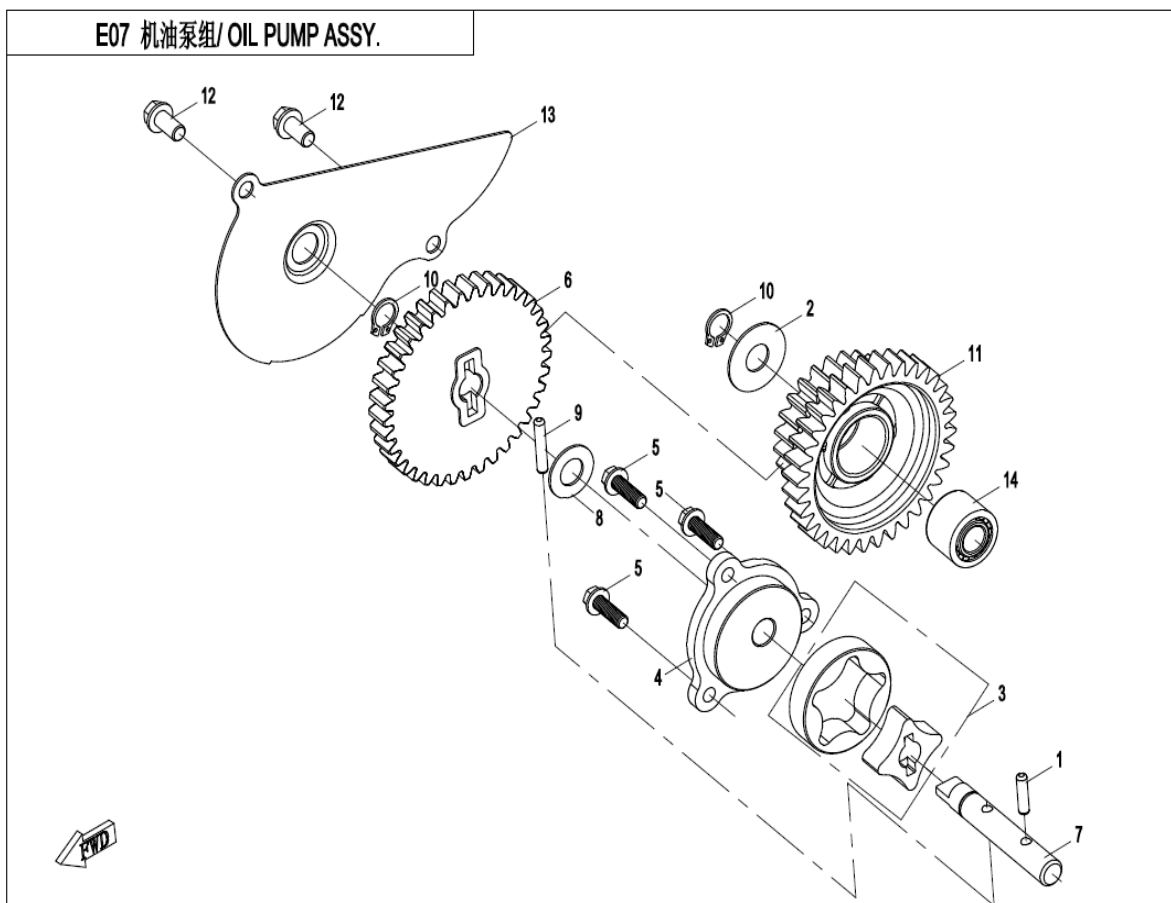

E07 OIL PUMP ASSY

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	30406-00400	ROLLER NEEDLE P4x15.8	1	P4x15.8
02	0A80-050004	WASHER	1	
03	0GR0-0700A0	ROTOR ASSY, OIL PUMP	1	
04	0800-070003	COVER, OIL PUMP	1	
05	0010-030002-00001	BOLT	3	
06	0GR0-070004	DRIVE GEAR, OIL PUMP	1	
07	0GR0-070003	SHAFT, OIL PUMP	1	
08	0800-011005	WASHER 10	1	10
09	30406-00402	ROLLER NEEDLE P4x21.8	1	P4x21.8
10	30801-01005	CIRCLIPS FOR SHAFT10	2	10
11	0GR0-070005	DUAL GEAR, OIL PUMP	1	
12	0010-021019-0010	BOLT M6x12	2	M6x12
13	0GR0-070006	OIL GUARD	1	
14	0GR0-070100	NEEDLE BEARING 10x22x16	1	10X22X16


E08 水泵组/ WATER PUMP ASSY

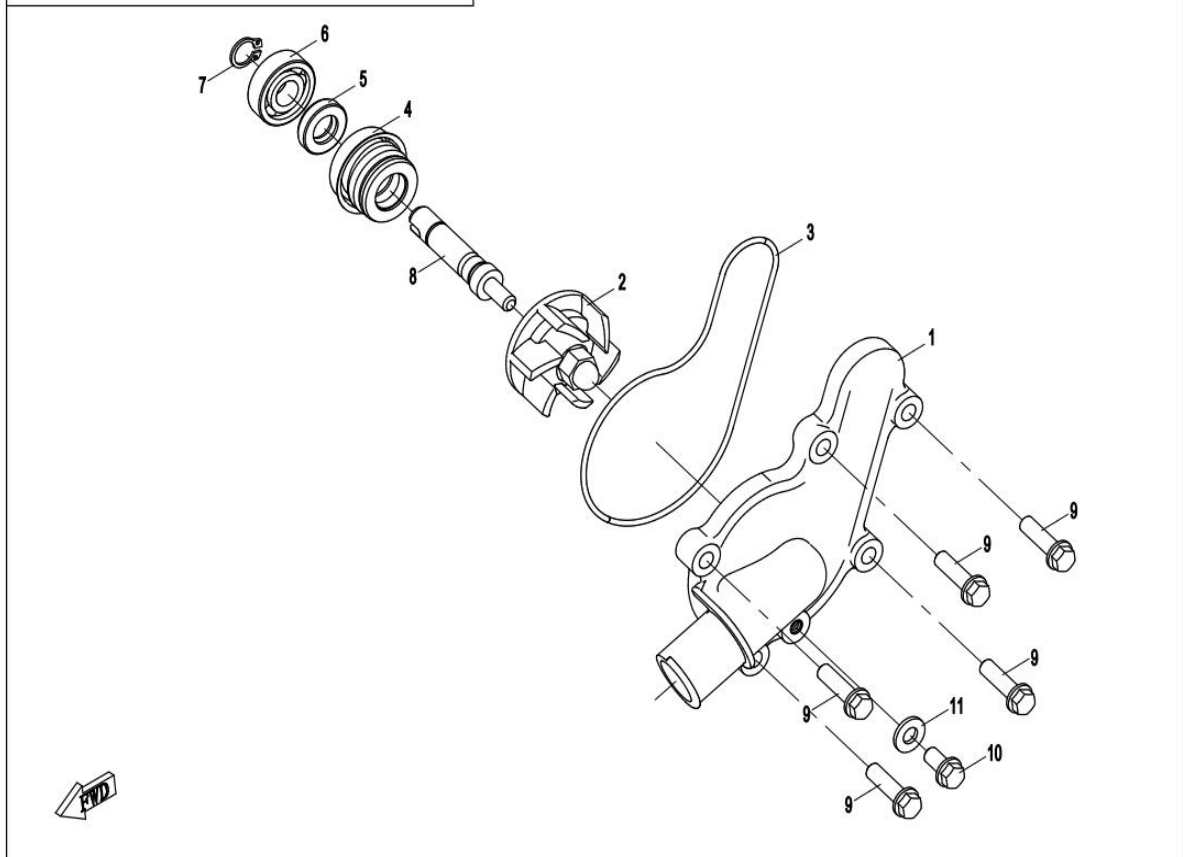

E08 WATER PUMP ASSY

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0GRV-080001-6100	WATER PUMP COVER	1	
02	0180-081001-00001	IMPELLER, WATER PUMP.	1	
03	0GR0-080002	SEAL RING, WATER PUMP	1	
04	0700-081200	WATER SEAL ASSY	1	
05	0110-080005	OIL SEAL 10x20x5	1	10x20x5
06	30400-01000	BEARING	1	6000
07	30801-01005	CIRCLIPS FOR SHAFT10	1	10
08	0180-081004-0050	WATER PUMP SHAFT	1	
09	0010-080013-0010	BOLT M6x22	5	M6x22
10	0010-021019-0010	BOLT M6x12	1	M6x12
11	0010-060009	WASHER 6	1	6


E09 启动系统/STARTING SYSTEM

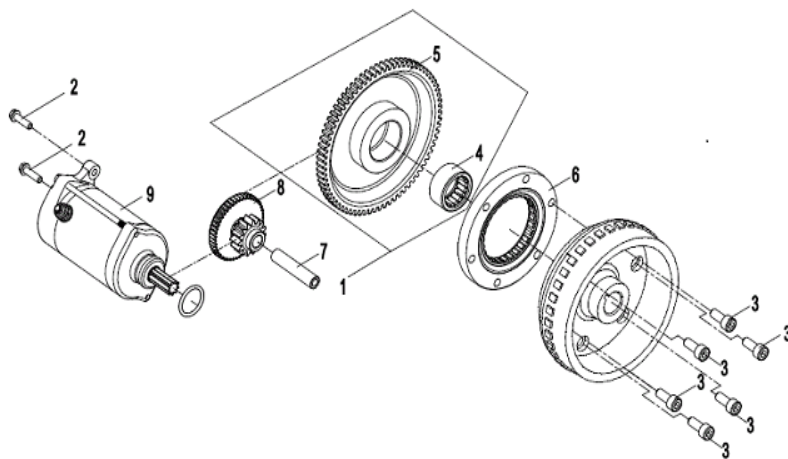

E09 STATERING SYSTEM

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0180-0910A0-00001	DRIVEN GEAR ASSY	1	
02	0010-080013-0010	BOLT M6x22	2	M6x22
03	30102-080020810	SCREW M8x20	6	M8x20
04	30401-02800	NEEDLE BEARING	1	
05	0180-091001-00001	DRIVEN GEAR	1	
06	0180-091200	OVERRIDING CLUTCH	1	
07	0180-091006	AXLE, DUAL GEAR	1	
08	0GR0-091002	STARTER DUAL GEAR	1	
09	0GSV-093000-1100	START MOTOR	1	


发动机垫片系列 ENGINE GASKET SET

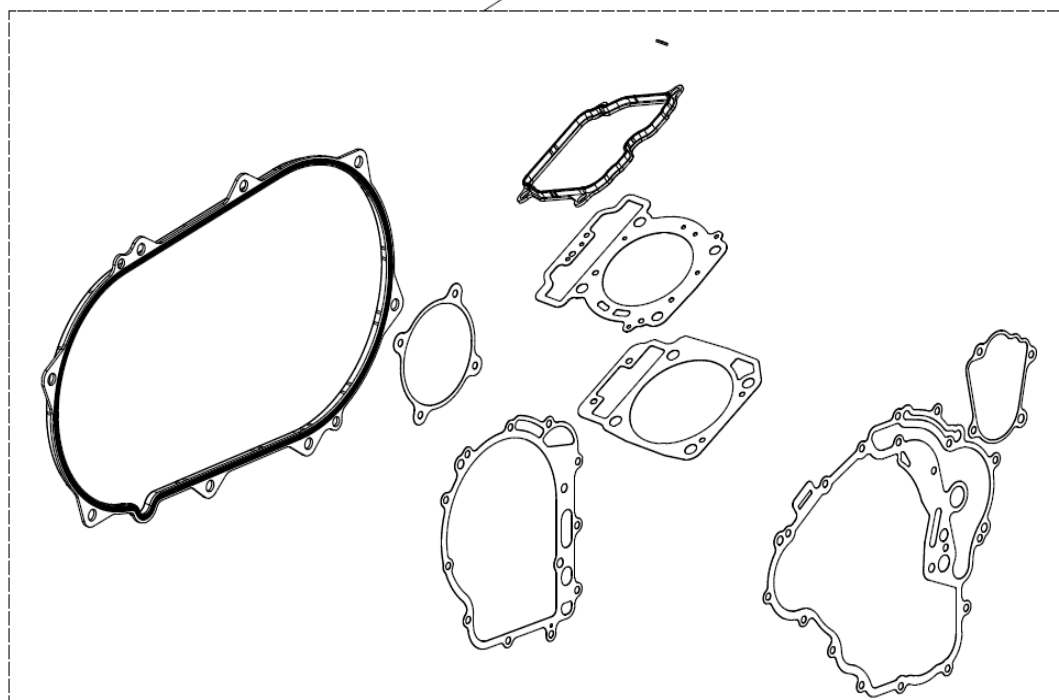

E29 ENGINE GASKET KIT

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	0GS0-0000A0-00001	GASKET KIT, ENGINE	1	

发动机油封及O型圈/ ENGINE OIL SEAL&O-RING

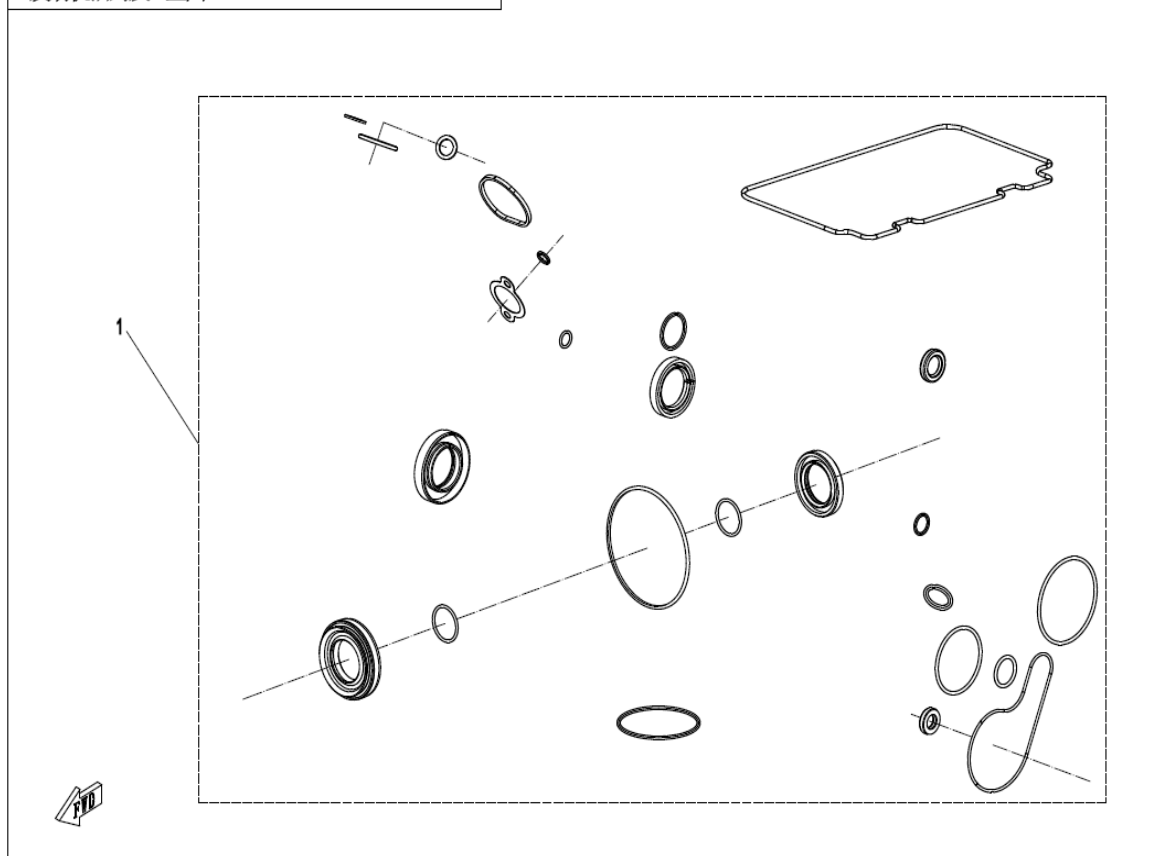

E30 ENGINE OIL SEAL &O-RING

Item No.	Parts Number	Parts Name(EN)	Qty	Specification
01	OGS0-0000A1	OIL SEAL & O-SEAL RING KIT, ENGINE	1	